


# Cinterion<sup>®</sup> EHS5-E/EHS5-US

Hardware Interface Description

Version: 04.003a

DocId: EHS5\_HID\_v04.003a

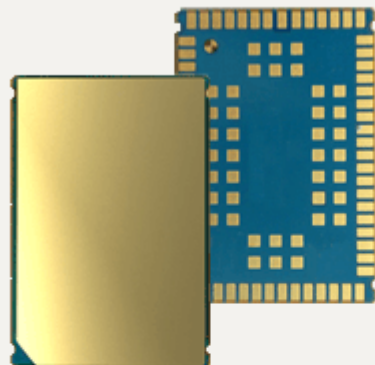

Document Name: **Cinterion® EHS5-E/EHS5-US Hardware Interface Description**

Version: **04.003a**

Date: **2020-05-13**

DocId: **EHS5\_HID\_v04.003a**

Status **Public / Released**

#### **GENERAL NOTE**

THIS DOCUMENT CONTAINS INFORMATION ON THALES DIS AIS DEUTSCHLAND GMBH ("THALES") PRODUCTS. THALES RESERVES THE RIGHT TO MAKE CHANGES TO THE PRODUCTS DESCRIBED HEREIN. THE SPECIFICATIONS IN THIS DOCUMENT ARE SUBJECT TO CHANGE AT THE DISCRETION OF THALES. THE PRODUCT AND THIS DOCUMENT ARE PROVIDED ON AN "AS IS" BASIS ONLY AND MAY CONTAIN DEFICIENCIES OR INADEQUACIES. THALES DOES NOT ASSUME ANY LIABILITY FOR INFORMATION PROVIDED IN THE DOCUMENT OR ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT DESCRIBED HEREIN.

THALES GRANTS A NON-EXCLUSIVE RIGHT TO USE THE DOCUMENT. THE RECIPIENT SHALL NOT COPY, MODIFY, DISCLOSE OR REPRODUCE THE DOCUMENT EXCEPT AS SPECIFICALLY AUTHORIZED BY THALES.

Copyright © 2020, THALES DIS AIS Deutschland GmbH

#### **Trademark Notice**

Thales, the Thales logo, are trademarks and service marks of Thales and are registered in certain countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other registered trademarks or trademarks mentioned in this document are property of their respective owners.

## Contents

<b>1</b>	<b>Introduction .....</b>	<b>9</b>
1.1	Key Features at a Glance .....	9
1.2	EHS5-E/EHS5-US System Overview .....	12
1.3	Circuit Concept .....	13
<b>2</b>	<b>Interface Characteristics .....</b>	<b>15</b>
2.1	Application Interface .....	15
2.1.1	Pad Assignment.....	15
2.1.2	Signal Properties.....	17
2.1.2.1	Absolute Maximum Ratings .....	23
2.1.3	USB Interface.....	24
2.1.3.1	Reducing Power Consumption.....	25
2.1.4	Serial Interface ASC0 .....	26
2.1.5	Serial Interface ASC1 .....	28
2.1.6	UICC/SIM/USIM Interface .....	30
2.1.6.1	Enhanced ESD Protection for SIM Interface.....	32
2.1.7	Digital Audio Interface.....	33
2.1.7.1	Pulse Code Modulation Interface (PCM).....	34
2.1.7.2	Inter IC Sound Interface .....	36
2.1.7.3	Solutions for the Digital Audio Interface (DAI/PCM).....	37
2.1.8	RTC Backup.....	38
2.1.9	GPIO Interface .....	39
2.1.10	I <sup>2</sup> C Interface .....	41
2.1.11	SPI Interface .....	43
2.1.12	PWM Interfaces .....	44
2.1.13	Pulse Counter .....	44
2.1.14	Control Signals.....	44
2.1.14.1	Status LED .....	44
2.1.14.2	Power Indication Circuit .....	45
2.1.14.3	Host Wakeup.....	45
2.1.14.4	Fast Shutdown .....	46
2.2	RF Antenna Interface .....	47
2.2.1	Antenna Interface Specifications .....	47
2.2.2	Antenna Installation .....	51
2.2.3	RF Line Routing Design.....	52
2.2.3.1	Line Arrangement Examples .....	52
2.2.3.2	Routing Example.....	57
2.3	Sample Application .....	58
2.3.1	Sample Level Conversion Circuit.....	60

<b>3</b>	<b>Operating Characteristics .....</b>	<b>61</b>
3.1	Operating Modes .....	61
3.2	Power Up/Power Down Scenarios .....	62
3.2.1	Turn on EHS5-E/EHS5-US .....	62
3.2.1.1	Connecting EHS5-E/EHS5-US BATT+ Lines .....	62
3.2.1.2	Switch on EHS5-E/EHS5-US Using AUTO_ON Signal.....	64
3.2.1.3	Switch on EHS5-E/EHS5-US Using a Continuous AUTO_ON Signal66	
3.2.1.4	Switch on EHS5-E/EHS5-US Using ON Signal .....	67
3.2.2	Restart EHS5-E/EHS5-US .....	68
3.2.2.1	Restart EHS5-E/EHS5-US via AT+CFUN Command.....	68
3.2.2.2	Restart EHS5-E/EHS5-US Using EMERG_RST.....	69
3.2.3	Signal States after First Startup .....	70
3.2.4	Turn off EHS5-E/EHS5-US .....	71
3.2.4.1	Switch off EHS5-E/EHS5-US Using AT Command .....	71
3.2.5	Automatic Shutdown .....	72
3.2.5.1	Thermal Shutdown .....	72
3.2.5.2	Undervoltage Shutdown .....	73
3.2.5.3	Overvoltage Shutdown .....	73
3.3	Automatic GPRS Multislot Class Change .....	74
3.4	Power Saving .....	75
3.4.1	Power Saving while Attached to GSM Networks .....	75
3.4.2	Power Saving while Attached to WCDMA Networks .....	76
3.4.3	Wake-up via RTS0 .....	77
3.5	Power Supply .....	78
3.5.1	Power Supply Ratings.....	79
3.5.2	Minimizing Power Losses .....	82
3.5.3	Measuring the Supply Voltage (VBATT+).....	82
3.5.4	Monitoring Power Supply by AT Command .....	82
3.6	Operating Temperatures .....	83
3.7	Electrostatic Discharge .....	84
3.7.1	ESD Protection for Antenna Interface .....	84
3.8	Blocking against RF on Interface Lines .....	85
3.9	Reliability Characteristics .....	87

---

<b>4</b>	<b>Mechanical Dimensions, Mounting and Packaging.....</b>	<b>88</b>
4.1	Mechanical Dimensions of EHS5-E/EHS5-US .....	88
4.2	Mounting EHS5-E/EHS5-US onto the Application Platform.....	90
4.2.1	SMT PCB Assembly .....	90
4.2.1.1	Land Pattern and Stencil.....	90
4.2.1.2	Board Level Characterization.....	92
4.2.2	Moisture Sensitivity Level .....	92
4.2.3	Soldering Conditions and Temperature .....	93
4.2.3.1	Reflow Profile .....	93
4.2.3.2	Maximum Temperature and Duration .....	94
4.2.4	Durability and Mechanical Handling.....	95
4.2.4.1	Storage Conditions.....	95
4.2.4.2	Processing Life.....	96
4.2.4.3	Baking .....	96
4.2.4.4	Electrostatic Discharge .....	96
4.3	Packaging .....	97
4.3.1	Tape and Reel .....	97
4.3.1.1	Orientation.....	97
4.3.1.2	Barcode Label .....	98
4.3.2	Shipping Materials .....	99
4.3.2.1	Moisture Barrier Bag .....	99
4.3.2.2	Transportation Box .....	101
4.3.3	Trays .....	102
<b>5</b>	<b>Regulatory and Type Approval Information .....</b>	<b>104</b>
5.1	Directives and Standards.....	104
5.2	SAR requirements specific to portable mobiles .....	107
5.3	Reference Equipment for Type Approval.....	108
5.4	Compliance with FCC and ISED Rules and Regulations.....	109
<b>6</b>	<b>Document Information.....</b>	<b>111</b>
6.1	Revision History .....	111
6.2	Related Documents .....	115
6.3	Terms and Abbreviations .....	115
6.4	Safety Precaution Notes .....	119
<b>7</b>	<b>Appendix.....</b>	<b>120</b>
7.1	List of Parts and Accessories.....	120

## Tables

Table 1:	Pad assignments.....	16
Table 2:	Signal properties .....	17
Table 3:	Absolute maximum ratings.....	23
Table 4:	Signals of the SIM interface (SMT application interface) .....	30
Table 5:	Overview of DAI/PCM lines.....	34
Table 6:	Overview of DAI/I2S lines .....	36
Table 7:	GPIO lines and possible alternative assignment.....	39
Table 8:	Host wakeup line.....	45
Table 9:	Return loss in the active band.....	47
Table 10:	RF Antenna interface GSM / UMTS.....	47
Table 11:	Overview of operating modes .....	61
Table 12:	Signal states.....	70
Table 13:	Temperature dependent behavior.....	72
Table 14:	Voltage supply ratings.....	79
Table 15:	Current consumption ratings.....	79
Table 16:	Board temperature .....	83
Table 17:	Electrostatic values .....	84
Table 18:	EMI measures on the application interface .....	86
Table 19:	Summary of reliability test conditions.....	87
Table 20:	Reflow temperature ratings .....	93
Table 21:	Storage conditions .....	95
Table 22:	Directives .....	104
Table 23:	Standards of North American type approval .....	104
Table 24:	Standards of European type approval.....	104
Table 25:	Requirements of quality .....	105
Table 26:	Standards of the Ministry of Information Industry of the People's Republic of China.....	106
Table 27:	Toxic or hazardous substances or elements with defined concentration limits .....	106
Table 28:	List of parts and accessories.....	120
Table 29:	Molex sales contacts (subject to change) .....	121

## Figures

Figure 1:	EHS5-E/EHS5-US system overview .....	12
Figure 2:	EHS5-E/EHS5-US baseband block diagram .....	13
Figure 3:	EHS5-E/EHS5-US GSM/UMTS RF section block diagram.....	14
Figure 4:	Numbering plan for connecting pads (bottom view).....	15
Figure 5:	USB circuit .....	24
Figure 6:	Serial interface ASC0.....	26
Figure 7:	ASC0 startup behavior.....	27
Figure 8:	Serial interface ASC1.....	28
Figure 9:	ASC1 startup behavior.....	29
Figure 10:	External UICC/SIM/USIM card holder circuit .....	31
Figure 11:	SIM interface - enhanced ESD protection.....	32
Figure 12:	DAI startup timing.....	33
Figure 13:	Long frame PCM timing, 8kHz sample rate .....	35
Figure 14:	Short frame PCM timing, 16kHz sample rate.....	35
Figure 15:	I <sup>2</sup> S timing, 8kHz sample rate.....	36
Figure 16:	Block circuit for DAI/PCM to analog converter .....	37
Figure 17:	Sample circuit for analog to DAI/PCM box.....	37
Figure 18:	RTC supply variants.....	38
Figure 19:	GPIO startup behavior .....	40
Figure 20:	I <sup>2</sup> C interface connected to V180 .....	41
Figure 21:	I <sup>2</sup> C startup behavior .....	42
Figure 22:	Characteristics of SPI modes.....	43
Figure 23:	Status signaling with LED driver .....	44
Figure 24:	Power indication circuit .....	45
Figure 25:	Fast shutdown timing .....	46
Figure 26:	Antenna pads (bottom view) .....	51
Figure 27:	Embedded Stripline with 65µm prepreg (1080) and 710µm core .....	52
Figure 28:	Micro-Stripline on 1.0mm standard FR4 2-layer PCB - example 1 .....	53
Figure 29:	Micro-Stripline on 1.0mm Standard FR4 PCB - example 2.....	54
Figure 30:	Micro-Stripline on 1.5mm Standard FR4 PCB - example 1.....	55
Figure 31:	Micro-Stripline on 1.5mm Standard FR4 PCB - example 2.....	56
Figure 32:	Routing to application's RF connector - top view.....	57
Figure 33:	Schematic diagram of EHS5-E/EHS5-US sample application .....	59
Figure 34:	Sample level conversion circuit.....	60
Figure 35:	Sample circuit for applying power using an external µC .....	63
Figure 36:	Sample circuit for applying power using an external voltage supervisory circuit.....	63
Figure 37:	AUTO_ON circuit sample for controlled module switch-on .....	64
Figure 38:	AUTO_ON circuit sample for automatic module switch on .....	64
Figure 39:	AUTO_ON signal timing.....	65
Figure 40:	AUTO_ON signal timing using continuous AUTO_ON .....	66
Figure 41:	ON circuit options.....	67
Figure 42:	ON timing .....	68
Figure 43:	Emergency restart timing .....	69
Figure 44:	Switch off behavior.....	71
Figure 45:	Power saving and paging in GSM networks .....	75
Figure 46:	Power saving and paging in WCDMA networks.....	76
Figure 47:	Wake-up via RTS0.....	77
Figure 48:	Power supply limits during transmit burst.....	82
Figure 49:	Position of reference points BATT+ and GND .....	82

## Figures

---

Figure 50:	ESD protection for RF antenna interface .....	84
Figure 51:	EMI circuits.....	85
Figure 52:	EHS5-E/EHS5-US– top and bottom view .....	88
Figure 53:	Dimensions of EHS5-E/EHS5-US (all dimensions in mm).....	89
Figure 54:	Land pattern (top view) .....	90
Figure 55:	Recommended design for 110 micron thick stencil (top view).....	91
Figure 56:	Recommended design for 150 micron thick stencil (top view).....	91
Figure 57:	Reflow Profile .....	93
Figure 58:	Carrier tape .....	97
Figure 59:	Reel direction .....	97
Figure 60:	Barcode label on tape reel .....	98
Figure 61:	Moisture barrier bag (MBB) with imprint.....	99
Figure 62:	Moisture Sensitivity Label .....	100
Figure 63:	Humidity Indicator Card - HIC .....	101
Figure 64:	Small quantity tray.....	102
Figure 65:	Tray to ship odd module amounts.....	102
Figure 66:	Trays with packaging materials.....	102
Figure 67:	Tray dimensions.....	103
Figure 68:	Reference equipment for Type Approval .....	108



# 1 Introduction

This document<sup>1</sup> describes the hardware of the Cinterion® EHS5-E/EHS5-US module. It helps you quickly retrieve interface specifications, electrical and mechanical details and information on the requirements to be considered for integrating further components.

## 1.1 Key Features at a Glance

Feature	Implementation
<i>General</i>	
Frequency bands	EHS5-E: GSM/GPRS/EDGE: Dual band GSM 900/1800MHz UMTS/HSPA+: Dual band UMTS 900/2100MHz  EHS5-US: GSM/GPRS/EDGE: Dual band GSM 850/1900MHz UMTS/HSPA+: Dual band UMTS 850/1900MHz
GSM class	Small MS
Output power (according to Release 99, V5)	EHS5-E: Class 4 (+33dBm ±2dB) for EGSM900 Class 1 (+30dBm ±2dB) for GSM1800 Class E2 (+27dBm ± 3dB) for GSM 900 8-PSK Class E2 (+26dBm +3 /-4dB) for GSM 1800 8-PSK Class 3 (+24dBm +1/-3dB) for UMTS 2100, WCDMA FDD BdI Class 3 (+24dBm +1/-3dB) for UMTS 900, WCDMA FDD BdVIII  EHS5-US: Class 4 (+33dBm ±2dB) for EGSM850 Class 1 (+30dBm ±2dB) for GSM1900 Class E2 (+27dBm ± 3dB) for GSM 850 8-PSK Class E2 (+26dBm +3 /-4dB) for GSM 1900 8-PSK Class 3 (+24dBm +1/-3dB) for UMTS 1900, WCDMA FDD BdII Class 3 (+24dBm +1/-3dB) for UMTS 850, WCDMA FDD BdV
Power supply	3.3V to 4.5V
Operating temperature (board temperature)	Normal operation: -30°C to +85°C Extended operation: -40°C to +90°C
Physical	Dimensions: 27.6mm x 18.8mm x 2.3mm Weight: approx. 3g
RoHS	All hardware components fully compliant with EU RoHS Directive

1. The document is effective only if listed in the appropriate Release Notes as part of the technical documentation delivered with your Thales product.

## 1.1 Key Features at a Glance

Feature	Implementation
<i>HSPA features</i>	
3GPP Release 6, 7	DL 7.2Mbps, UL 5.7Mbps HSDPA Cat.8 / HSUPA Cat.6 data rates Compressed mode (CM) supported according to 3GPP TS25.212
<i>UMTS features</i>	
3GPP Release 4	PS data rate – 384 kbps DL / 384 kbps UL CS data rate – 64 kbps DL / 64 kbps UL
<i>GSM/GPRS/EGPRS features</i>	
Data transfer	<p>GPRS:</p> <ul style="list-style-type: none"> <li>• Multislot Class 12</li> <li>• Full PBCCH support</li> <li>• Mobile Station Class B</li> <li>• Coding Scheme 1 – 4</li> </ul> <p>EGPRS:</p> <ul style="list-style-type: none"> <li>• Multislot Class 12</li> <li>• EDGE E2 power class for 8 PSK</li> <li>• Downlink coding schemes – CS 1-4, MCS 1-9</li> <li>• Uplink coding schemes – CS 1-4, MCS 1-9</li> <li>• SRB loopback and test mode B</li> <li>• 8-bit, 11-bit RACH</li> <li>• PBCCH support</li> <li>• 1 phase/2 phase access procedures</li> <li>• Link adaptation and IR</li> <li>• NACC, extended UL TBF</li> <li>• Mobile Station Class B</li> </ul> <p>CSD:</p> <ul style="list-style-type: none"> <li>• V.110, RLP, non-transparent</li> <li>• 9.6kbps</li> <li>• USSD</li> </ul>
SMS	Point-to-point MT and MO Cell broadcast Text and PDU mode Storage: SIM card plus SMS locations in mobile equipment
<i>Software</i>	
AT commands	Hayes 3GPP TS 27.007, TS 27.005, Thales AT commands for RIL compatibility
Java™ Open Platform	<p>Java™ Open Platform with</p> <ul style="list-style-type: none"> <li>• Java™ profile IMP-NG &amp; CLDC 1.1 HI</li> <li>• Secure data transmission via HTTPS/SSL</li> <li>• Multi-threading programming and multi-application execution</li> </ul> <p>Major benefits: seamless integration into Java applications, ease of programming, no need for application microcontroller, extremely cost-efficient hardware and software design – ideal platform for industrial GSM applications.</p> <p>The memory space available for Java programs is around 13MB in the flash file system and around 10MB RAM. Application code and data share the space in the flash file system and in RAM.</p>

## 1.1 Key Features at a Glance

Feature	Implementation
Microsoft™ compatibility	RIL for Pocket PC and Smartphone
SIM Application Toolkit	SAT Release 99
Firmware update	Generic update from host application over ASC0 or USB modem.
<i>Interfaces</i>	
Module interface	Surface mount device with solderable connection pads (SMT application interface). Land grid array (LGA) technology ensures high solder joint reliability and allows the use of an optional module mounting socket.  For more information on how to integrate SMT modules see also [4]. This application note comprises chapters on module mounting and application layout issues as well as on SMT application development equipment.
USB	USB 2.0 High Speed (480Mbit/s) device interface, Full Speed (12Mbit/s) compliant
2 serial interfaces	ASC0 (shared with GPIO lines): <ul style="list-style-type: none"> <li>8-wire modem interface with status and control lines, unbalanced, asynchronous</li> <li>Adjustable baud rates: 300bps to 921,600bps</li> <li>Autobauding: 300bps to 230,400bps</li> <li>Supports RTS0/CTS0 hardware flow control.</li> </ul> ASC1 (shared with GPIO lines): <ul style="list-style-type: none"> <li>4-wire, unbalanced asynchronous interface</li> <li>Adjustable baud rates: 300bps to 921,600bps</li> <li>Autobauding: 300bps to 230,400bps</li> <li>Supports RTS1/CTS1 hardware flow control</li> </ul>
Audio	1 digital interface (PCM), shared with GPIO lines
UICC interface	Supported SIM/USIM cards: 3V, 1.8V
GPIO interface	9 GPIO lines shared with ASC0 lines, LED signalling, PWM functionality, fast shutdown and pulse counter 4 GPIO lines shared with PCM interface 4 GPIO lines shared with ASC1 and SPI interfaces
I <sup>2</sup> C interface	Supports I <sup>2</sup> C serial interface
SPI interface	Serial peripheral interface, shared with GPIO lines
Antenna interface pads	50Ω
<i>Power on/off, Reset</i>	
Power on/off	Switch-on by hardware signal AUTO_ON and ON Switch-off by AT command Switch off by hardware signal GPIO4/FST_SHDN instead of AT command Automatic switch-off in case of critical temperature and voltage conditions
Reset	Orderly shutdown and reset by AT command Emergency reset by hardware signal EMERG_RST
<i>Special features</i>	
Real time clock	Timer functions via AT commands
Phonebook	SIM and phone
TTY/CTM support	Integrated CTM modem

1.2 EHS5-E/EHS5-US System Overview

Feature	Implementation
<i>Evaluation kit</i>	
Evaluation module	EHS5-E/EHS5-US module soldered onto a dedicated PCB that can be connected to an adapter in order to be mounted onto the DSB75.
DSB75	DSB75 Development Support Board designed to test and type approve Thales modules and provide a sample configuration for application engineering. A special adapter is required to connect the EHS5-E/EHS5-US evaluation module to the DSB75.

1.2 EHS5-E/EHS5-US System Overview

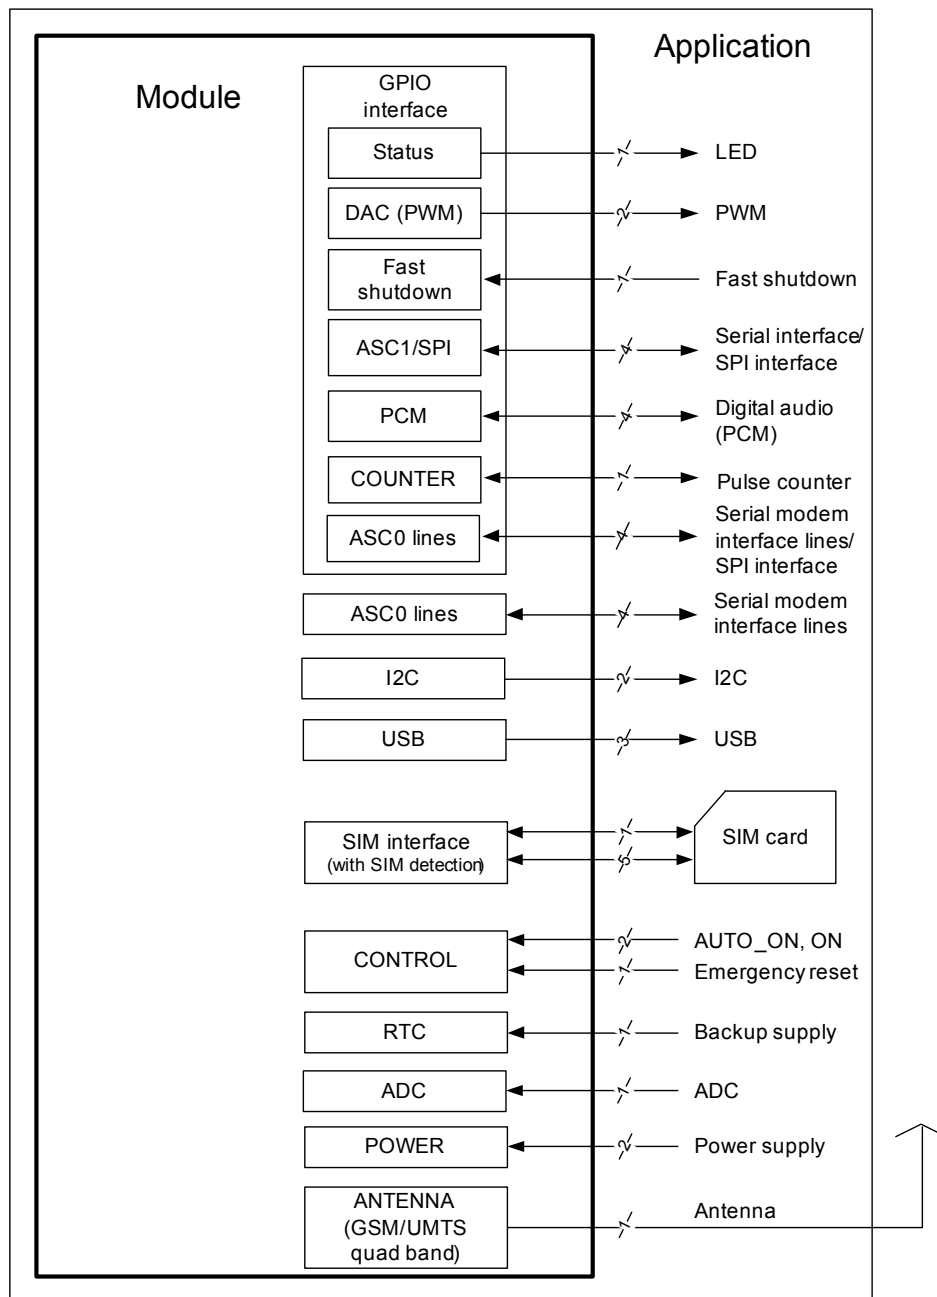


Figure 1: EHS5-E/EHS5-US system overview

1.3 Circuit Concept

### 1.3 Circuit Concept

The following figures show block diagrams of the EHS5-E/EHS5-US module and illustrate the major functional components:

Baseband block (see [Figure 2](#)):

- GSM baseband processor and power management
- Stacked flash/PSRAM memory
- Application interface (SMT with connecting pads)

GSM/UMTS RF section (see [Figure 3](#)):

- RF transceiver (part of baseband processor IC)
- RF power amplifier/front-end module inc. harmonics filtering
- Receive SAW filters

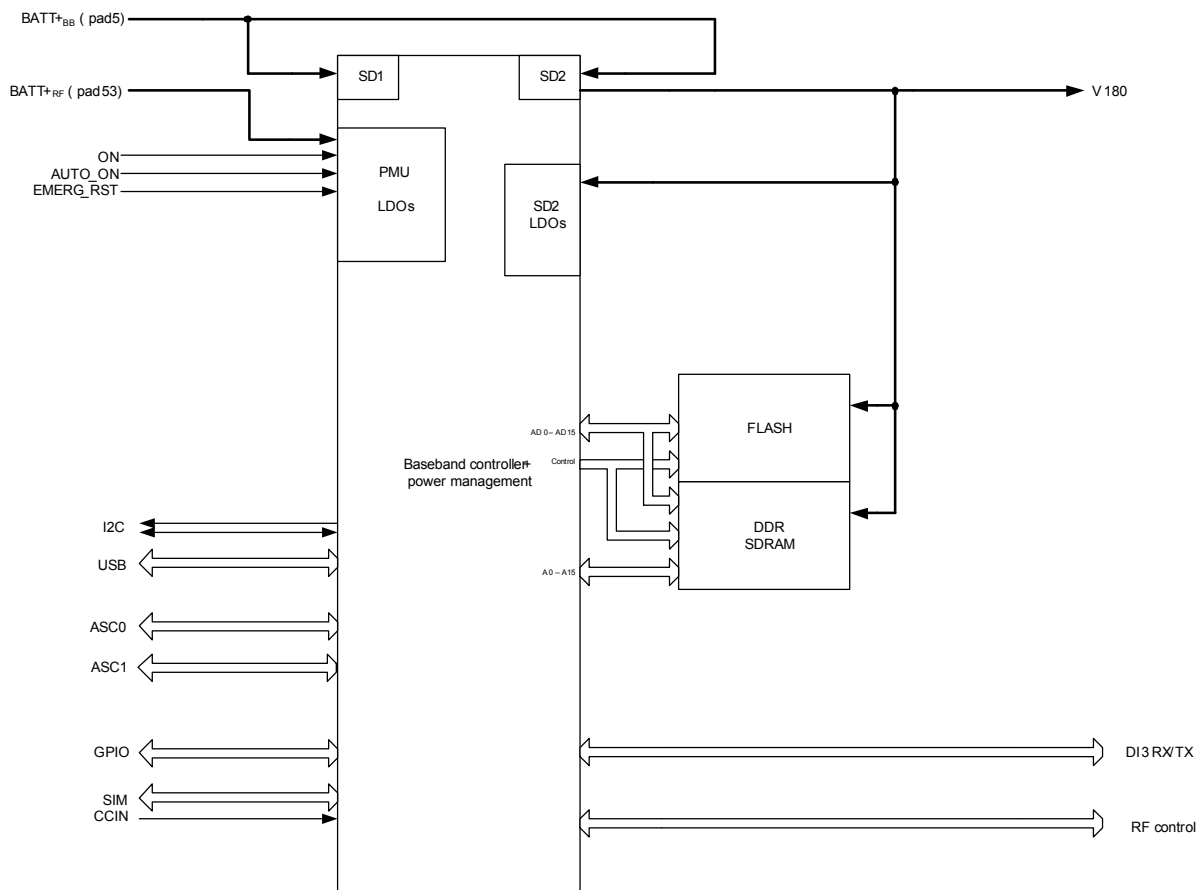


Figure 2: EHS5-E/EHS5-US baseband block diagram

1.3 Circuit Concept

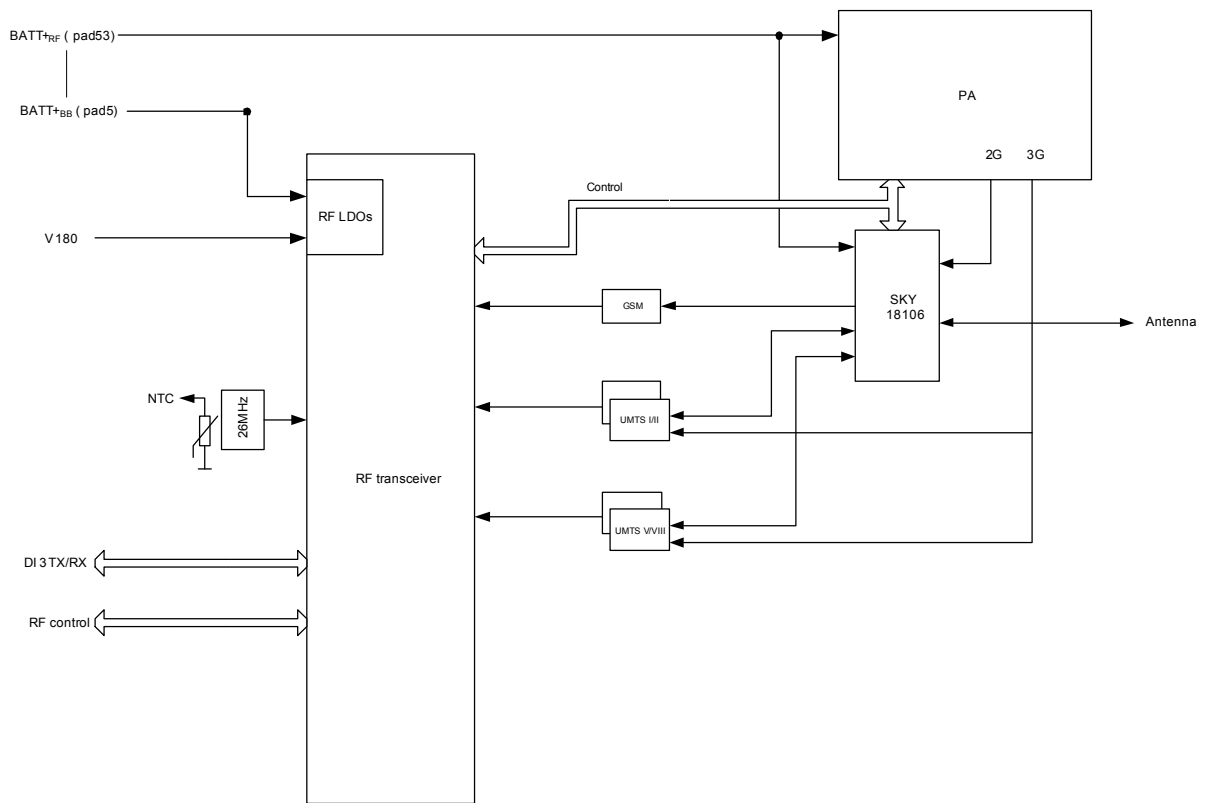


Figure 3: EHS5-E/EHS5-US GSM/UMTS RF section block diagram

## 2 Interface Characteristics

EHS5-E/EHS5-US is equipped with an SMT application interface that connects to the external application. The SMT application interface incorporates the various application interfaces as well as the RF antenna interface.

### 2.1 Application Interface

#### 2.1.1 Pad Assignment

The SMT application interface on the EHS5-E/EHS5-US provides connecting pads to integrate the module into external applications. Figure 4 shows the connecting pads' numbering plan, the following Table 1 lists the pads' assignments.

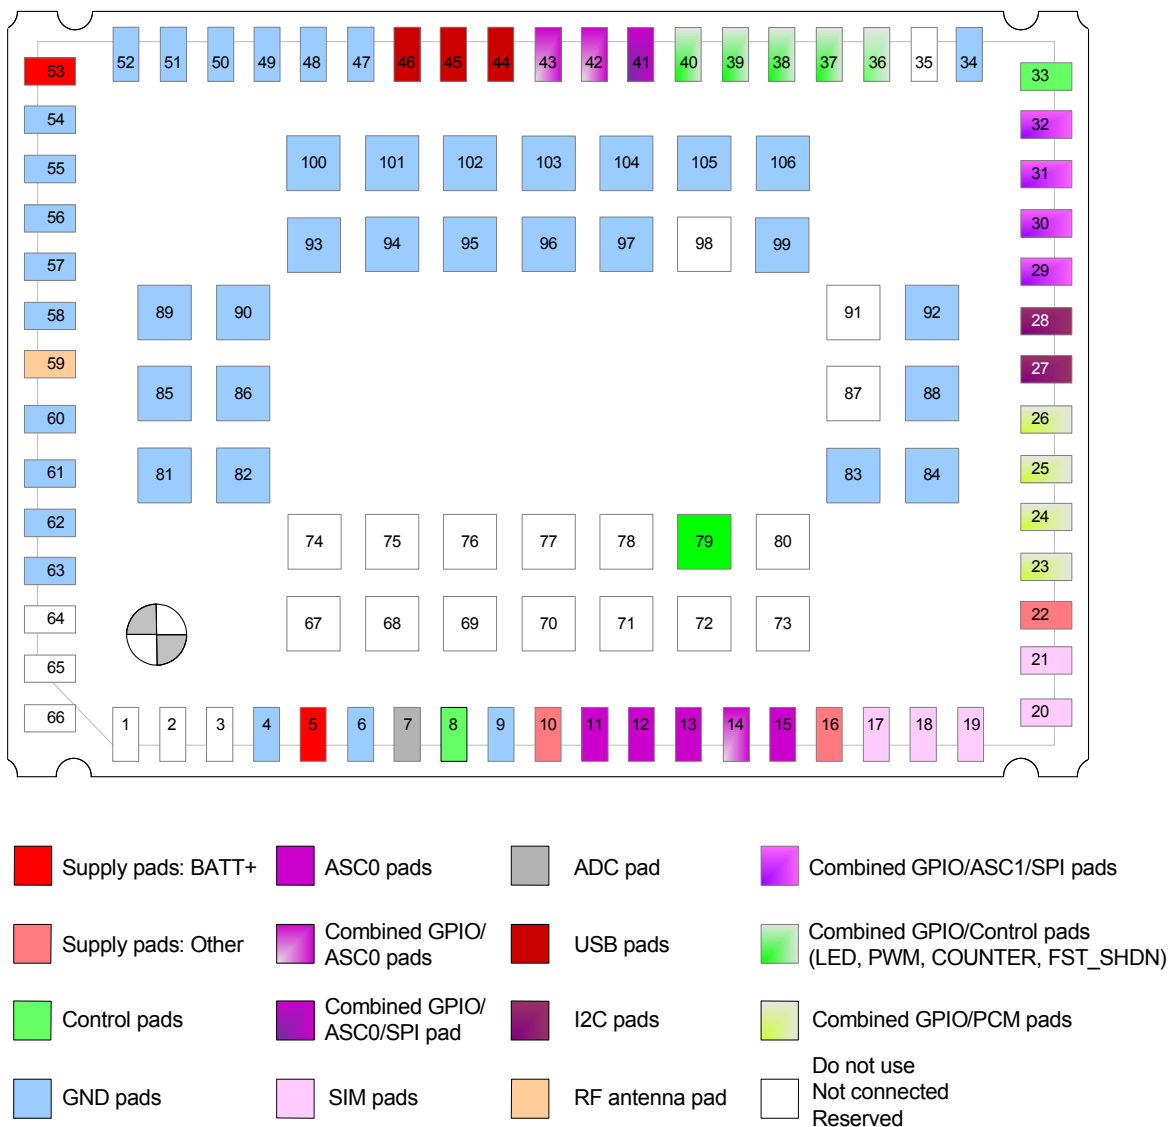


Figure 4: Numbering plan for connecting pads (bottom view)

## 2.1 Application Interface

Table 1: Pad assignments

Pad no.	Signal name	Pad no.	Signal name	Pad no.	Signal name
1	Reserved	23	GPIO20/TXDDAI	45	USB_DP
2	Reserved	24	GPIO22/TFSDAI	46	USB_DN
3	Reserved	25	GPIO21/RXDDAI	47	GND
4	GND	26	GPIO23/SCLK	48	GND
5	BATT <sup>+</sup> <sub>BB</sub>	27	I2CDAT	49	GND
6	GND	28	I2CCLK	50	GND
7	ADC1	29	GPIO17/TXD1/MISO	51	GND
8	ON	30	GPIO16/RXD1/MOSI	52	GND
9	GND	31	GPIO18/RTS1	53	BATT <sup>+</sup> <sub>RF</sub>
10	V180	32	GPIO19/CTS1/SPI_CS	54	GND
11	RXD0	33	EMERG_RST	55	GND
12	CTS0	34	GND	56	GND
13	TXD0	35	Not connected	57	GND
14	GPIO24/RING0	36	GPIO8/COUNTER	58	GND
15	RTS0	37	GPIO7/PWM1	59	RF_OUT
16	VDDL	38	GPIO6/PWM2	60	GND
17	CCRST	39	GPIO5/LED	61	GND
18	CCIN	40	GPIO4/FST_SHDN	62	GND
19	CCIO	41	GPIO3/DSR0/SPI_CLK	63	GND
20	CCVCC	42	GPIO2/DCD0	64	Reserved
21	CCCLK	43	GPIO1/DTR0	65	Reserved
22	VCORE	44	VUSB	66	Reserved
Centrally located pads					
67	Not connected	81	GND	95	GND
68	Not connected	82	GND	96	GND
69	Not connected	83	GND	97	GND
70	Not connected	84	GND	98	Do not use
71	Not connected	85	GND	99	GND
72	Not connected	86	GND	100	GND
73	Not connected	87	Do not use	101	GND
74	Do not use	88	GND	102	GND
75	Do not use	89	GND	103	GND
76	Do not use	90	GND	104	GND
77	Do not use	91	Not connected	105	GND
78	Do not use	92	GND	106	GND
79	AUTO_ON	93	GND		
80	Do not use	94	GND		


Signal pads that are not used should not be connected to an external application.

Please note that the reference voltages listed in [Table 2](#) are the values measured directly on the EHS5-E/EHS5-US module. They do not apply to the accessories connected.



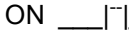

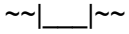
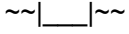
## 2.1.2 Signal Properties

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
Power supply	BATT <sup>+</sup> <sub>BB</sub> BATT <sup>+</sup> <sub>RF</sub>	I	<p><u>GSM activated:</u>  <math>V_{I\max} = 4.5V</math>  <math>V_{Inorm} = 3.8V</math>  <math>V_{I\min} = 3.3V</math> during Tx burst on board</p> <p><math>I \approx 1.8A</math>, during Tx burst (GSM)</p>  <p><math>n \text{ Tx} = n \times 577\mu s</math> peak current every 4.616ms</p> <p><u>WCDMA activated:</u>  <math>V_{I\max} = 4.5V</math>  <math>V_{Inorm} = 3.8V</math>  <math>V_{I\min} = 3.3V</math> during Transmit active.  <math>I_{\max} = 800mA</math> during Tx</p>	<p>Lines of BATT+ and GND must be connected in parallel for supply purposes because higher peak currents may occur.</p> <p>Minimum voltage must not fall below 3.3V including drop, ripple, spikes and not rise above 4.5V.</p> <p>BATT<sup>+</sup><sub>BB</sub> and BATT<sup>+</sup><sub>RF</sub> require an ultra low ESR capacitor:  BATT<sup>+</sup><sub>BB</sub> --&gt; 150µF  BATT<sup>+</sup><sub>RF</sub> --&gt; 50µF  If using Multilayer Ceramic Chip Capacitors (MLCC) please take DC-bias into account.</p>
Power supply	GND		Ground	Application Ground
External supply voltage	V180	O	<p>Normal operation:  <math>V_{O\text{norm}} = 1.80V \pm 3\%</math>  <math>I_{O\text{max}} = -10mA</math></p> <p>SLEEP mode Operation:  <math>V_{O\text{Sleep}} = 1.80V \pm 5\%</math>  <math>I_{O\text{max}} = -10mA</math></p> <p><math>CL_{\text{max}} = 2\mu F</math></p>	<p>V180 may be used to supply level shifters at the interfaces or to supply external application circuits.</p> <p>VCORE and V180 should be used for the power indication circuit.</p>
	VCORE	O	<p>Full power mode (speed stepping):  <math>V_{O\text{full}} = 1.2V \pm 2.5\%</math>  <math>I_{O\text{max}} = -10mA</math>  Reduced pwr. mode (speed stepping):  <math>V_{O\text{reduced}} = 0.9V..1.2V \pm 4\%</math>  <math>I_{O\text{max}} = -10mA</math></p> <p><math>CL_{\text{max}} = 100nF</math></p>	If unused keep line open.

## 2.1 Application Interface

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
Ignition	ON	I	$V_{IHmax} = VDDL P + 0.3V$ $V_{IHmin} = 1.2V$ $V_{ILmax} = 0.5V$ Min low time before rising edge $\leq 100\mu s$  ON  high pulse $50\mu s \dots 80\mu s$	This signal switches the module on. Set this signal low before and after the startup impulse. If unused pull to GND using $10k\Omega$ .
	AUTO_ON	I	$V_{OHmax} = VDDL P \text{ max}$ $V_{IHmin} = 1.2V$ $V_{ILmax} = 0.5V$ Low level time $\geq 50\mu s$  AUTO_ON  low level signal	This signal switches the module on. For more information and requirements see also <a href="#">Section 3.2.1</a> . This line is low level sensitive triggered. If unused keep line open.
Emergency restart	EMERG_RST	I	$R_1 \approx 1k\Omega$ , $C_1 \approx 1nF$ $V_{OHmax} = VDDL P \text{ max}$ $V_{IHmin} = 1.35V$ $V_{ILmax} = 0.3V$ at $\sim 200\mu A$   low impulse width $> 10ms$	This line must be driven low by an open drain or open collector driver connected to GND.  If unused keep line open.
Fast shutdown	FST_SHDN	I	$V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$   low impulse width $> 10ms$	This line must be driven low. If unused keep line open.  Note that the fast shutdown line is originally available as GPIO line. If configured as fast shutdown, the GPIO line is assigned as follows: GPIO4 --> FST_SHDN
RTC backup	VDDL P	I/O	$V_{Onorm} = 1.8V$ $I_{Omax} = -25mA$  $V_{Imax} = 1.9V$ $V_{Imin} = 1.0V$ $I_{Ityp} < 1\mu A$	It is recommended to use a serial resistor between VDDL P and a possible capacitor.  If unused keep line open.
USB	VUSB_IN	I	$V_{Imin} = 3V$ $V_{Imax} = 5.25V$  Active and suspend current: $I_{max} < 100\mu A$	All electrical characteristics according to USB Implementers' Forum, USB 2.0 Specification.  If unused keep lines open.
	USB_DN	I/O	Full and high speed signal characteristics according USB 2.0 Specification.	
	USB_DP			

## 2.1 Application Interface

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
Serial Interface ASC0	RXD0	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	If unused keep lines open.
	CTS0	O		
	DSR0	O	Pull down resistor active $V_{OLmax} = 0.5V$ at $I > 50\mu A$	Note that some ASC0 lines are originally available as GPIO lines. If configured as ASC0 lines, the GPIO lines are assigned as follows: GPIO1 --> DTR0 GPIO2 --> DCD0 GPIO3 --> DSR0 GPIO24 --> RING0
	DCD0	O		
	RING0	O	Pull up resistor active $V_{OHmin} = 1.3V$ at $I > -50\mu A$	
	TXD0	I	$V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$	The DSR0 line is also shared with the SPI interface's SPI_CLK signal.
	RTS0	I	Pull down resistor active $V_{ILmax} = 0.35V$ at $> 50\mu A$ $V_{IHmin} = 1.30V$ at $< 240\mu A$ $V_{IHmax} = 1.85V$ at $< 240\mu A$	
DTR0	I	Pull up resistor active $V_{ILmax} = 0.35V$ at $< -200\mu A$ $V_{IHmin} = 1.30V$ at $> -50\mu A$ $V_{IHmax} = 1.85V$	DSR0, DCD0 and RING0 signal lines are driven by a pull up or pull down resistor only.	
Serial Interface ASC1	RXD1	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	If unused keep line open.  Note that the ASC1 interface lines are originally available as GPIO lines. If configured as ASC1 lines, the GPIO lines are assigned as follows: GPIO16 --> RXD1 GPIO17 --> TXD1 GPIO18 --> RTS1 GPIO19 --> CTS1
	TXD1	I		
	RTS1	I		
	CTS1	O	$V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$	
I <sup>2</sup> C	I2CCLK	IO	Open drain IO $V_{OLmin} = 0.35V$ at $I = -3mA$ $V_{OHmax} = 1.85V$ R external pull up min = 560Ω  $V_{ILmax} = 0.35V$ $V_{IHmin} = 1.3V$ $V_{IHmax} = 1.85V$	According to the I <sup>2</sup> C Bus Specification Version 2.1 for the fast mode a rise time of max. 300ns is permitted. There is also a maximum $V_{OL}=0.4V$ at 3mA specified.  The value of the pull-up depends on the capacitive load of the whole system (I <sup>2</sup> C Slave + lines). The maximum sink current of I2CDAT and I2CCLK is 4mA.  If lines are unused keep lines open.
	I2CDAT	IO		

## 2.1 Application Interface

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
SPI	SPI_CLK	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$ $V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$	If lines are unused keep lines open.  Note that the SPI interface lines are originally available as GPIO lines. If configured as SPI lines, the GPIO lines are assigned as follows: GPIO3 --> SPI_CLK GPIO16 --> MOSI GPIO17 --> MISO GPIO19 --> SPI_CS
	MOSI	O		
	MISO	I		
	SPI_CS	O		
GPIO interface	GPIO1-GPIO3	IO	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$ $V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$	If unused keep line open.  Please note that some GPIO lines can be configured by AT command for alternative functions: GPIO1-GPIO3: ASC0 control lines DTR0, DCD0 and DSR0 GPIO4: Fast shutdown GPIO5: Status LED line GPIO6/GPIO7: PWM GPIO8: Pulse Counter GPIO16-GPIO19: ASC1 or SPI GPIO20-GPIO23: PCM GPIO24: ASC0 control line RING0
	GPIO4	IO		
	GPIO5	IO		
	GPIO6	IO		
	GPIO7	IO		
	GPIO8	IO		
	GPIO16-GPIO19	IO		
	GPIO20-GPIO23	IO		
	GPIO24	IO		
Digital audio interface (PCM)	TFSDAI	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$ $V_{ILmax} = 0.35V$ $V_{IHmin} = 1.30V$ $V_{IHmax} = 1.85V$	If unused keep line open.  Note that the PCM interface lines are originally available as GPIO lines. If configured as PCM lines, the GPIO lines are assigned as follows: GPIO22 --> TFSDAI GPIO23 --> SCLK GPIO20 --> TXDDAI GPIO21 --> RXDDAI
	SCLK	O		
	TXDDAI	O		
	RXDDAI	I		
Status LED	LED	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	If unused keep line open.  Note that the LED line is originally available as GPIO line. If configured as LED line, the GPIO line is assigned as follows: GPIO5 --> LED

## 2.1 Application Interface

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
PWM	PWM1	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.55V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	If unused keep lines open.  Note that the PWM lines are originally available as GPIO lines. If configured as PWM lines, the GPIO lines are assigned as follows: GPIO7 --> PWM1 GPIO6 --> PWM2
	PWM2	O		
Pulse counter	COUNTER	I	Internal up resistor active $V_{ILmax} = 0.35V$ at $< -200\mu A$ $V_{IHmin} = 1.30V$ at $> -50\mu A$ $V_{IHmax} = 1.85V$	If unused keep line open.  Note that the COUNTER line is originally available as GPIO line. If configured as COUNTER line, the GPIO line is assigned as follows: GPIO8 --> COUNTER
ADC (Analog-to-Digital converter)	ADC1	I	$R_I = 1M\Omega$ $V_I = 0V \dots 1.2V$ (valid range) $V_{IHmax} = 1.2V$  Resolution 1024 steps Tolerance 0.3%	ADC1 can be used as input for external measurements.  If unused keep line open.

## 2.1 Application Interface

Table 2: Signal properties

Function	Signal name	IO	Signal form and level	Comment
SIM card detection	CCIN	I	$R_I \approx 110k\Omega$ $V_{IHmin} = 1.45V$ at $I = 15\mu A$ , $V_{IHmax} = 1.9V$ $V_{ILmax} = 0.3V$	CCIN = High, SIM card inserted.  For details please refer to <a href="#">Section 2.1.6</a> .  If unused keep line open.
3V SIM Card Interface	CCRST	O	$V_{OLmax} = 0.30V$ at $I = 1mA$ $V_{OHmin} = 2.45V$ at $I = -1mA$ $V_{OHmax} = 2.90V$	Maximum cable length or copper track to SIM card holder should not exceed 100mm.
	CCIO	I/O	$V_{ILmax} = 0.50V$ $V_{IHmin} = 2.05V$ $V_{IHmax} = 2.90V$  $V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 2.50V$ at $I = -1mA$ $V_{OHmax} = 2.90V$	
	CCCLK	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 2.40V$ at $I = -1mA$ $V_{OHmax} = 2.90V$	
	CCVCC	O	$V_{Omin} = 2.80V$ $V_{Otyp} = 2.85V$ $V_{Omax} = 2.90V$ $I_{Omax} = -30mA$	
1.8V SIM Card Interface	CCRST	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.45V$ at $I = -1mA$ $V_{OHmax} = 1.90V$	
	CCIO	I/O	$V_{ILmax} = 0.35V$ $V_{IHmin} = 1.25V$ $V_{IHmax} = 1.85V$  $V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.50V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	
	CCCLK	O	$V_{OLmax} = 0.25V$ at $I = 1mA$ $V_{OHmin} = 1.50V$ at $I = -1mA$ $V_{OHmax} = 1.85V$	
	CCVCC	O	$V_{Omin} = 1.75V$ $V_{Otyp} = 1.80V$ $V_{Omax} = 1.85V$ $I_{Omax} = -30mA$	

### 2.1.2.1 Absolute Maximum Ratings

The absolute maximum ratings stated in [Table 3](#) are stress ratings under any conditions. Stresses beyond any of these limits will cause permanent damage to EHS5-E/EHS5-US.


**Table 3:** Absolute maximum ratings

Parameter	Min	Max	Unit
Supply voltage BATT <sub>BB</sub> , BATT <sub>RF</sub>	-0.3	+5.5	V
Voltage at all digital lines in Power Down mode	-0.3	+0.3	V
Voltage at digital lines in normal operation	-0.2	V180 + 0.2	V
Voltage at SIM/USIM interface, CCVCC in normal operation	0	+3.3	V
VDDL input voltage	-0.15	2.0	V
Voltage at ADC line in normal operation	0	1.2	V
Voltage at analog lines in Power Down mode	-0.3	+0.3	V
V180 in normal operation	+1.7	+1.9	V
Current at V180 in normal operation		-50	mA
VCORE in normal operation	+0.85	+1.25	V
Current at VCORE in normal operation		-50	mA

### 2.1.3 USB Interface

EHS5-E/EHS5-US supports a USB 2.0 High Speed (480Mbit/s) device interface that is Full Speed (12Mbit/s) compliant. The USB interface is primarily intended for use as command and data interface and for downloading firmware.

The external application is responsible for supplying the VUSB\_IN line. This line is used for cable detection only. The USB part (driver and transceiver) is supplied by means of BATT+. This is because EHS5-E/EHS5-US is designed as a self-powered device compliant with the “Universal Serial Bus Specification Revision 2.0”<sup>1</sup>.

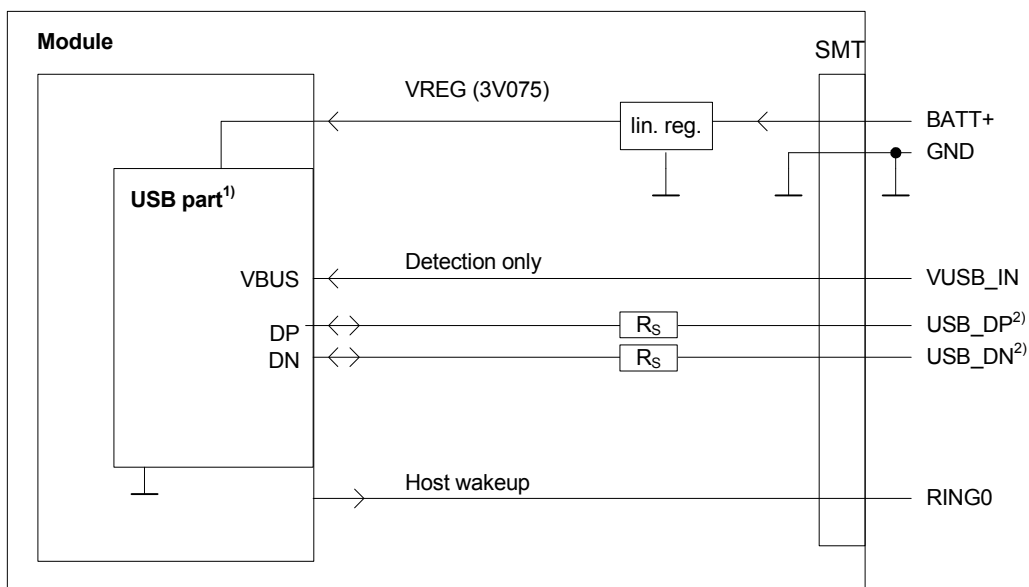

<sup>1</sup> All serial (including  $R_S$ ) and pull-up resistors for data lines are implemented.

<sup>2</sup> If the USB interface is operated in High Speed mode (480MHz), it is recommended to take special care routing the data lines USB\_DP and USB\_DN. Application layout should in this case implement a differential impedance of 90Ohm for proper signal integrity.

**Figure 5:** USB circuit

To properly connect the module's USB interface to the external application, a USB 2.0 compatible connector and cable or hardware design is required. For more information on the USB related signals see [Table 2](#). Furthermore, the USB modem driver distributed with EHS5-E/EHS5-US needs to be installed.

1. The specification is ready for download on <http://www.usb.org/developers/docs/>



### 2.1.3.1 Reducing Power Consumption

While a USB connection is active, the module will never switch into SLEEP mode. Only if the USB interface is in Suspended state or Detached (i.e., VUSB\_IN = 0) is the module able to switch into SLEEP mode thereby saving power. There are two possibilities to enable power reduction mechanisms:

- **Recommended implementation of USB Suspend/Resume/Remote Wakeup:**

The USB host should be able to bring its USB interface into the Suspended state as described in the "Universal Serial Bus Specification Revision 2.0"<sup>1</sup>. For this functionality to work, the VUSB\_IN line should always be kept enabled. On incoming calls and other events EHS5-E/EHS5-US will then generate a Remote Wakeup request to resume the USB host controller.

See also [5] (USB Specification Revision 2.0, Section 10.2.7, p.282):

"If USB System wishes to place the bus in the Suspended state, it commands the Host Controller to stop all bus traffic, including SOFs. This causes all USB devices to enter the Suspended state. In this state, the USB System may enable the Host Controller to respond to bus wakeup events. This allows the Host Controller to respond to bus wakeup signaling to restart the host system."

- **Implementation for legacy USB applications not supporting USB Suspend/Resume:**

As an alternative to the regular USB suspend and resume mechanism it is possible to employ the RING0 line to wake up the host application in case of incoming calls or events signaled by URCs while the USB interface is in Detached state (i.e., VUSB\_IN = 0). Every wakeup event will force a new USB enumeration. Therefore, the external application has to carefully consider the enumeration timings to avoid losing any signalled events. For details on this host wakeup functionality see Section 2.1.14.3. To prevent existing data call connections from being disconnected while the USB interface is in detached state (i.e., VUSB\_IN=0) it is possible to call AT&D0, thus ignoring the status of the DTR line (see also [1]).

---

1. The specification is ready for download on <http://www.usb.org/developers/docs/>

### 2.1.4 Serial Interface ASC0

EHS5-E/EHS5-US offers an 8-wire unbalanced, asynchronous modem interface ASC0 conforming to ITU-T V.24 protocol DCE signalling. The electrical characteristics do not comply with ITU-T V.28. The significant levels are 0V (for low data bit or active state) and 1.8V (for high data bit or inactive state). For electrical characteristics please refer to [Table 2](#). For an illustration of the interface line's startup behavior see [Figure 7](#).

EHS5-E/EHS5-US is designed for use as a DCE. Based on the conventions for DCE-DTE connections it communicates with the customer application (DTE) using the following signals:

- Port TXD @ application sends data to the module's TXD0 signal line
- Port RXD @ application receives data from the module's RXD0 signal line

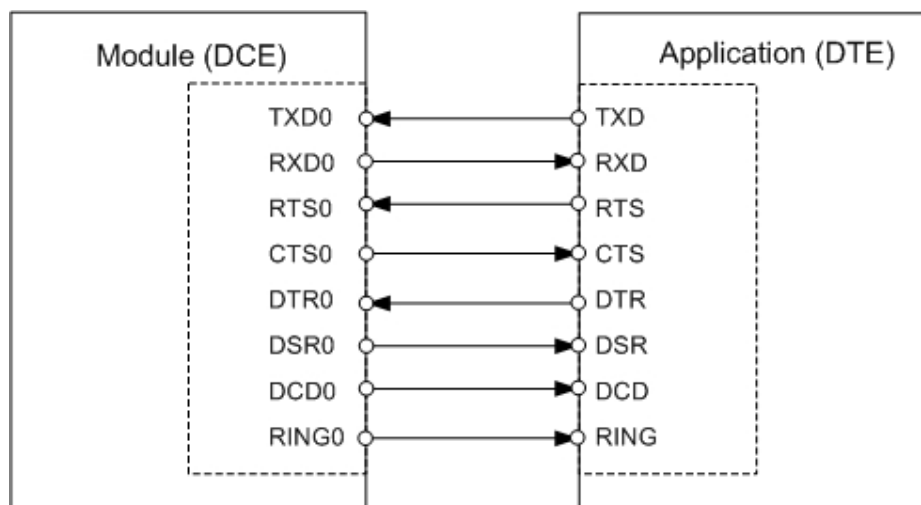


Figure 6: Serial interface ASC0


#### Features:

- Includes the data lines TXD0 and RXD0, the status lines RTS0 and CTS0 and, in addition, the modem control lines DTR0, DSR0, DCD0 and RING0.
- The RING0 signal serves to indicate incoming calls and other types of URCs (Unsolicited Result Code). It can also be used to send pulses to the host application, for example to wake up the application from power saving state.
- Configured for 8 data bits, no parity and 1 stop bit.
- ASC0 can be operated at fixed bit rates from 300bps up to 921600bps.
- Autobauding supports bit rates from 300bps up to 230400bps.
- Supports RTS0/CTS0 hardware flow control. The hardware hand shake line RTS0 has an internal pull down resistor causing a low level signal, if the line is not used and open. Although hardware flow control is recommended, this allows communication by using only RXD and TXD lines.
- Wake up from SLEEP mode by RTS0 activation (high to low transition; see [Section 3.4.3](#)).

Note: The ASC0 modem control lines DTR0, DCD0, DSR0 and RING0 are originally available as GPIO lines. If configured as ASC0 lines, these GPIO lines are assigned as follows: GPIO1 --> DTR0, GPIO2 --> DCD0, GPIO3 --> DSR0 and GPIO24 --> RING0. Also, DSR0 is shared with the SPI\_CLK line of the SPI interface and may be configured as such. Configuration is done by AT command (see [\[1\]](#): AT^SCFG). The configuration is non-volatile and becomes active after a module restart.

Also note that the DSR0, DCD0 and RING0 modem control lines are driven only with an internal pull-up or pull-down resistor to change the modem signal state.

The following figure shows the startup behavior of the asynchronous serial interface ASC0.

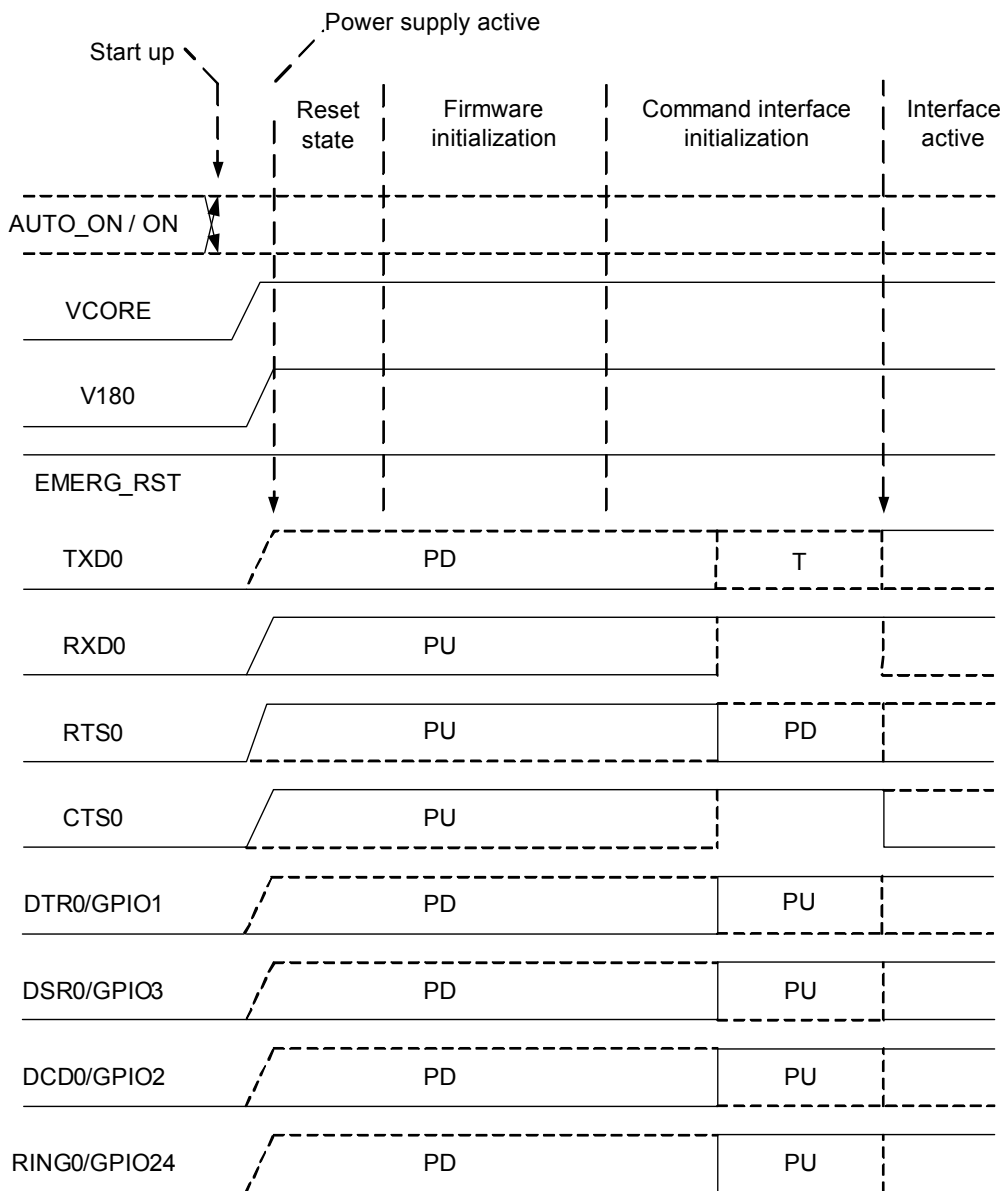

For pull-up and pull-down values see [Table 16](#).

**Figure 7:** ASC0 startup behavior

**Notes:**

During startup the DTR0 signal is driven active low for 500µs. It is recommended to provide a 470Ω serial resistor for the DTR0 line to prevent shorts.

No data must be sent over the ASC0 interface before the interface is active and ready to receive data (see [Section 3.2.1](#)).

An external pull down to ground on the DCD0 line during the startup phase activates a special mode for EHS5-E/EHS5-US. In this special mode the AT command interface is not available and the module may therefore no longer behave as expected.

### 2.1.5 Serial Interface ASC1

EHS5-E/EHS5-US provides a 4-wire unbalanced, asynchronous modem interface ASC1 conforming to ITU-T V.24 protocol DCE signalling. The electrical characteristics do not comply with ITU-T V.28. The significant levels are 0V (for low data bit or active state) and 1.8V (for high data bit or inactive state). For electrical characteristics please refer to [Table 2](#). For an illustration of the interface line's startup behavior see [Figure 9](#).

The ASC1 interface lines are originally available as GPIO lines. If configured as ASC1 lines, the GPIO lines are assigned as follows: GPIO16 --> RXD1, GPIO17 --> TXD1, GPIO18 --> RTS1 and GPIO19 --> CTS1. Configuration is done by AT command (see [\[1\]](#): AT^SCFG). The configuration is non-volatile and becomes active after a module restart.

EHS5-E/EHS5-US is designed for use as a DCE. Based on the conventions for DCE-DTE connections it communicates with the customer application (DTE) using the following signals:

- Port TXD @ application sends data to module's TXD1 signal line
- Port RXD @ application receives data from the module's RXD1 signal line


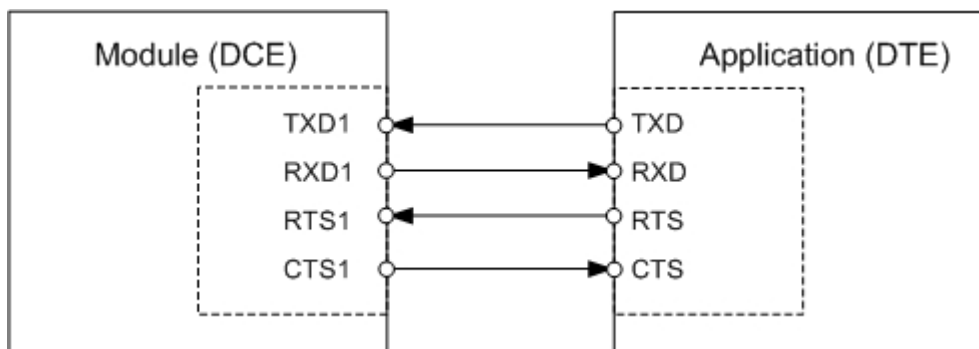


Figure 8: Serial interface ASC1

#### Features

- Includes only the data lines TXD1 and RXD1 plus RTS1 and CTS1 for hardware handshake.
- On ASC1 no RING line is available.
- Configured for 8 data bits, no parity and 1 or 2 stop bits.
- ASC1 can be operated at fixed bit rates from 300bps to 921600bps.
- Autobauding supports bit rates from 300bps up to 230400bps.
- Supports RTS1/CTS1 hardware flow control. Communication is possible by using only RXD and TXD lines, if RTS1 is pulled low.

The following figure shows the startup behavior of the asynchronous serial interface ASC1.

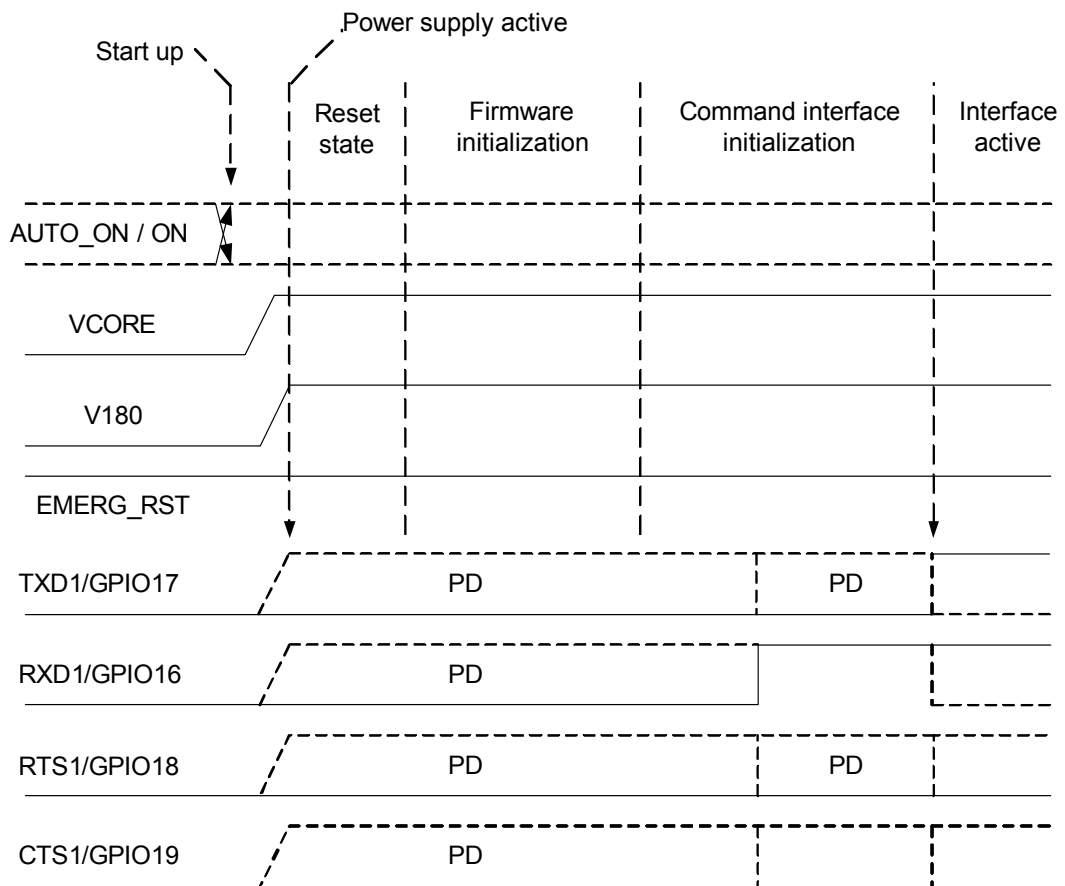

\*) For pull-down values see [Table 16](#).

**Figure 9:** ASC1 startup behavior

## 2.1.6 UICC/SIM/USIM Interface

EHS5-E/EHS5-US has an integrated UICC/SIM/USIM interface compatible with the 3GPP 31.102 and ETSI 102 221. This is wired to the host interface in order to be connected to an external SIM card holder. Five pads on the SMT application interface are reserved for the SIM interface.

The UICC/SIM/USIM interface supports 3V and 1.8V SIM cards. Please refer to [Table 2](#) for electrical specifications of the UICC/SIM/USIM interface lines depending on whether a 3V or 1.8V SIM card is used.


The CCIN signal serves to detect whether a tray (with SIM card) is present in the card holder. Using the CCIN signal is mandatory for compliance with the GSM 11.11 recommendation if the mechanical design of the host application allows the user to remove the SIM card during operation. To take advantage of this feature, an appropriate SIM card detect switch is required on the card holder. For example, this is true for the model supplied by Molex, which has been tested to operate with EHS5-E/EHS5-US and is part of the Thales reference equipment submitted for type approval. See [Section 7.1](#) for Molex ordering numbers.

**Table 4:** Signals of the SIM interface (SMT application interface)

Signal	Description
GND	Separate ground connection for SIM card to improve EMC.
CCCLK	Chipcard clock
CCVCC	SIM supply voltage.
CCIO	Serial data line, input and output.
CCRST	Chipcard reset
CCIN	Input on the baseband processor for detecting a SIM card tray in the holder. If the SIM is removed during operation the SIM interface is shut down immediately to prevent destruction of the SIM. The CCIN signal is by default low and will change to high level if a SIM card is inserted. The CCIN signal is mandatory for applications that allow the user to remove the SIM card during operation. The CCIN signal is solely intended for use with a SIM card. It must not be used for any other purposes. Failure to comply with this requirement may invalidate the type approval of EHS5-E/EHS5-US.

Note: No guarantee can be given, nor any liability accepted, if loss of data is encountered after removing the SIM card during operation. Also, no guarantee can be given for properly initializing any SIM card that the user inserts after having removed the SIM card during operation. In this case, the application must restart EHS5-E/EHS5-US.

The figure below shows a circuit to connect an external SIM card holder.

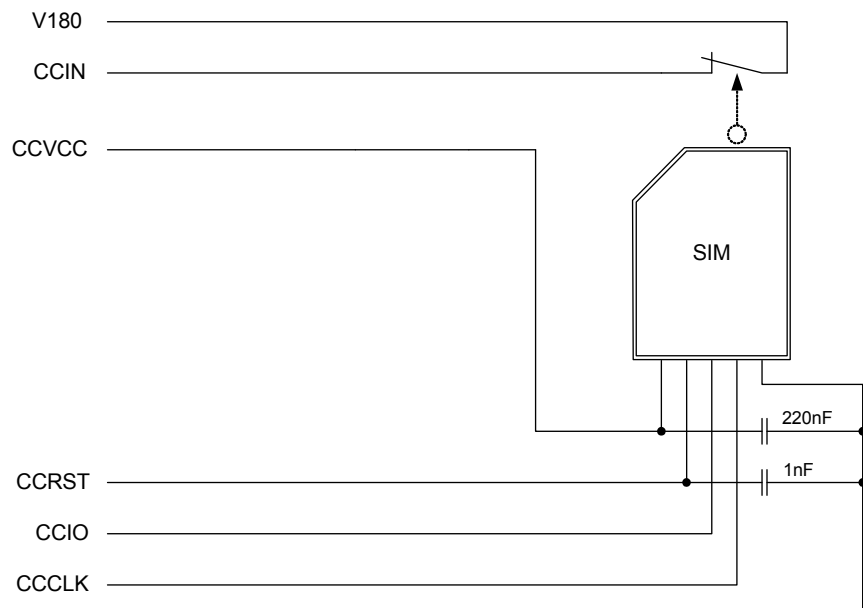

**Figure 10:** External UICC/SIM/USIM card holder circuit

The total cable length between the SMT application interface pads on EHS5-E/EHS5-US and the pads of the external SIM card holder must not exceed 100mm in order to meet the specifications of 3GPP TS 51.010-1 and to satisfy the requirements of EMC compliance.

To avoid possible cross-talk from the CCCLK signal to the CCIO signal be careful that both lines are not placed closely next to each other. A useful approach is using a GND line to shield the CCIO line from the CCCLK line.

An example for an optimized ESD protection for the SIM interface is shown in [Section 2.1.6.1](#).

### 2.1.6.1 Enhanced ESD Protection for SIM Interface

To optimize ESD protection for the SIM interface it is possible to add ESD diodes to the SIM interface lines as shown in the example given in [Figure 11](#).

The example was designed to meet ESD protection according ETSI EN 301 489-1/-52: Contact discharge: ± 4kV, air discharge: ± 8kV.

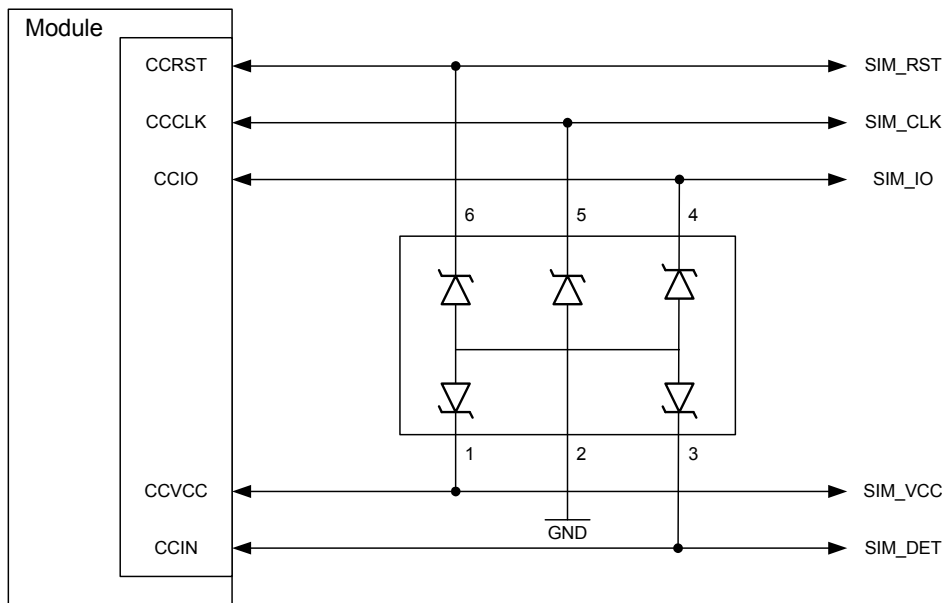


Figure 11: SIM interface - enhanced ESD protection



### 2.1.7 Digital Audio Interface

Four EHS5-E/EHS5-US GPIO lines can be configured as digital audio interface (DAI) that can be employed as pulse code modulation interface (see Section 2.1.7.1) or as inter IC sound interface (see Section 2.1.7.2). Operation of these interface variants is mutually exclusive, and can be configured by AT command (see [1]).

The following figure shows the start up behaviour of the DAI interface. The start up configuration of functions will be activated after the software initialization of the command interface. With an active state of CTS0 (low level) the initialization of the DAI interface is finished.

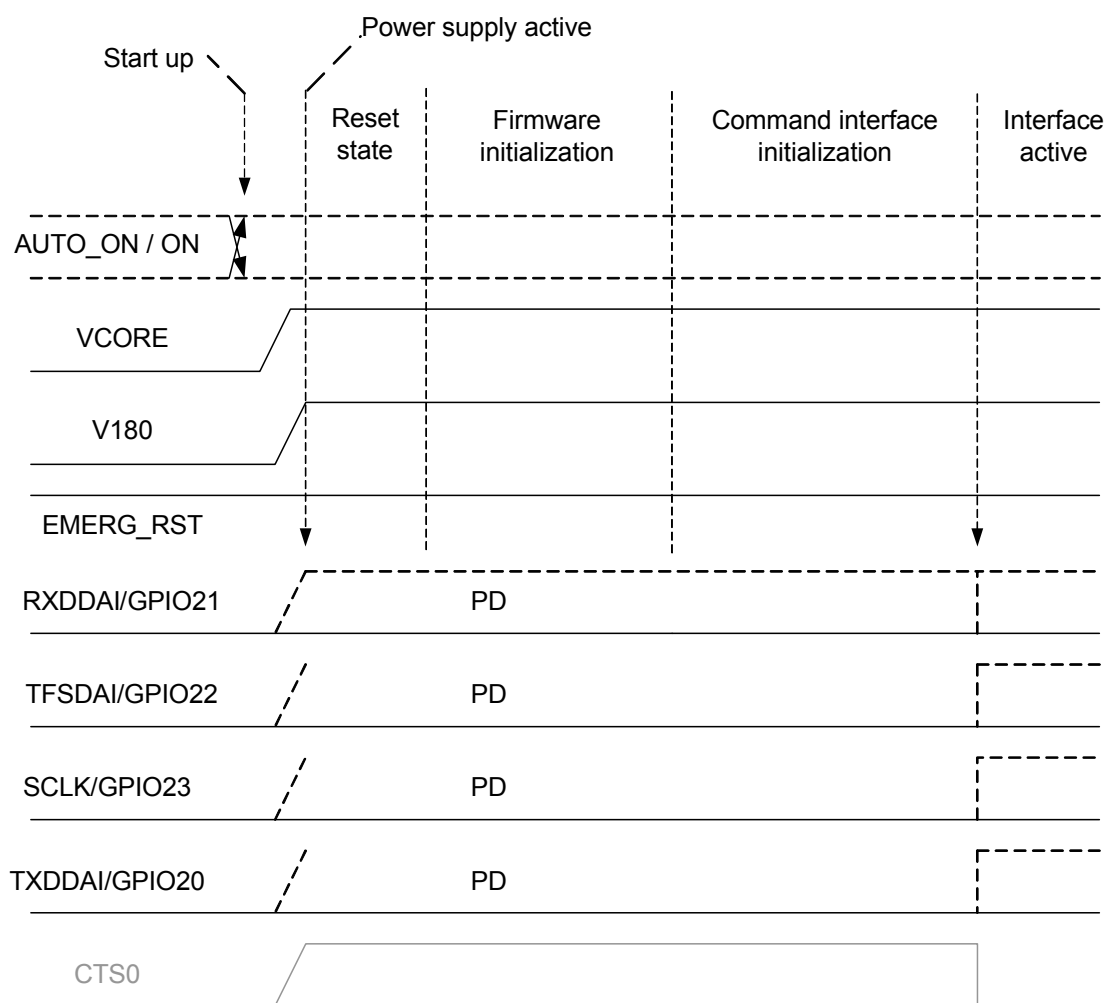


Figure 12: DAI startup timing

### 2.1.7.1 Pulse Code Modulation Interface (PCM)

The DAI can be used to connect audio devices capable of pulse code modulation (PCM). The PCM functionality allows for the use of an external codec like the W681360.

The PCM interface supports the following features:

- Master and Slave mode
- Long frame and short frame
- 8kHz sample rate / 125µs frame duration (narrow band), 16kHz sample rate / 62.5µs frame duration (wide band)
- Bit clock: 256kHz (PCM long frame, sample rate: 8kHz), 264kHz (PCM short frame, sample rate: 8kHz), 512kHz (PCM long frame, sample rate: 16kHz), 528kHz (PCM short frame, sample rate: 16kHz)
- The most significant bit MSB is transferred first
- Data write at rising edge / data read at falling edge
- Common frame sync signal for transmit and receive

The four GPIO lines can be configured as DAI/PCM interface signals as follows: GPIO20 --> TXDDAI, GPIO21--> RXDDAI, GPIO22 --> TFSDAI and GPIO23 --> SCLK. The configuration is done by AT command (see [1]). It is non-volatile and becomes active after a module restart. [Table 5](#) describes the available DAI/PCM lines at the digital audio interface. For electrical details see [Section 2.1.2](#).

**Table 5:** Overview of DAI/PCM lines

Signal name	Input/Output	Description
TXDDAI	O	PCM data from EHS5-E/EHS5-US to external codec.
RXDDAI	I	PCM data from external codec to EHS5-E/EHS5-US.
TFSDAI	O	Frame synchronization signal to external codec
SCLK	O	Bit clock to external codec

Figure 13 shows the timing of a PCM long frame.

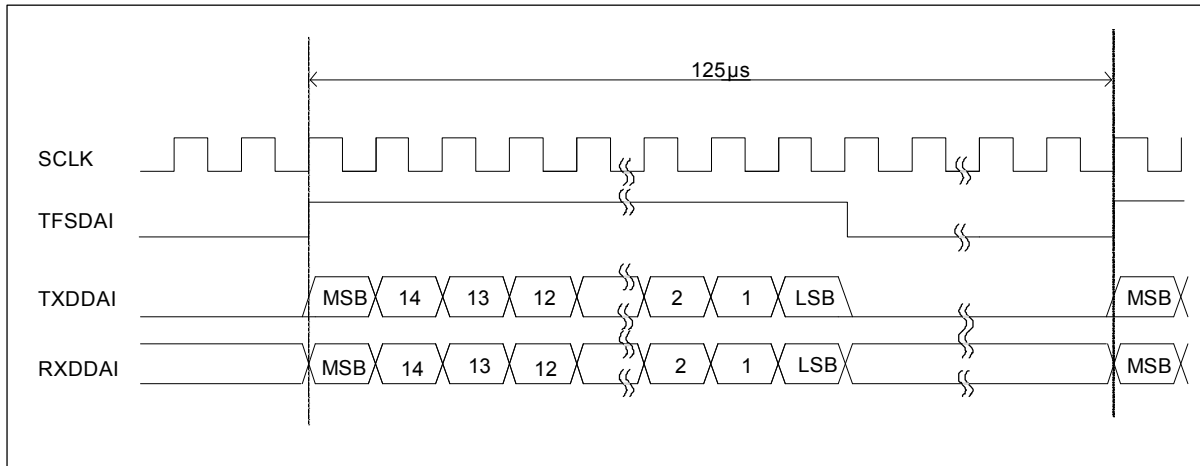


Figure 13: Long frame PCM timing, 8kHz sample rate

Figure 14 shows the timing of a PCM short frame.

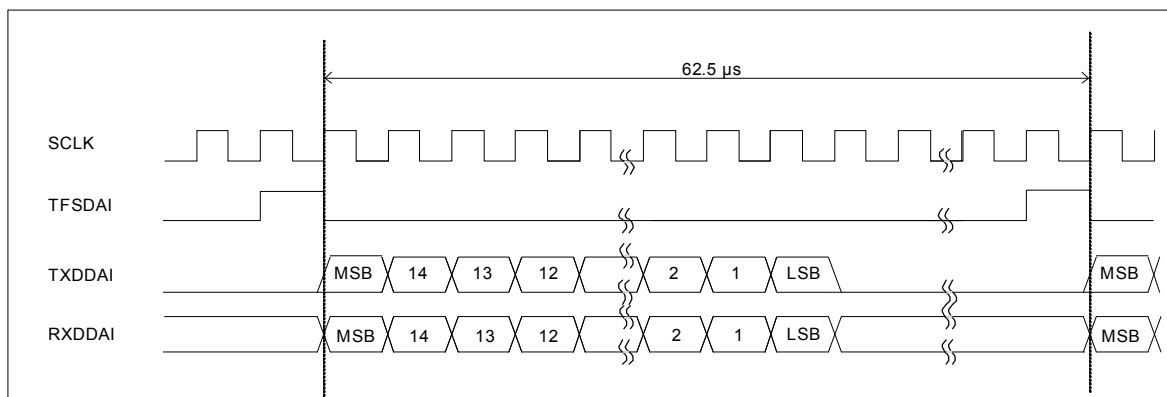


Figure 14: Short frame PCM timing, 16kHz sample rate

### 2.1.7.2 Inter IC Sound Interface

The Inter IC Sound interface (I<sup>2</sup>S) is enabled using the AT command AT^SAIC (see [1]). An activation is possible only out of call and out of tone presentation. The I2S properties and capabilities comply with the requirements laid out in the Phillips I2S Bus Specifications, revised June 5, 1996.

The I<sup>2</sup>S interface has the following characteristics:

- Clock Modes: Master with permanent clock option
- Sampling Rate: 8kHz (narrow band), 16kHz (wide band)
- Bit clock: 256kHz (sample rate: 8kHz), 512kHz (sample rate: 16kHz)


The digital audio interface pads available for the PCM interface are also available for the I2S interface. In I2S mode they have the same electrical characteristics (for more information on the DOUT, DIN, FSC, and BCLK pads please refer to Section 2.1.2 and Section 2.1.7.1).

The table below lists the available pads at the module’s digital audio interface.

**Table 6:** Overview of DAI/I<sup>2</sup>S lines

Signal name	Input/Output	Description
TXDDAI	O	I <sup>2</sup> S data from module to external codec.
RXDDAI	I	I <sup>2</sup> S data from external codec to module.
TFSDAI	O	Frame synchronization signal to external codec: Word alignment (WS)
SCLK	O	Bit clock to external codec.

The following figure shows the I<sup>2</sup>S timing for the master mode available with the module.

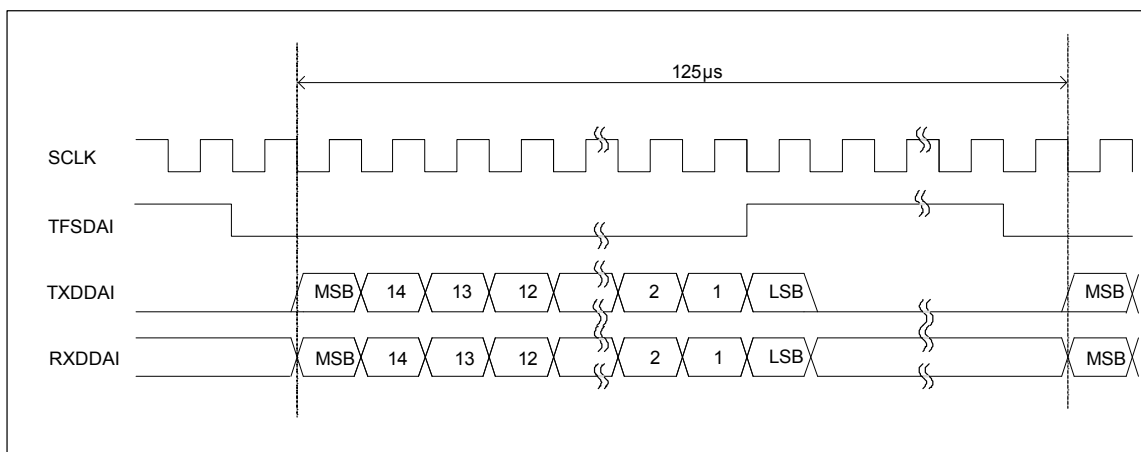

**Figure 15:** I<sup>2</sup>S timing, 8kHz sample rate

### 2.1.7.3 Solutions for the Digital Audio Interface (DAI/PCM)

Figure 16 and Figure 17 show an example of using the digital audio interface of the module. The below mentioned sample Nuvoton codec W681360 can be replaced with a DSP. In the example, framesync and clock master is the module (TFSDAI line) and thus the GSM network.

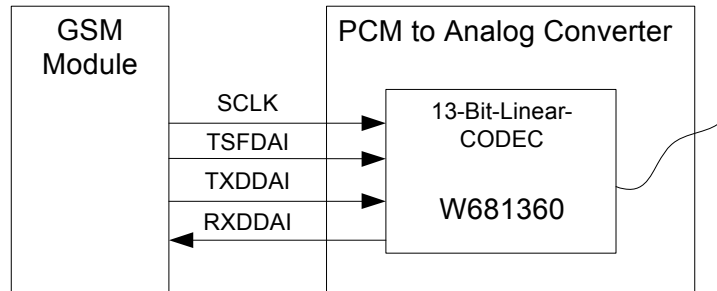


Figure 16: Block circuit for DAI/PCM to analog converter

This DAI/PCM analog converter is well suited for evaluating and testing a telephone handset and can be used instead of the headset interface of the DSB75.

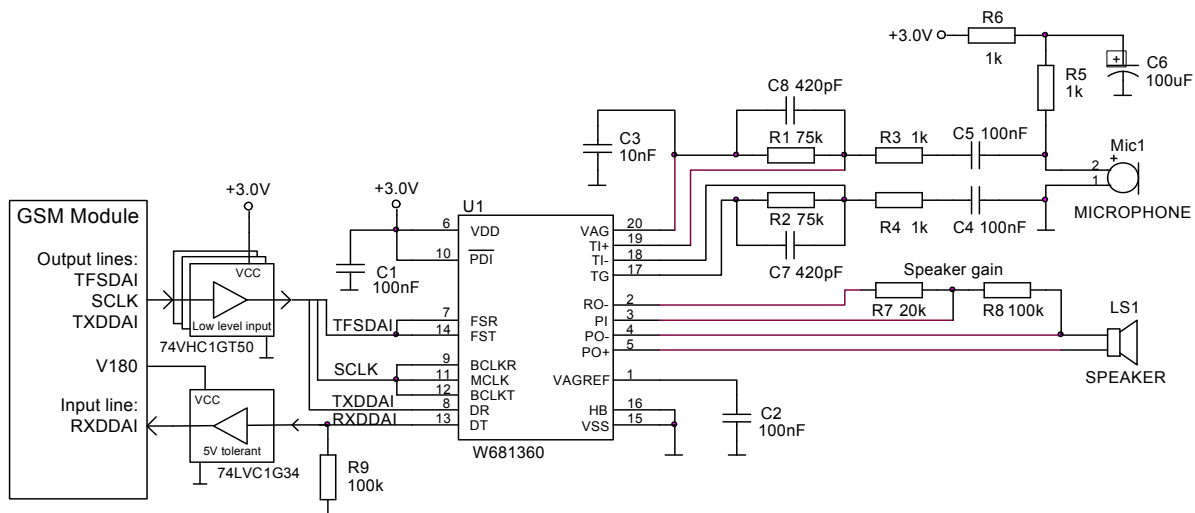


Figure 17: Sample circuit for analog to DAI/PCM box

The logical levels and the interface at connector J1 are compatible to the DSB75 PCM interface. On the module side, the PCM interface has to be enabled. This can be done by using the following AT command: `AT^SCFG="GPIO/mode/DAI", "std"`.

Please note that level converters are required between the module's 1.8V digital audio lines and the 3.0V audio codec interface lines. Possible level converters are for example 74VHC1GT50 (up) and 74LVC1G34 (down). See Figure 17 and refer to Section 2.3.1 for more information on a possible sample level conversion circuit.

### 2.1.8 RTC Backup

The internal Real Time Clock of EHS5-E/EHS5-US is supplied from a separate voltage regulator in the power supply component which is also active when EHS5-E/EHS5-US is in Power Down mode and BATT+ is available. An alarm function is provided that allows to wake up EHS5-E/EHS5-US without logging on to the GSM/UMTS network.

In addition, you can use the VDDL P pad to backup the RTC from an external capacitor. The capacitor is charged from the internal LDO of EHS5-E/EHS5-US. If the voltage supply at BATT+ is disconnected the RTC can be powered by the capacitor. The size of the capacitor determines the duration of buffering when no voltage is applied to EHS5-E/EHS5-US, i.e. the greater the capacitor the longer EHS5-E/EHS5-US will save the date and time. The RTC can also be supplied from an external battery (rechargeable or non-chargeable). In this case the electrical specification of the VDDL P pad (see [Section 2.1.2](#)) has to be taken in to account.

[Figure 18](#) shows an RTC backup configuration. A serial 1k $\Omega$  resistor has to be placed on the application next to VDDL P. It limits the input current of an empty capacitor or battery.

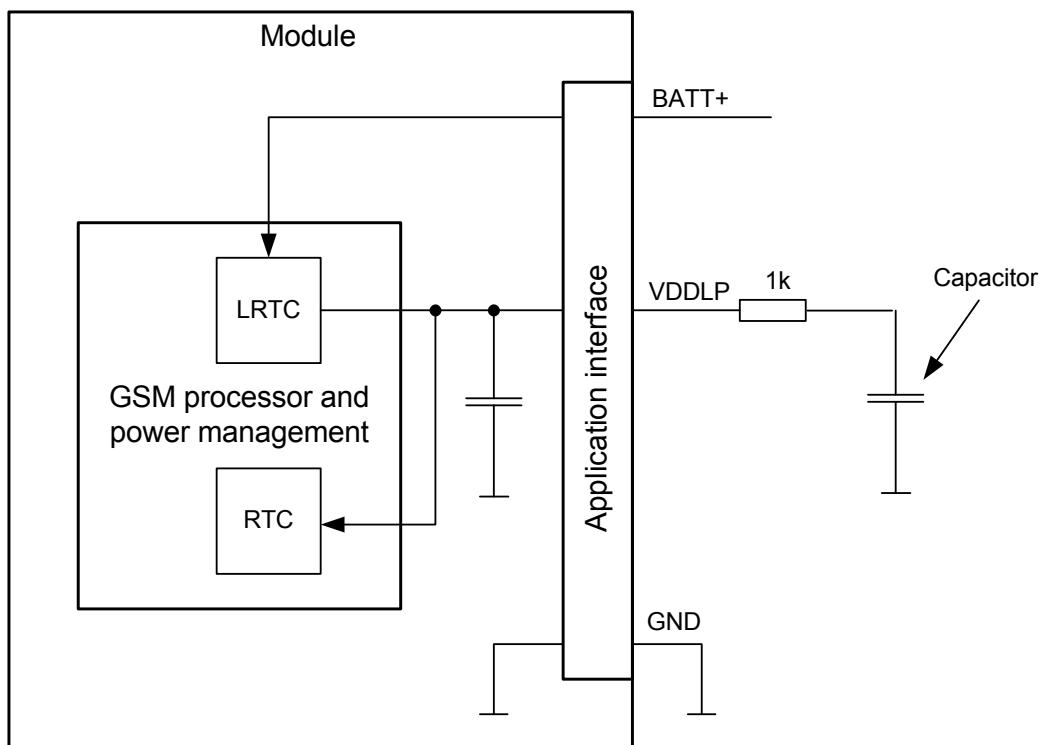


Figure 18: RTC supply variants

## 2.1.9 GPIO Interface

EHS5-E offers a GPIO interface with 17 GPIO lines. The GPIO lines are shared with other interfaces or functions: Fast shutdown (see [Section 2.1.14.4](#)), status LED (see [Section 2.1.14.1](#)), the PWM functionality (see [Section 2.1.12](#)), an pulse counter (see [Section 2.1.13](#)), ASC0 (see [Section 2.1.4](#)), ASC1 (see [Section 2.1.5](#)), an SPI interface (see [Section 2.1.11](#)) and a PCM interface (see [Section 2.1.7](#))

The following table shows the configuration variants for the GPIO pads. All variants are mutually exclusive, i.e. a pad configured for instance as Status LED is locked for alternative usage.


**Table 7:** GPIO lines and possible alternative assignment

GPIO	Fast Shutdown	Status LED	PWM	Pulse Counter	ASC0	ASC1	SPI	PCM
GPIO1					DTR0			
GPIO2					DCD0			
GPIO3					DSR0		SPI_CLK	
GPIO4	FST_SHDN							
GPIO5		Status LED						
GPIO6			PWM2					
GPIO7			PWM1					
GPIO8				COUNTER				
GPIO16						RXD1	MOSI	
GPIO17						TXD1	MISO	
GPIO18						RTS1		
GPIO19						CTS1	SPI_CS	
GPIO20								TXDDAI
GPIO21								RXDDAI
GPIO22								TFSDAI
GPIO23								SCLK
GPIO24					RING0			

After startup, the above mentioned alternative GPIO line assignments can be configured using AT commands (see [\[1\]](#)). The configuration is non-volatile and available after module restart.

2.1 Application Interface

The following figure shows the startup behavior of the GPIO interface. With an active state of the ASC0 interface line CTS0, the initialization of the GPIO interface lines is also finished.

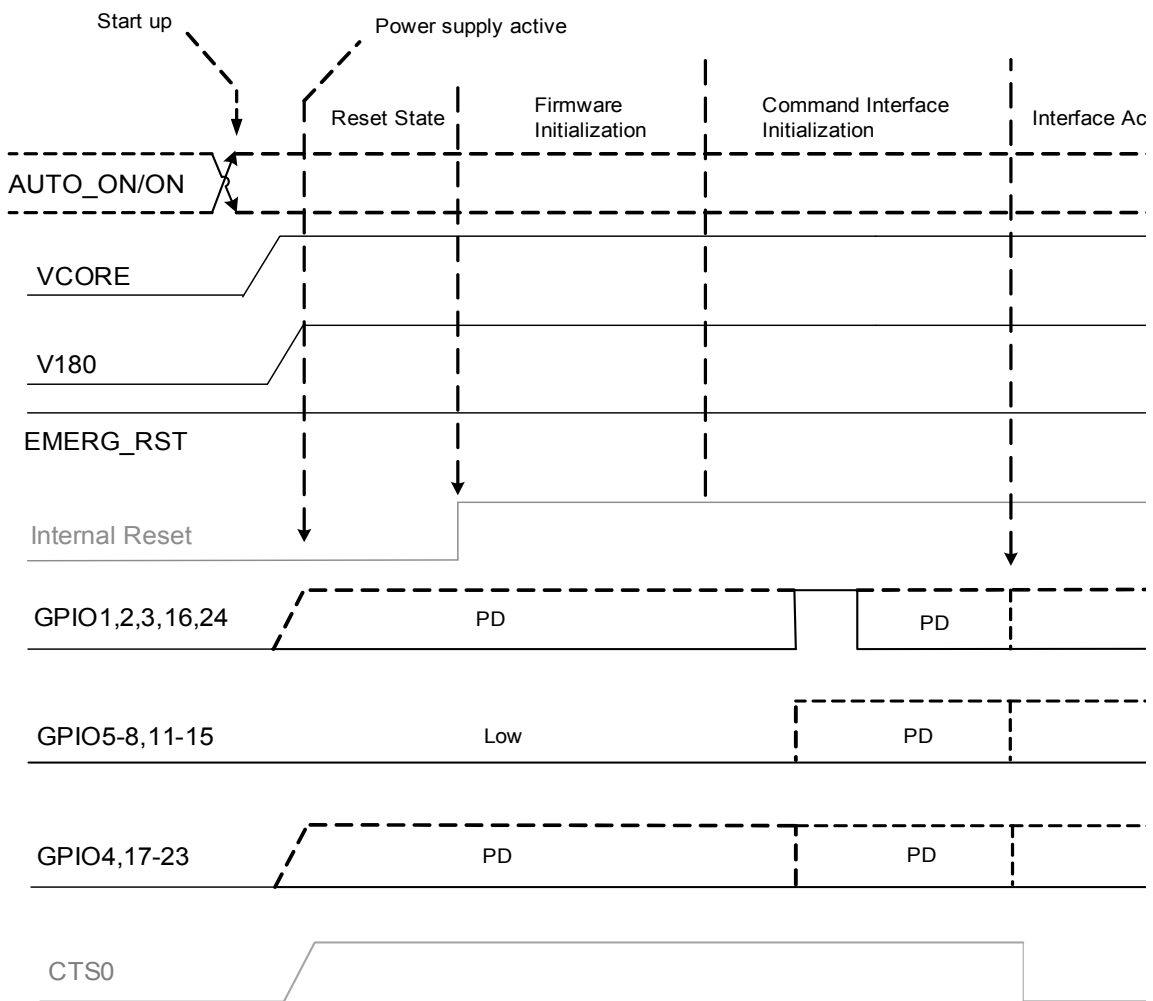

\*) For pull down values see [Table 12](#).

**Figure 19:** GPIO startup behavior



### 2.1.10 I<sup>2</sup>C Interface

I<sup>2</sup>C is a serial, 8-bit oriented data transfer bus for bit rates up to 400kbps in Fast mode. It consists of two lines, the serial data line I2CDAT and the serial clock line I2CCLK. The module acts as a single master device, e.g. the clock I2CCLK is driven by the module. I2CDAT is a bi-directional line. Each device connected to the bus is software addressable by a unique 7-bit address, and simple master/slave relationships exist at all times. The module operates as master-transmitter or as master-receiver. The customer application transmits or receives data only on request of the module.

To configure and activate the I2C bus use the AT^SSPI command. Detailed information on the AT^SSPI command as well explanations on the protocol and syntax required for data transmission can be found in [1].

The I<sup>2</sup>C interface can be powered via the V180 line of EHS5-E/EHS5-US. If connected to the V180 line, the I<sup>2</sup>C interface will properly shut down when the module enters the Power Down mode.

In the application I2CDAT and I2CCLK lines need to be connected to a positive supply voltage via a pull-up resistor. For electrical characteristics please refer to Table 2.

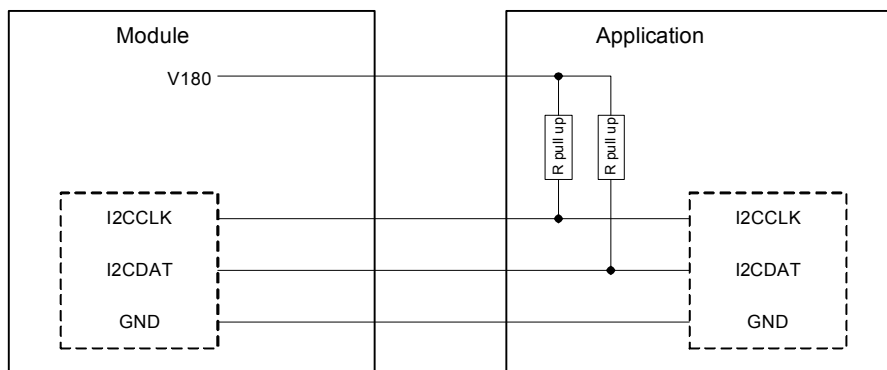


Figure 20: I<sup>2</sup>C interface connected to V180

Note: Good care should be taken when creating the PCB layout of the host application: The traces of I2CCLK and I2CDAT should be equal in length and as short as possible.

2.1 Application Interface

The following figure shows the startup behavior of the I<sup>2</sup>C interface. With an active state of the ASC0 interface (i.e. CTS0 is at low level) the initialization of the I<sup>2</sup>C interface is also finished.

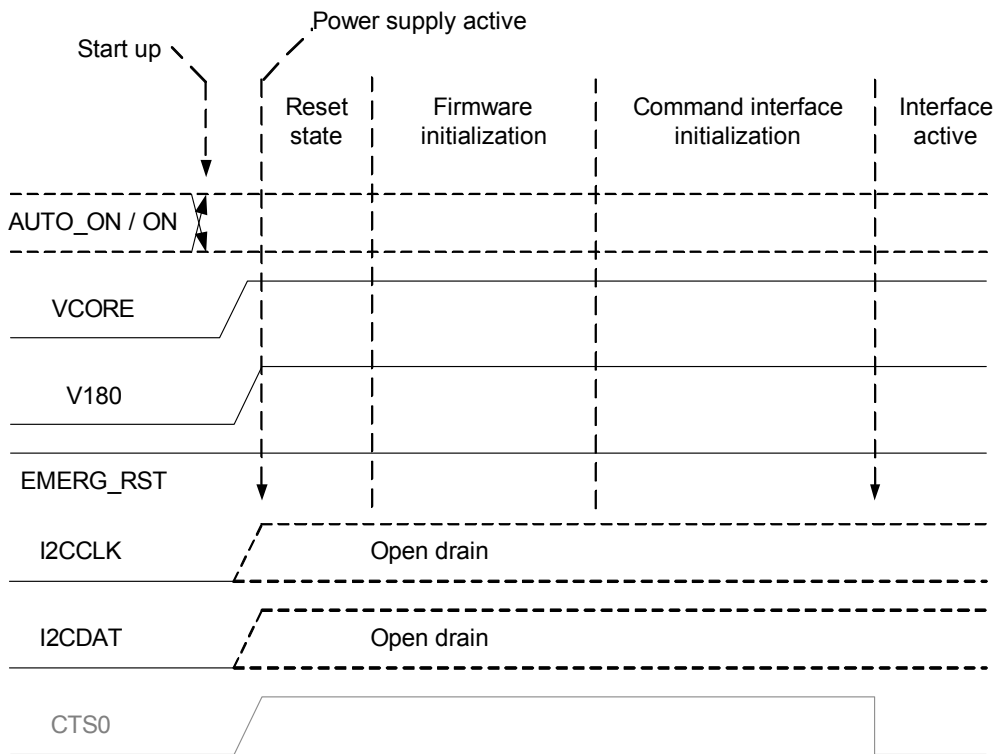


Figure 21: I<sup>2</sup>C startup behavior

### 2.1.11 SPI Interface

Four EHS5-E/EHS5-US GPIO interface lines can be configured as Serial Peripheral Interface (SPI). The SPI is a synchronous serial interface for control and data transfer between EHS5-E/EHS5-US and the external application. Only one application can be connected to the SPI and the interface supports only master mode. The transmission rates are up to 6.5Mbit/s. The SPI interface comprises the two data lines MOSI and MISO, the clock line SPI\_CLK a well as the chip select line SPI\_CS.

The four GPIO lines can be configured as SPI interface signals as follows: GPIO3 --> SPI\_CLK, GPIO16 --> MOSI, GPIO17 --> MISO and GPIO19 --> SPI\_CS. The configuration is done by AT command (see [1]). It is non-volatile and becomes active after a module restart.

The GPIO lines are also shared with the ASC1 signal lines and the ASC0 modem status signal line DSR0.

To configure and activate the SPI interface use the AT^SSPI command. Detailed information on the AT^SSPI command as well explanations on the SPI modes required for data transmission can be found in [1].

In general, SPI supports four operation modes. The modes are different in clock phase and clock polarity. The module's SPI mode can be configured by using the AT command AT^SSPI. Make sure the module and the connected slave device works with the same SPI mode.

Figure 22 shows the characteristics of the four SPI modes. The SPI modes 0 and 3 are the most common used modes. For electrical characteristics please refer to Table 2.

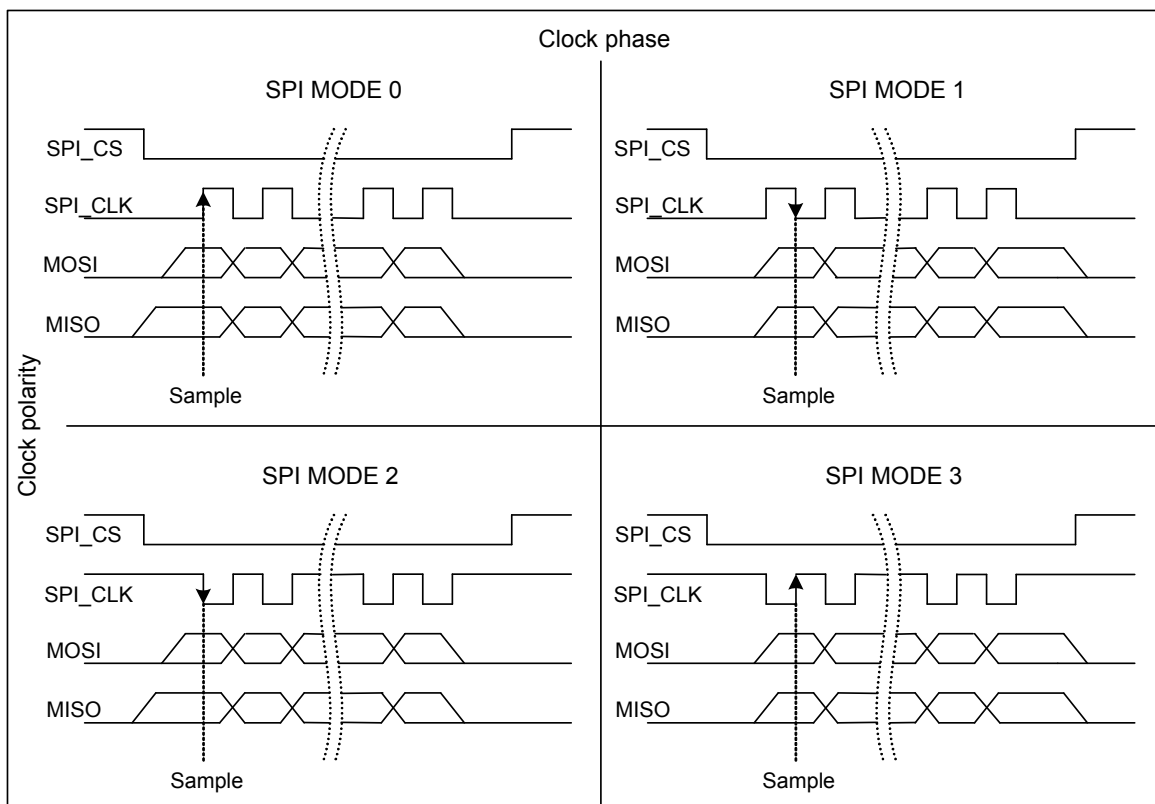


Figure 22: Characteristics of SPI modes

## 2.1.12 PWM Interfaces

The GPIO6 and GPIO7 interface lines can be configured as Pulse Width Modulation (PWM) interface lines PWM1 and PWM2. The PWM interface lines can be used, for example, to connect buzzers. The PWM1 line is shared with GPIO7 and the PWM2 line is shared with GPIO6 (for GPIOs see [Section 2.1.9](#)). GPIO and PWM functionality are mutually exclusive.

The startup behavior of the lines is shown in [Figure 19](#).

## 2.1.13 Pulse Counter

The GPIO8 line can be configured as pulse counter line COUNTER. The pulse counter interface can be used, for example, as a clock (for GPIOs see [Section 2.1.9](#)).

## 2.1.14 Control Signals

### 2.1.14.1 Status LED

The GPIO5 interface line can be configured to drive a status LED that indicates different operating modes of the module (for GPIOs see [Section 2.1.9](#)). GPIO and LED functionality are mutually exclusive.

To take advantage of this function connect an LED to the GPIO5/LED line as shown in [Figure 23](#).

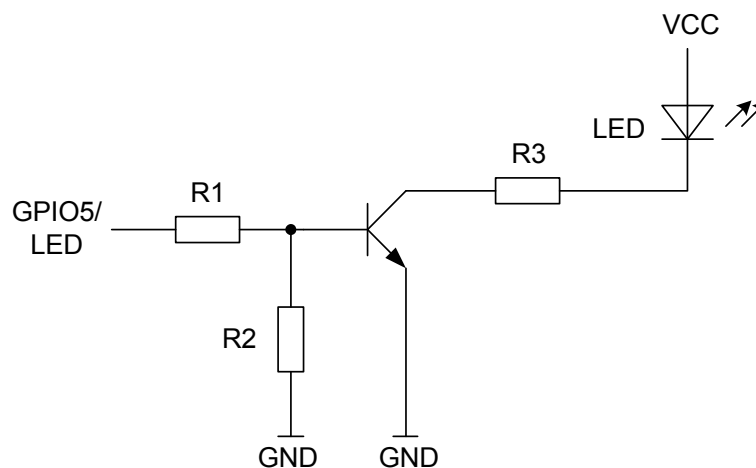


Figure 23: Status signaling with LED driver

### 2.1.14.2 Power Indication Circuit

In Power Down mode the maximum voltage at any digital or analog interface line must not exceed +0.3V (see also [Section 2.1.2.1](#)). Exceeding this limit for any length of time might cause permanent damage to the module.

It is therefore recommended to implement a power indication signal that reports the module's power state and shows whether it is active or in Power Down mode. While the module is in Power Down mode all signals with a high level from an external application need to be set to low state or high impedance state. The sample power indication circuit illustrated in [Figure 24](#) denotes the module's active state with a low signal and the module's Power Down mode with a high signal or high impedance state.

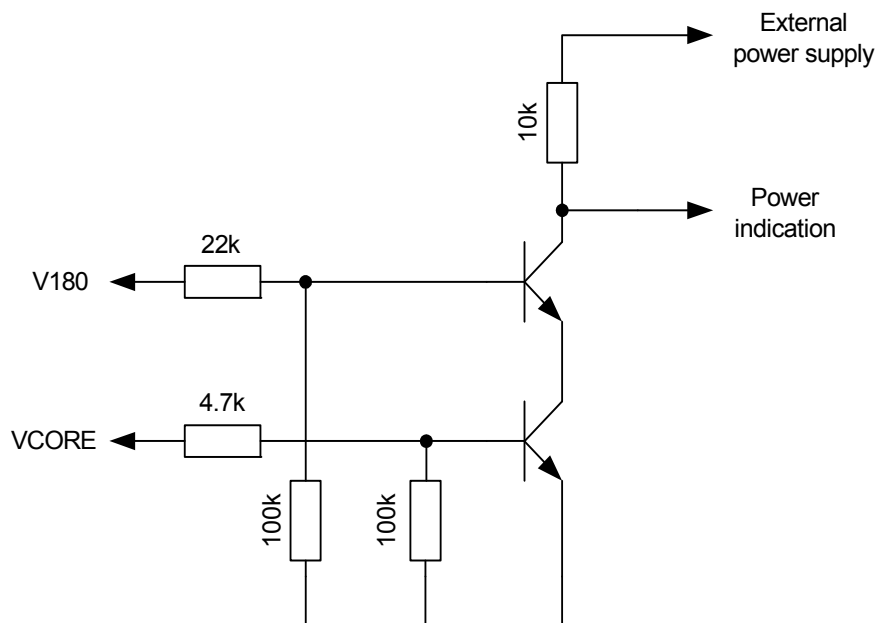


Figure 24: Power indication circuit

### 2.1.14.3 Host Wakeup

If no call, data or message transfer is in progress, the host may shut down its own USB interface to save power. If a call or other request (URC's, messages) arrives, the host can be notified of these events and be woken up again by a state transition of the ASC0 interface's RING0 line. This functionality should only be used with legacy USB applications not supporting the recommended USB suspend and resume mechanism as described in [\[5\]](#) (see also [Section 2.1.3.1](#)). For more information on how to configure the RING0 line by AT^SCFG command see [\[1\]](#).

Possible RING0 line states are listed in [Table 8](#).

Table 8: Host wakeup line


Signal	I/O	Description
RING0	O	Inactive to active low transition: 0 = The host shall wake up 1 = No wake up request

### 2.1.14.4 Fast Shutdown

The GPIO4 interface line can be configured as fast shutdown signal line FST\_SHDN. The configured FST\_SHDN line is an active low control signal and must be applied for at least 10 milliseconds. If unused this line can be left open because of a configured internal pull-up resistor. Before setting the FST\_SHDN line to low, the ON signal should be set to low (see [Figure 25](#)). Otherwise there might be back powering at the ON line in Power Down mode.

By default, the fast shutdown feature is disabled. It has to be enabled using the AT command AT^SCFG "MEShutdown/Fso". For details see [\[1\]](#).

If enabled, a low impulse >10 milliseconds on the GPIO4/FST\_SHDN line starts the fast shutdown (see [Figure 25](#)). The fast shutdown procedure still finishes any data activities on the module's flash file system, thus ensuring data integrity, but will no longer deregister gracefully from the network, thus saving the time required for network deregistration.

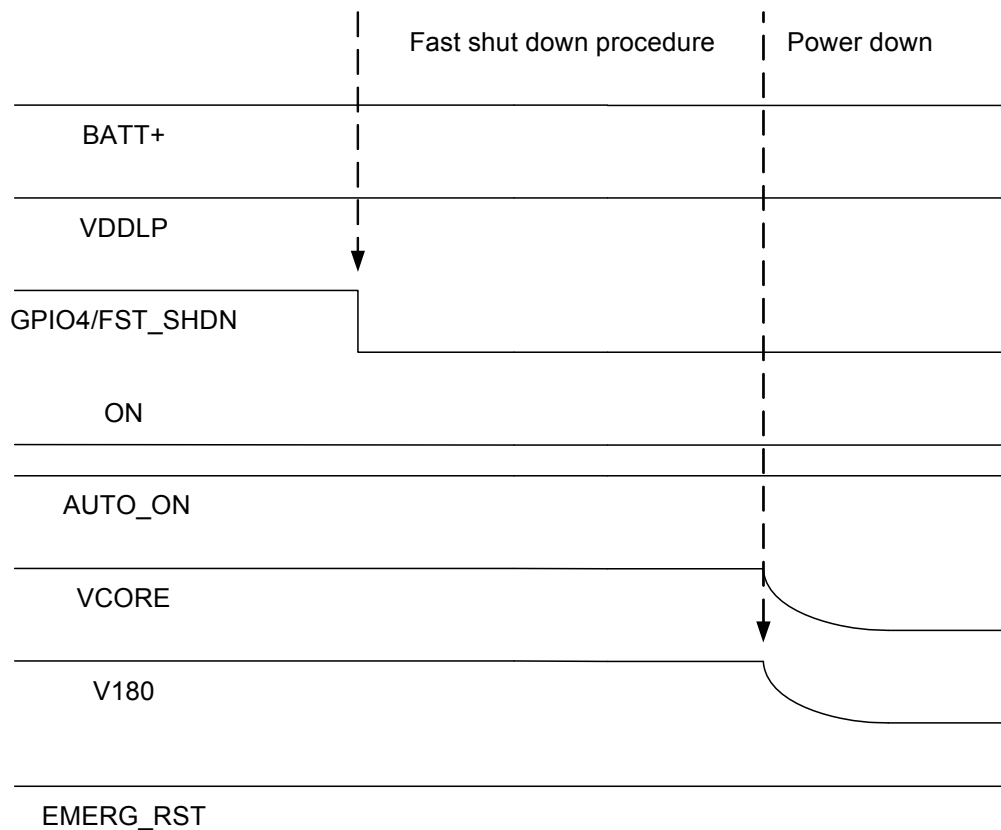

**Figure 25:** Fast shutdown timing

Please note that if enabled, the normal software controlled shutdown using AT^SMSO will also be a fast shutdown, i.e., without network deregistration. However, in this case no URCs including shutdown URCs will be provided by the AT^SMSO command.

## 2.2 RF Antenna Interface

The RF interface has an impedance of 50Ω. EHS5-E/EHS5-US is capable of sustaining a total mismatch at the antenna line without any damage, even when transmitting at maximum RF power.

The external antenna must be matched properly to achieve best performance regarding radiated power, modulation accuracy and harmonic suppression. Antenna matching networks are not included on the EHS5-E/EHS5-US module and should be placed in the host application if the antenna does not have an impedance of 50Ω.

Regarding the return loss EHS5-E/EHS5-US provides the following values in the active band:

**Table 9:** Return loss in the active band

State of module	Return loss of module	Recommended return loss of application
Receive	≥ 8dB	≥ 12dB
Transmit	not applicable	≥ 12dB

### 2.2.1 Antenna Interface Specifications

**Table 10:** RF Antenna interface GSM / UMTS<sup>1</sup>

Parameter	Conditions	Min.	Typical	Max.	Unit
UMTS/HSPA connectivity	Band I, II, V, VIII				
Receiver Input Sensitivity @ ARP	UMTS 850 Band V	-104.7/ -106.7	-110		dBm
	UMTS 900 Band VIII	-103.7	-110		dBm
	UMTS 1900 Band II	-104.7	-109		dBm
	UMTS 2100 Band I	-106.7	-110		dBm
RF Power @ ARP with 50Ω Load Board temperature <85°C	UMTS 850 Band V	+21	+24	+25	dBm
	UMTS 900 Band VIII	+21	+24	+25	dBm
	UMTS 1900 Band II	+21	+24	+25	dBm
	UMTS 2100 Band I	+21	+24	+25	dBm
GPRS coding schemes	Class 12, CS1 to CS4				
EGPRS	Class 12, MCS1 to MCS9				
GSM Class	Small MS				

## 2.2 RF Antenna Interface

Table 10: RF Antenna interface GSM / UMTS<sup>1</sup>

Parameter		Conditions	Min.	Typical	Max.	Unit
Static Receiver input Sensitivity @ ARP		GSM 850 / E-GSM 900	-102	-109		dBm
		GSM 1800 / GSM 1900	-102	-108		dBm
RF Power @ ARP with 50Ω Load	GSM	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
RF Power @ ARP with 50Ω Load, (ROPR = 0, i.e. no reduction)	GPRS, 1 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 1 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 2 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 2 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 3 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 3 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 4 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm



## 2.2 RF Antenna Interface

Table 10: RF Antenna interface GSM / UMTS<sup>1</sup>

Parameter		Conditions	Min.	Typical	Max.	Unit
RF Power @ ARP with 50Ω Load, (ROPR = 1)	GPRS, 1 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 1 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 2 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 2 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 3 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 3 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 4 TX	GSM 850 / E-GSM 900		31		dBm
		GSM 1800 / GSM 1900		28		dBm
	EDGE, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
RF Power @ ARP with 50Ω Load, (ROPR = 2)	GPRS, 1 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 1 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 2 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 2 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 3 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 3 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 4 TX	GSM 850 / E-GSM 900		29		dBm
		GSM 1800 / GSM 1900		26		dBm
	EDGE, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm

## 2.2 RF Antenna Interface

Table 10: RF Antenna interface GSM / UMTS<sup>1</sup>


Parameter		Conditions	Min.	Typical	Max.	Unit
RF Power @ ARP with 50Ω Load, (ROPR = 3)	GPRS, 1 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 1 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 2 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 2 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 3 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 3 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		24		dBm
	EDGE, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		24		dBm
RF Power @ ARP with 50Ω Load, (ROPR = 4, i.e. maximum reduction)	GPRS, 1 TX	GSM 850 / E-GSM 900		33		dBm
		GSM 1800 / GSM 1900		30		dBm
	EDGE, 1 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		26		dBm
	GPRS, 2 TX	GSM 850 / E-GSM 900		30		dBm
		GSM 1800 / GSM 1900		27		dBm
	EDGE, 2 TX	GSM 850 / E-GSM 900		24		dBm
		GSM 1800 / GSM 1900		23		dBm
	GPRS, 3 TX	GSM 850 / E-GSM 900		28.2		dBm
		GSM 1800 / GSM 1900		25.2		dBm
	EDGE, 3 TX	GSM 850 / E-GSM 900		22.2		dBm
		GSM 1800 / GSM 1900		21.2		dBm
	GPRS, 4 TX	GSM 850 / E-GSM 900		27		dBm
		GSM 1800 / GSM 1900		24		dBm
	EDGE, 4 TX	GSM 850 / E-GSM 900		21		dBm
		GSM 1800 / GSM 1900		20		dBm

1. Please note that the listed frequency bands apply as follows:

- EHS5-E: GSM/GPRS 900/1800MHz; UMTS/HSPA+: 900/2100MHz (Band I / VIII)
- EHS5-US: GSM/GPRS: 850/1900MHz; UMTS/HSPA+: 850/1900MHz (Band II / V)

## 2.2.2 Antenna Installation

The antenna is connected by soldering the antenna pad (RF\_OUT, i.e., pad #59) and its neighboring ground pads (GND, i.e., pads #58 and #60) directly to the application's PCB. The antenna pad is the antenna reference point (ARP) for EHS5-E/EHS5-US. All RF data specified throughout this document is related to the ARP.

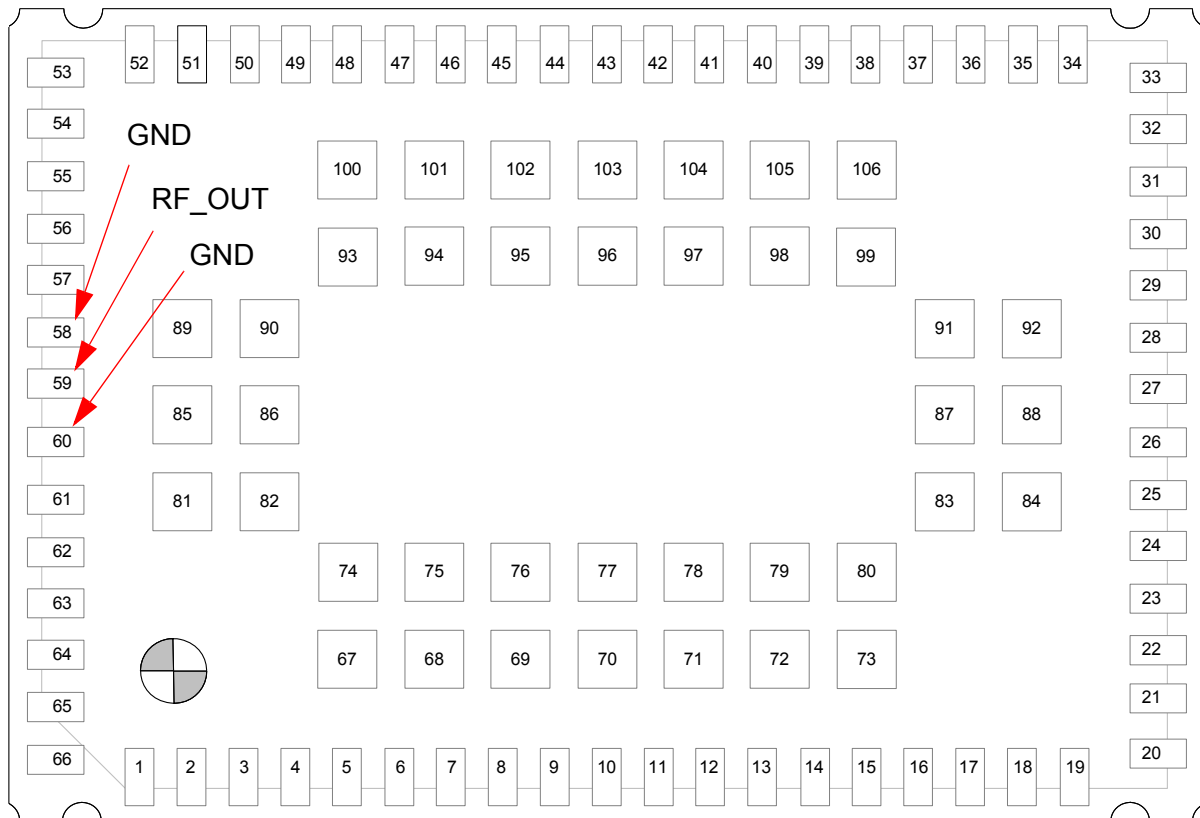

**Figure 26:** Antenna pads (bottom view)

The distance between the antenna RF\_OUT pad (#59) and its neighboring GND pads (#58, #60) has been optimized for best possible impedance. On the application PCB, special attention should be paid to these 3 pads, in order to prevent mismatch.

The wiring of the antenna connection line, starting from the antenna pad to the application antenna should result in a  $50\Omega$  line impedance. Line width and distance to the GND plane needs to be optimized with regard to the PCB's layer stack. Some examples are given in [Section 2.2.3](#).

To prevent receiver desensitization due to interferences generated by fast transients like high speed clocks on the application PCB, it is recommended to realize the antenna connection line using embedded Stripline rather than Micro-Stripline technology. Please see [Section 2.2.3.1](#) for an example.

For type approval purposes, the use of a  $50\Omega$  coaxial antenna connector (U.FL-R-SMT) might be necessary. In this case the U.FL-R-SMT connector should be placed as close as possible to EHS5-E/EHS5-US's antenna pad.

## 2.2.3 RF Line Routing Design

### 2.2.3.1 Line Arrangement Examples

Several dedicated tools are available to calculate line arrangements for specific applications and PCB materials - for example from <http://www.polarinstruments.com/> (commercial software) or from <http://web.awrcorp.com/Usa/Products/Optional-Products/TX-Line/> (free software).

#### Embedded Stripline

This figure below shows a line arrangement example for embedded stripline with 65µm FR4 prepreg (type: 1080) and 710µm FR4 core (4-layer PCB).



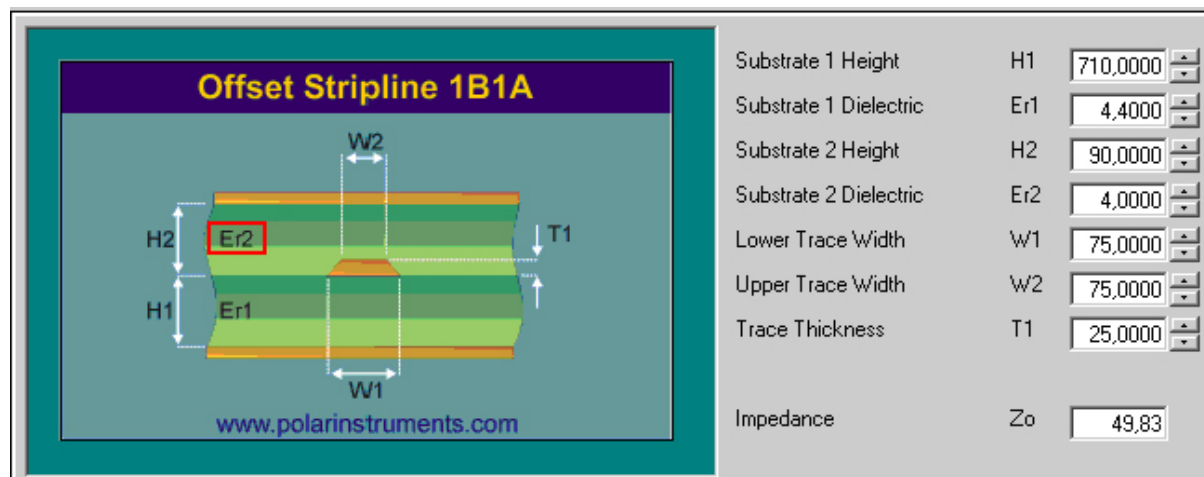


Figure 27: Embedded Stripline with 65µm prepreg (1080) and 710µm core

**Micro-Stripline**

This section gives two line arrangement examples for micro-stripline.

- Micro-Stripline on 1.0mm Standard FR4 2-Layer PCB  
The following two figures show examples with different values for D1 (ground strip separation).

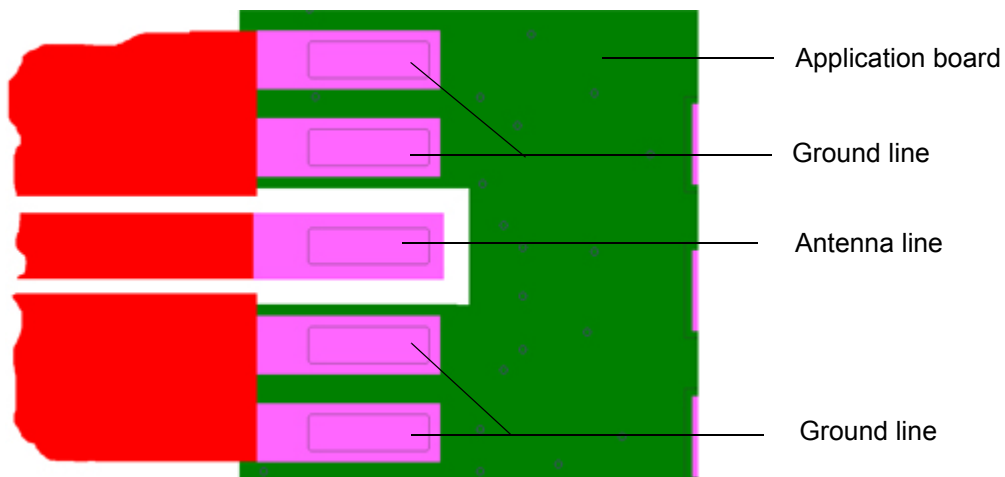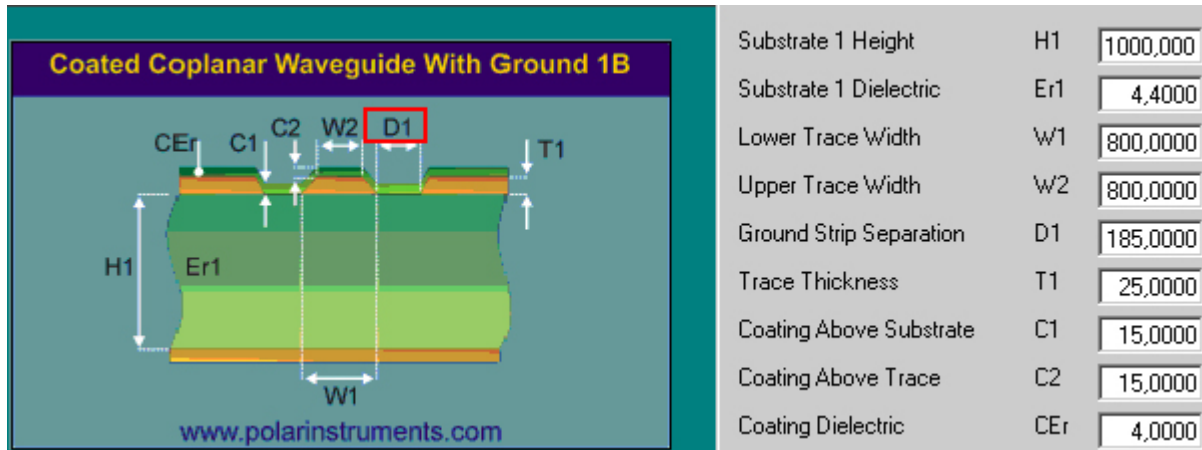

**Figure 28:** Micro-Stripline on 1.0mm standard FR4 2-layer PCB - example 1

2.2 RF Antenna Interface

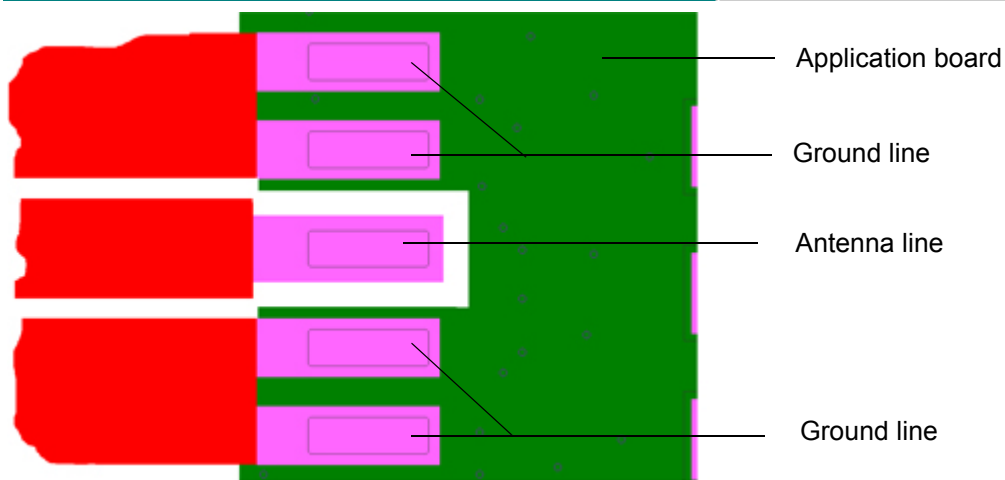
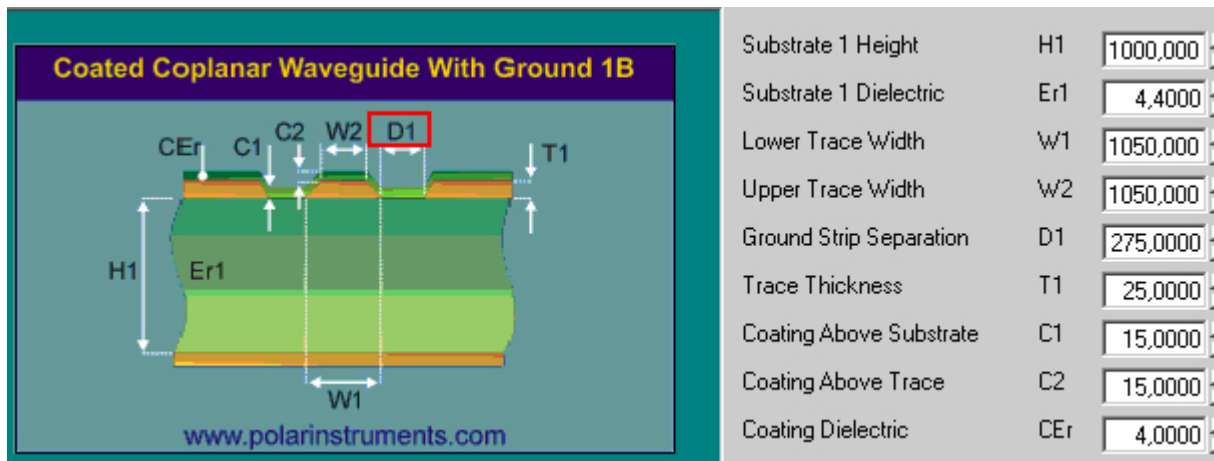


Figure 29: Micro-Stripline on 1.0mm Standard FR4 PCB - example 2

2.2 RF Antenna Interface

- Micro-Stripline on 1.5mm Standard FR4 2-Layer PCB  
The following two figures show examples with different values for D1 (ground strip separation).

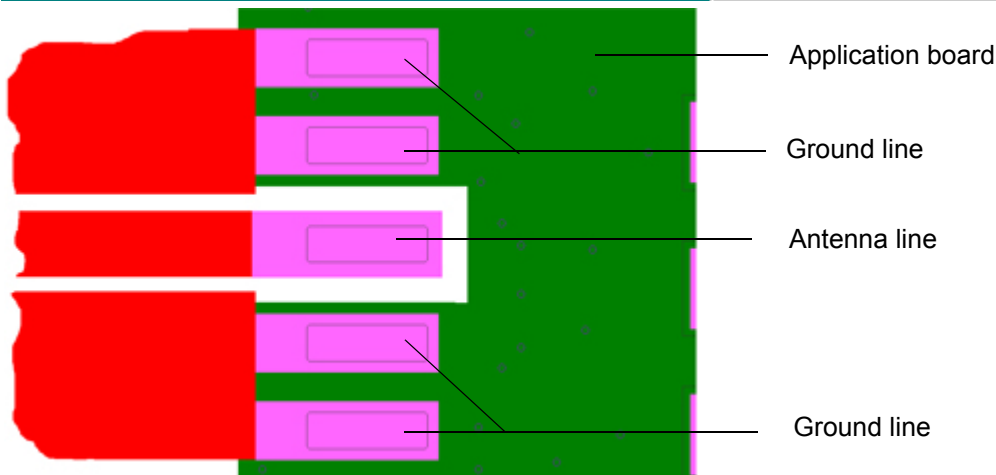
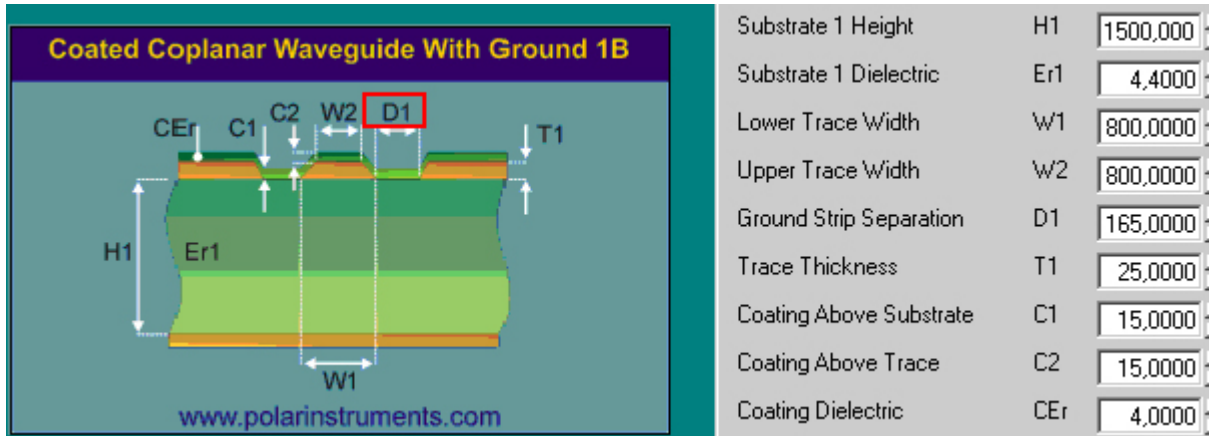


Figure 30: Micro-Stripline on 1.5mm Standard FR4 PCB - example 1

2.2 RF Antenna Interface

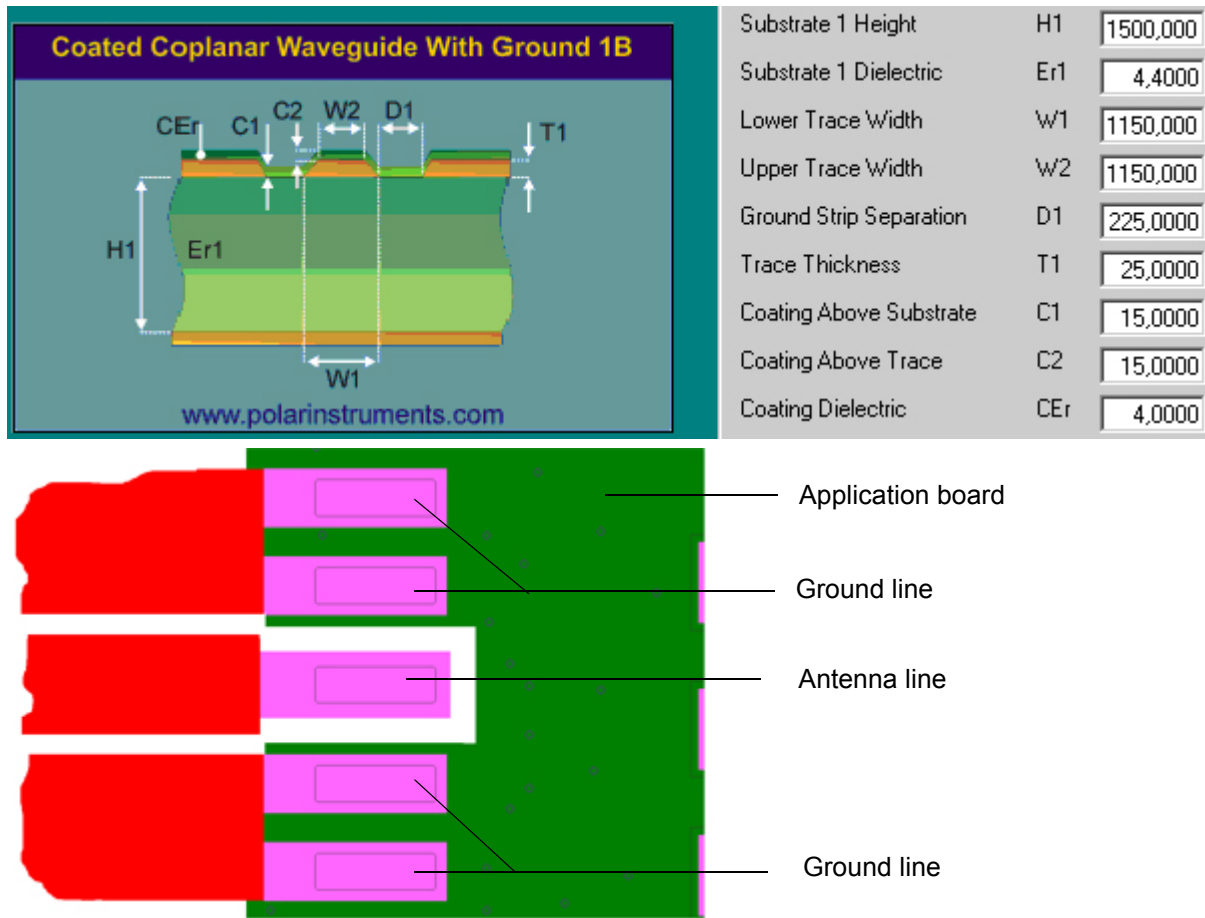


Figure 31: Micro-Stripline on 1.5mm Standard FR4 PCB - example 2



### 2.2.3.2 Routing Example

#### Interface to RF Connector

Figure 32 shows the connection of the module's antenna pad with an application PCB's coaxial antenna connector. Please note that the EHS5-E/EHS5-US bottom plane appears mirrored, since it is viewed from EHS5-E/EHS5-US top side. By definition the top of customer's board shall mate with the bottom of the EHS5-E/EHS5-US module.

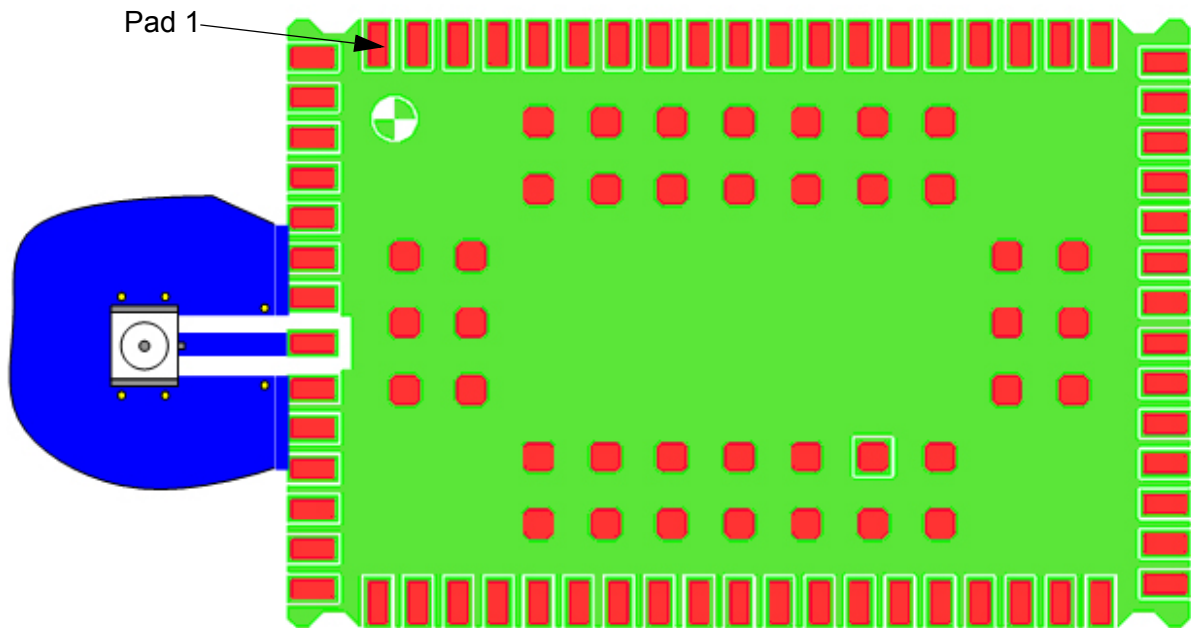


Figure 32: Routing to application's RF connector - top view

## 2.3 Sample Application

Figure 33 shows a typical example of how to integrate a EHS5-E/EHS5-US module with an application. Usage of the various host interfaces depends on the desired features of the application.

Because of the very low power consumption design, current flowing from any other source into the module circuit must be avoided, for example reverse current from high state external control lines. Therefore, the controlling application must be designed to prevent reverse current flow. Otherwise there is the risk of undefined states of the module during startup and shutdown or even of damaging the module.

Because of the high RF field density inside the module, it cannot be guaranteed that no self interference might occur, depending on frequency and the applications grounding concept. The potential interferers may be minimized by placing small capacitors (47pF) at suspected lines (e.g. RXD0, VDDL, and ON).

**While developing SMT applications it is strongly recommended to provide test points for certain signals, i.e., lines to and from the module - for debug and/or test purposes. The SMT application should allow for an easy access to these signals. For details on how to implement test points see [4].**

The EMC measures are best practice recommendations. In fact, an adequate EMC strategy for an individual application is very much determined by the overall layout and, especially, the position of components. For example, mounting the internal acoustic transducers directly on the PCB eliminates the need to use the ferrite beads shown in the sample schematic.


Depending on the micro controller used by an external application EHS5-E/EHS5-US's digital input and output lines may require level conversion. Section 2.3.1 shows a possible sample level conversion circuit.

Note: EHS5-E/EHS5-US is not intended for use with cables longer than 3m.

### Disclaimer

No warranty, either stated or implied, is provided on the sample schematic diagram shown in Figure 33 and the information detailed in this section. As functionality and compliance with national regulations depend to a great amount on the used electronic components and the individual application layout manufacturers are required to ensure adequate design and operating safeguards for their products using EHS5-E/EHS5-US modules.

2.3 Sample Application

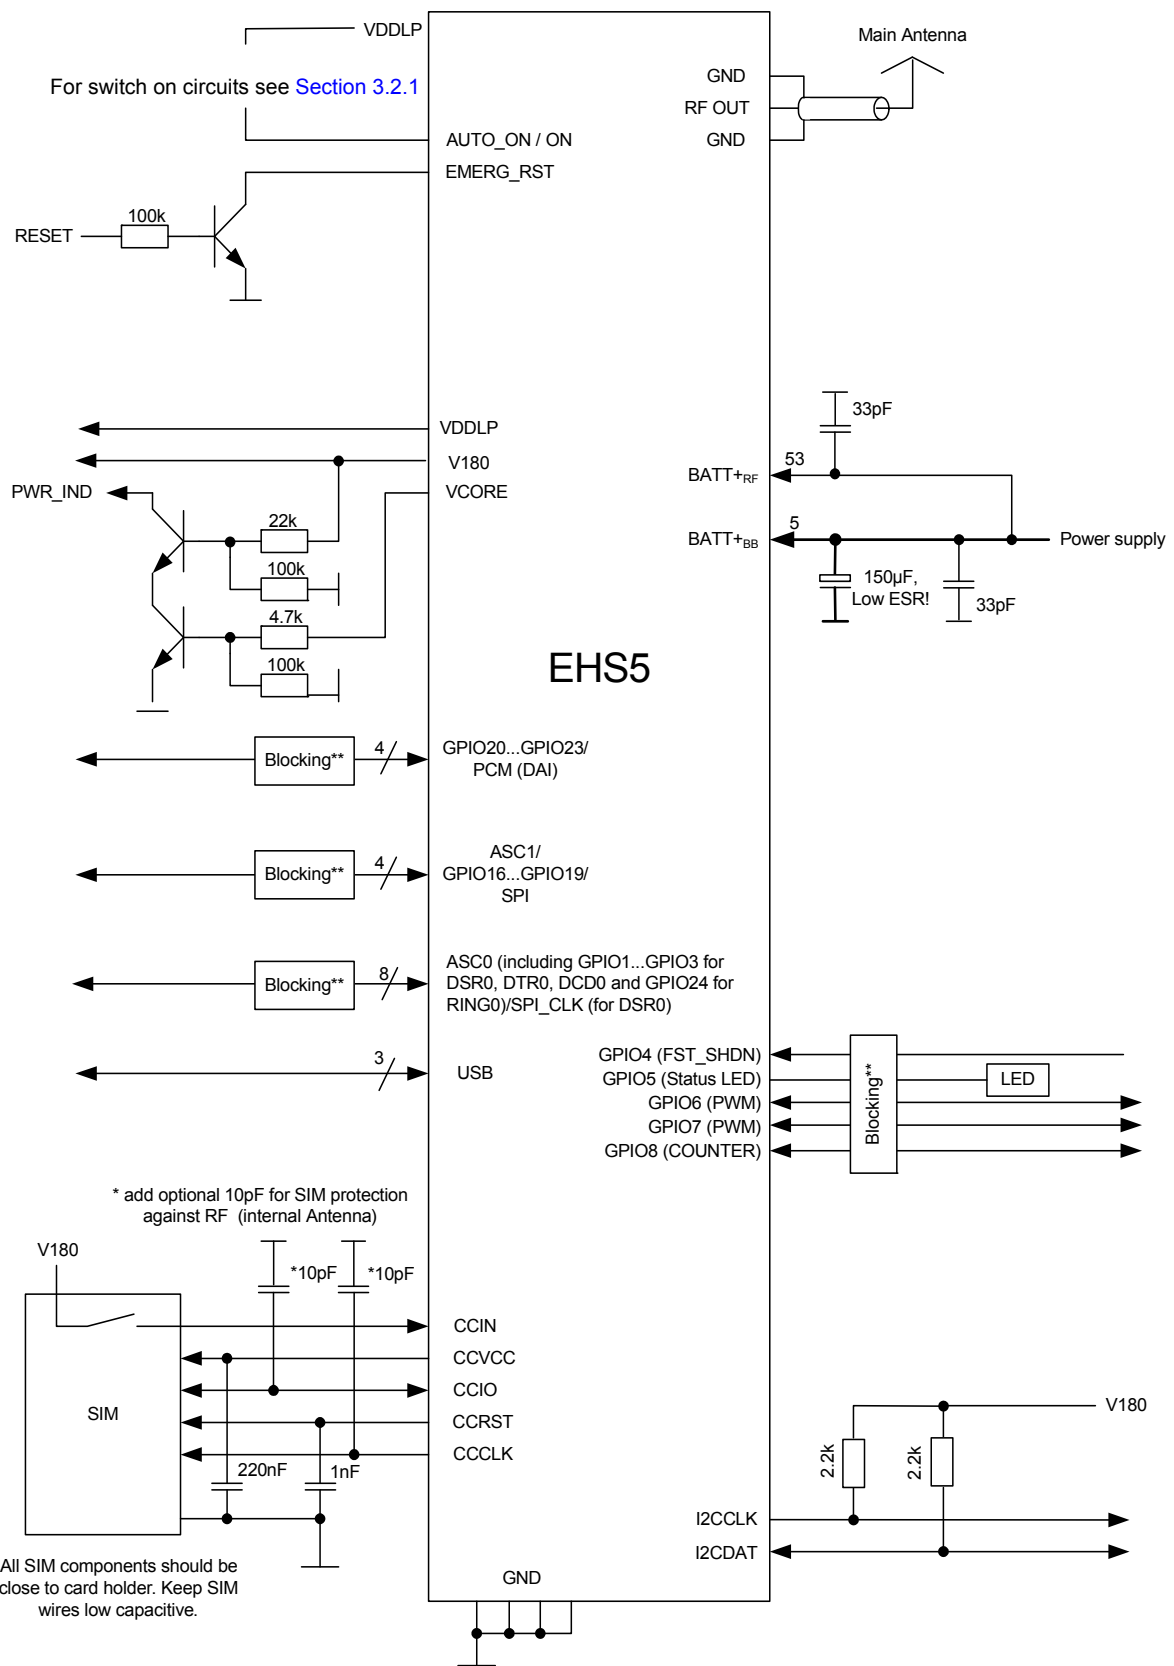


Blocking\*\* = For more details see Section 3.8

Figure 33: Schematic diagram of EHS5-E/EHS5-US sample application

### 2.3.1 Sample Level Conversion Circuit

Depending on the micro controller used by an external application EHS5-E/EHS5-US's digital input and output lines (i.e., ASC0, ASC1 or GPIO lines) may require level conversion. The following [Figure 34](#) shows a sample circuit with recommended level shifters for an external application's micro controller (with VLOGIC between 3.0V...3.6V). The level shifters can be used for digital input and output lines with  $V_{OH,max}=1.85V$  or  $V_{IH,max}=1.85V$ .

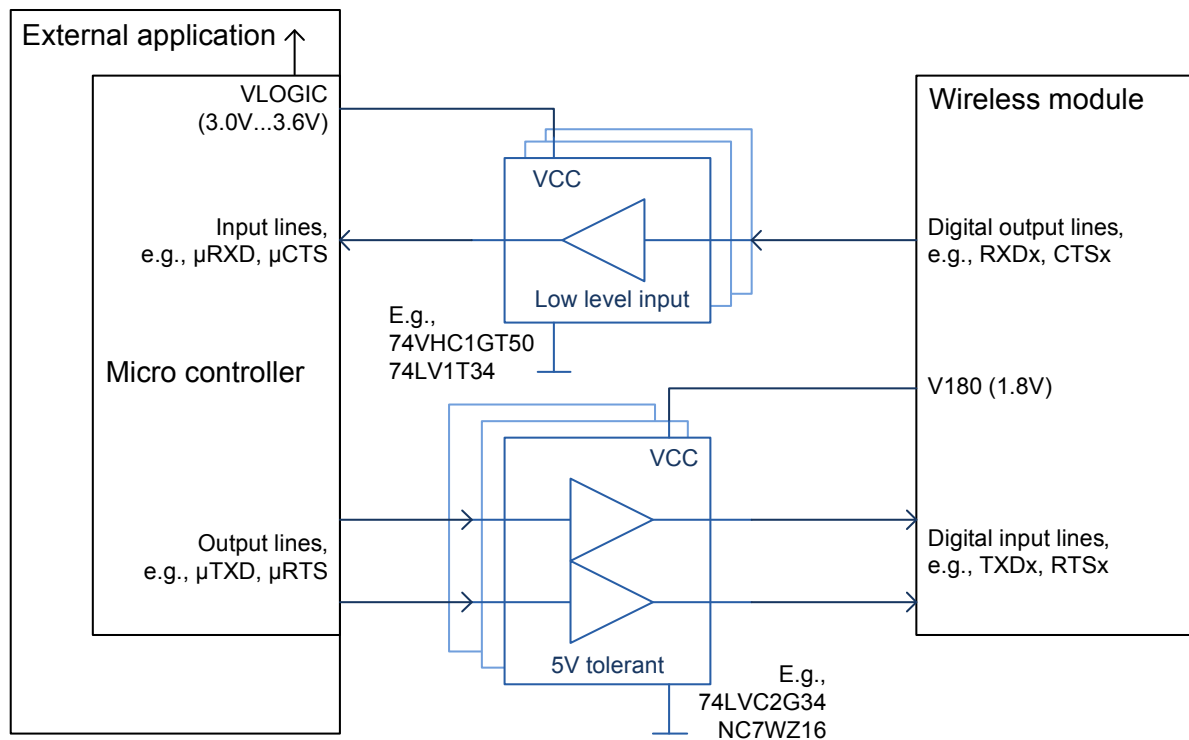

**Figure 34:** Sample level conversion circuit

## 3 Operating Characteristics

### 3.1 Operating Modes

The table below briefly summarizes the various operating modes referred to throughout the document.

**Table 11:** Overview of operating modes

Mode	Function	
Normal operation	GSM / GPRS / UMTS / HSPA SLEEP	No call is in progress and the USB connection is suspended by host (or is not present) and no active communication via ASC0. For power saving issues see <a href="#">Section 3.4</a> .
	GSM / GPRS / UMTS / HSPA IDLE	No call is in progress and the USB connection is not suspended by host (or is not present) and no active communication via ASC0. For power saving issues see <a href="#">Section 3.4</a> .
	GSM TALK/ GSM DATA	Connection between two subscribers is in progress. Power consumption depends on the GSM network coverage and several connection settings (e.g. DTX off/on, FR/EFR/HR, hopping sequences and antenna connection). The following applies when power is to be measured in TALK_GSM mode: DTX off, FR and no frequency hopping.
	GPRS DATA	GPRS data transfer in progress. Power consumption depends on network settings (e.g. power control level), uplink / downlink data rates and GPRS configuration (e.g. used multislot settings).
	EGPRS DATA	EGPRS data transfer in progress. Power consumption depends on network settings (e.g. power control level), uplink / downlink data rates and EGPRS configuration (e.g. used multislot settings).
	UMTS TALK/ UMTS DATA	UMTS data transfer in progress. Power consumption depends on network settings (e.g. TPC Pattern) and data transfer rate.
	HSPA DATA	HSPA data transfer in progress. Power consumption depends on network settings (e.g. TPC Pattern) and data transfer rate.
Power Down	Normal shutdown after sending the power down command. Only a voltage regulator is active for powering the RTC. Software is not active. Interfaces are not accessible. Operating voltage (connected to BATT+) remains applied.	
Airplane mode	Airplane mode shuts down the radio part of the module, causes the module to log off from the GSM/GPRS network and disables all AT commands whose execution requires a radio connection. Airplane mode can be controlled by AT command (see <a href="#">[1]</a> ).	

## 3.2 Power Up/Power Down Scenarios

In general, be sure not to turn on EHS5-E/EHS5-US while it is beyond the safety limits of voltage and temperature stated in [Section 2.1.2.1](#). EHS5-E/EHS5-US immediately switches off after having started and detected these inappropriate conditions. In extreme cases this can cause permanent damage to the module.

### 3.2.1 Turn on EHS5-E/EHS5-US

EHS5-E/EHS5-US can be turned on as described in the following sections:

- Connecting the operating voltage BATT+ (see [Section 3.2.1.1](#)).
- Hardware driven switch on by (continuous) AUTO\_ON line: Starts Normal mode (see [Section 3.2.1.2](#) and [Section 3.2.1.3](#)). It is recommended to employ the AUTO\_ON line as module startup signal.
- Hardware driven switch on by ON line: Starts Normal mode (see [Section 3.2.1.4](#)).

After startup or restart, the module will send the URC ^SYSSTART that notifies the host application that the first AT command can be sent to the module (see also [\[1\]](#)).

#### 3.2.1.1 Connecting EHS5-E/EHS5-US BATT+ Lines

[Figure 35](#) and [Figure 36](#) show sample external application circuits that allow to connect (and also to temporarily disconnect) the module's BATT+ lines from the external application's power supply.

[Figure 35](#) illustrates the application of power employing an externally controlled microcontroller. [Figure 36](#) as an alternative shows the power application with an external voltage supervisory circuit instead of a microcontroller. The voltage supervisory circuit ensures that the power is disconnected and applied again depending on given thresholds.

The transistor T2 mentioned in [Figure 35](#) and [Figure 36](#) should have an  $R_{DS\_ON}$  value  $\leq 50m\Omega$  in order to minimize voltage drops.

Such circuits could be useful to maximize power savings for battery driven applications or to completely switch off and restart the module after a firmware update.

After connecting the BATT+ lines the module can then be (re-)started as described in [Section 3.2.1.2](#), [Section 3.2.1.3](#) and [Section 3.2.1.4](#).

3.2 Power Up/Power Down Scenarios

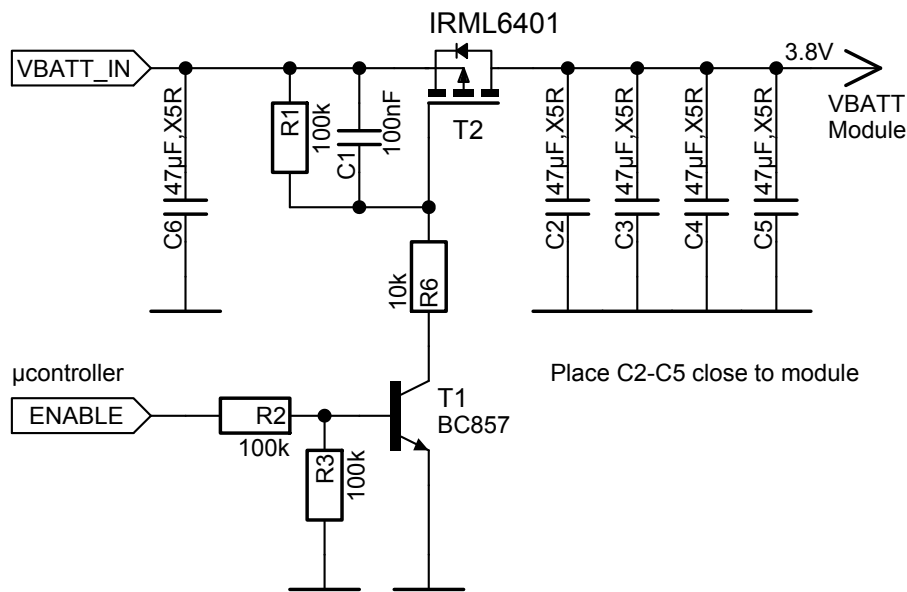


Figure 35: Sample circuit for applying power using an external µC

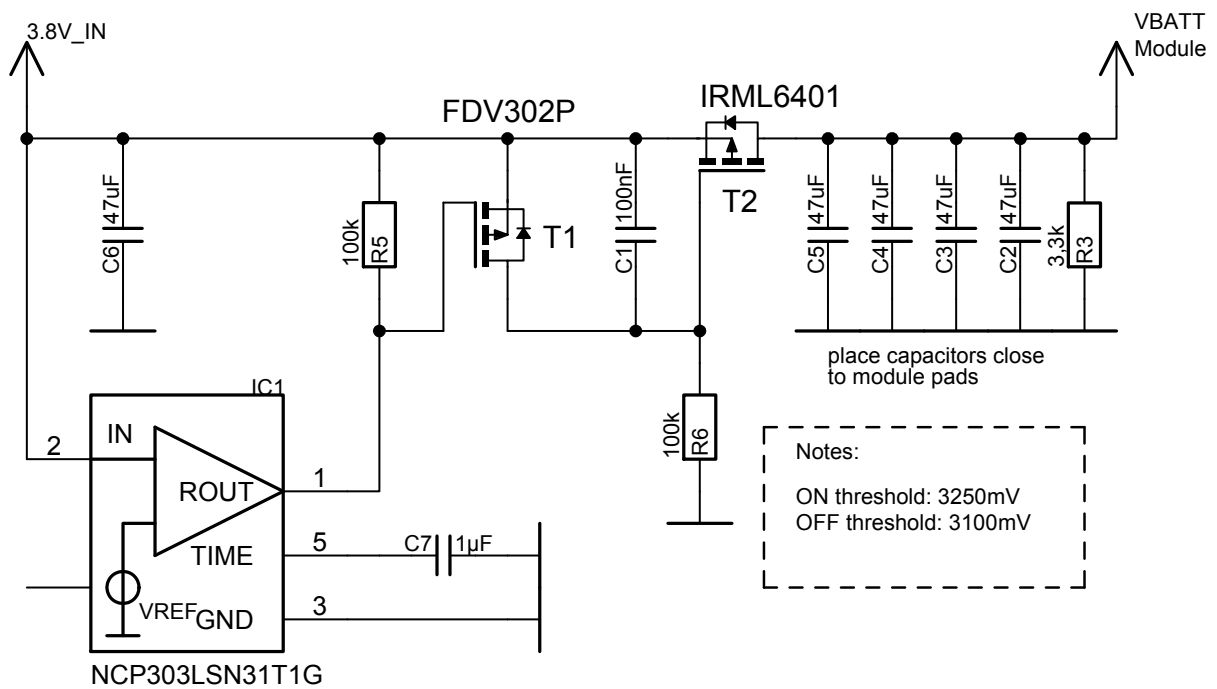


Figure 36: Sample circuit for applying power using an external voltage supervisory circuit

### 3.2.1.2 Switch on EHS5-E/EHS5-US Using AUTO\_ON Signal

When the operating voltage BATT+ is applied, EHS5-E/EHS5-US can be switched on by means of the AUTO\_ON signal.

The AUTO\_ON signal is a low level sensitive signal and only allows the input voltage level of the VDDL P signal. The module starts into normal mode with AUTO\_ON at a continuously low level. Please note that BATT+ should be active and stable before the low level at the AUTO\_ON signal is applied.

The following figures show examples for a module switch-on circuit:

- [Figure 37](#) for a controlled module switch on. Here, it is recommended to use a 10kΩ pull up resistor at the AUTO\_ON pad. The 10kΩ pull up resistor may be required in an electrically noisy environment.
- [Figure 38](#) for an automatic module switch on. The circuit shown in [Figure 39](#) is a recommended circuit for an automatic module switch-on in applications where no external micro-controller is present to control the switch-on otherwise. This circuit will allow a software controlled shutdown of module, e.g., by regular AT^SMSO command or a temperature shutdown, before disconnecting power.

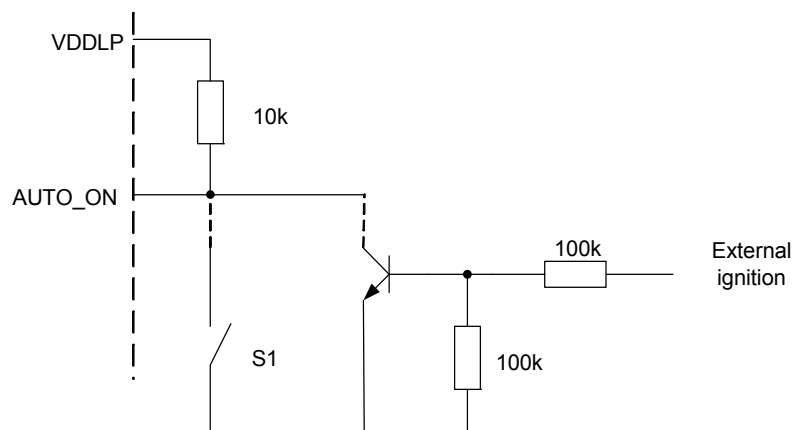


Figure 37: AUTO\_ON circuit sample for controlled module switch-on

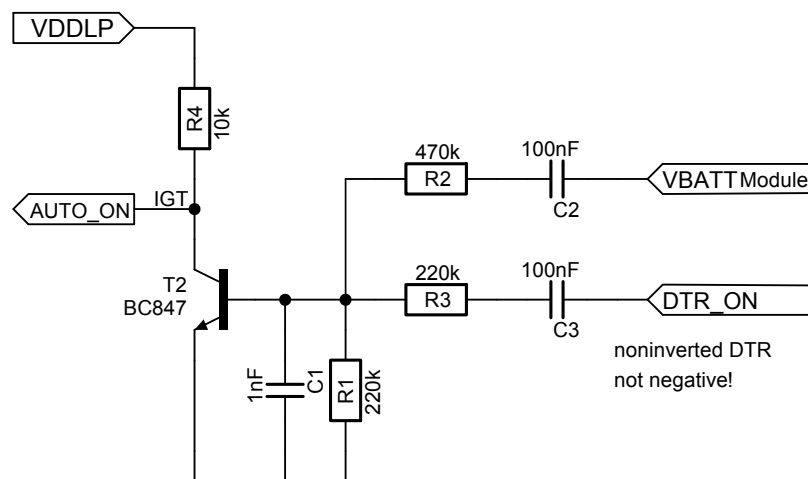


Figure 38: AUTO\_ON circuit sample for automatic module switch on



3.2 Power Up/Power Down Scenarios

Figure 39 shows the AUTO\_ON signal timing.

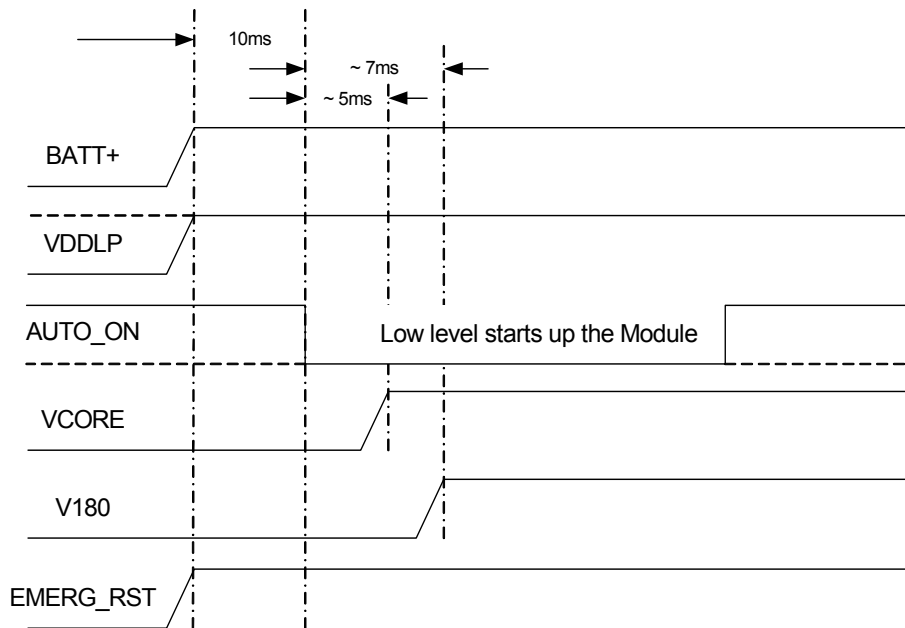


Figure 39: AUTO\_ON signal timing

**Note:** After switching on the module using AUTO\_ON, it will take approx. 10 seconds for the USB interface to be fully enumerated and available.

### 3.2.1.3 Switch on EHS5-E/EHS5-US Using a Continuous AUTO\_ON Signal

In case the AUTO\_ON signal is permanently connected to ground (see Figure 37, S1 set to low level) the module will start up if the operating voltage BATT+ is applied with a rise time of less than 1 millisecond between 2.5V to 3.2V.

The following Figure 40 shows this startup behavior if employing the AUTO\_ON signal.

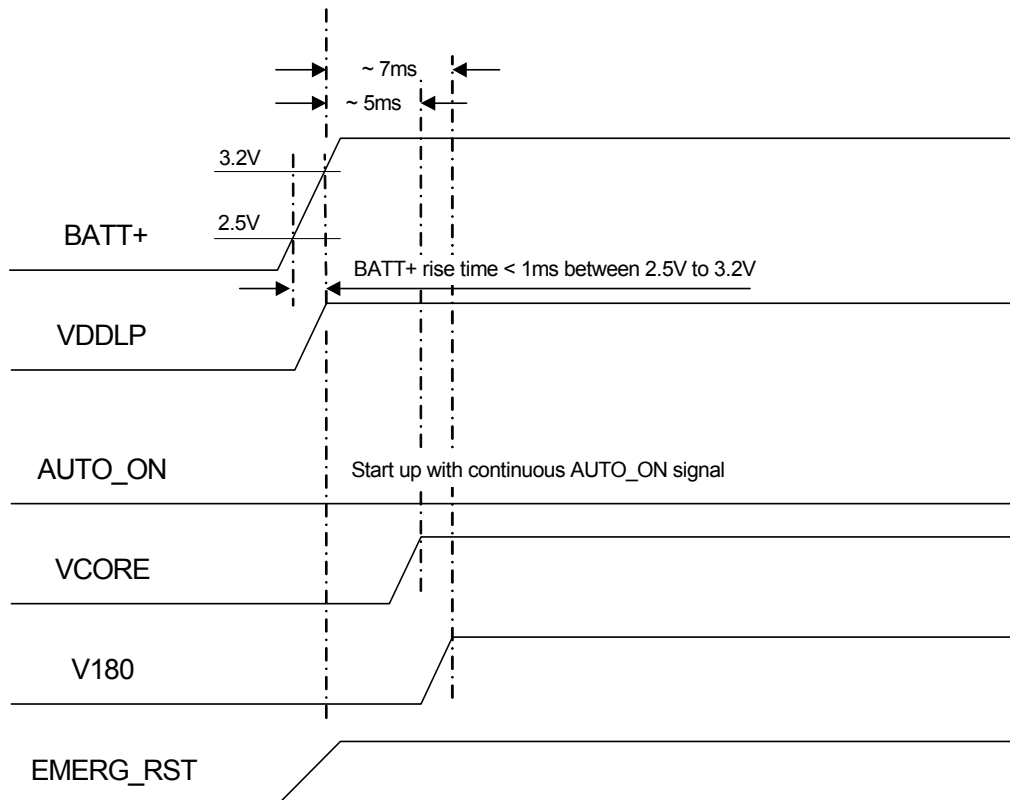


Figure 40: AUTO\_ON signal timing using continuous AUTO\_ON


## 3.2 Power Up/Power Down Scenarios

## 3.2.1.4 Switch on EHS5-E/EHS5-US Using ON Signal

When the operating voltage BATT+ is applied, EHS5-E/EHS5-US can also be switched on by means of the ON signal.

The ON signal is a level, i.e., high pulse triggered signal and only allows the input voltage level of the VDDL P signal. The module starts into normal mode on detecting a high pulse at the ON signal. The high pulse width should be between a minimum of 50µs and a maximum of 80µs.

The following [Figure 41](#) shows recommendations for a possible switch-on circuit.

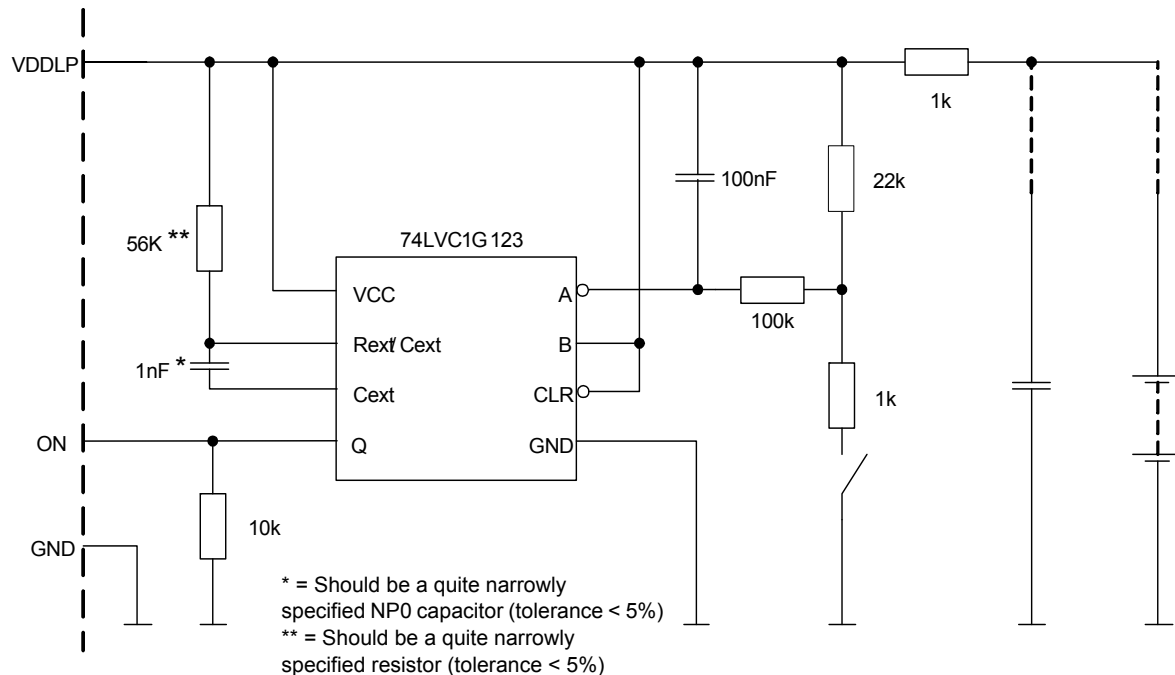

**Figure 41:** ON circuit options

It is recommended to set a serial 1kΩ resistor between the ON circuit and the external capacitor or battery at the VDDL P power supply. This serial resistor protection is necessary in case the capacitor or battery has low power (is empty).

The above ON circuit with the monostable multivibrator 74LVC1G123 as component generates a high pulse with a pulse width of typically 60µs.

Please note that BATT+ and VDDL P should be active at least 10 milliseconds before the high pulse at the ON signal is applied to start up the module. After module startup the ON signal should always be set to low to prevent possible back powering at this line.

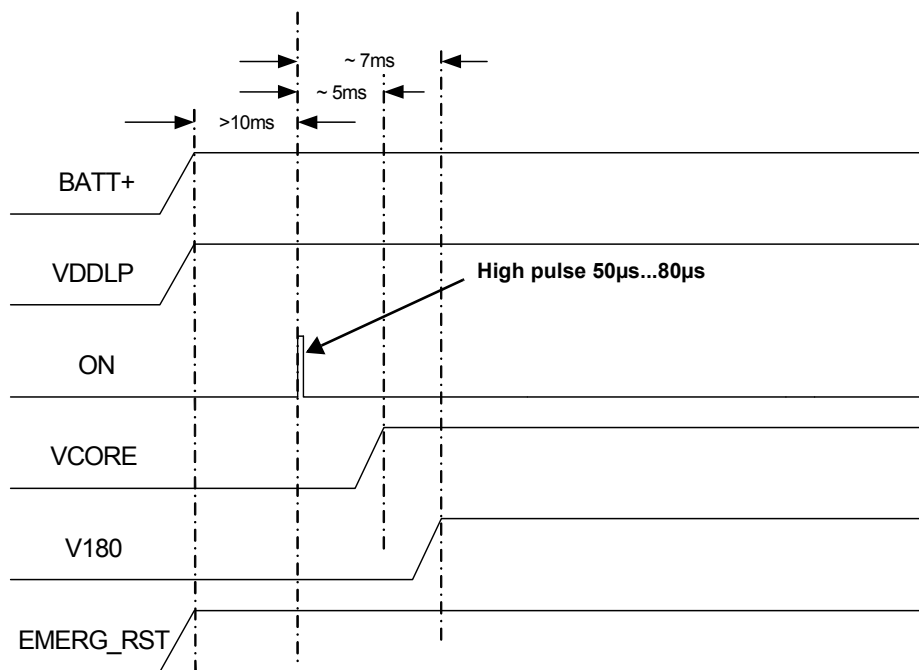


Figure 42: ON timing

**Note:** After switching on the module using ON, it will take approx. 10 seconds for the USB interface to be fully enumerated and available.

### 3.2.2 Restart EHS5-E/EHS5-US

After startup EHS5-E/EHS5-US can be re-started as described in the following sections:

- Software controlled reset by AT+CFUN command: Starts Normal mode (see [Section 3.2.2.1](#)).
- Hardware controlled reset by EMERG\_RST line: Starts Normal mode (see [Section 3.2.2.2](#))

#### 3.2.2.1 Restart EHS5-E/EHS5-US via AT+CFUN Command

To reset and restart the EHS5-E/EHS5-US module use the command AT+CFUN. See [\[1\]](#) for details.

### 3.2.2.2 Restart EHS5-E/EHS5-US Using EMERG\_RST

The EMERG\_RST signal is internally connected to the central GSM processor. A low level for more than 10 milliseconds sets the processor and with it all the other signal pads to their respective reset state. The reset state is described in [Section 3.2.3](#) as well as in the figures showing the startup behavior of an interface.

After releasing the EMERG-RST line, i.e., with a change of the signal level from low to high, the module restarts. The other signals continue from their reset state as if the module was switched on by the AUTO\_ON or ON signal. Please note that if restarting the module using EMERG\_RST, the SIM PIN will not have to be (re-)entered.

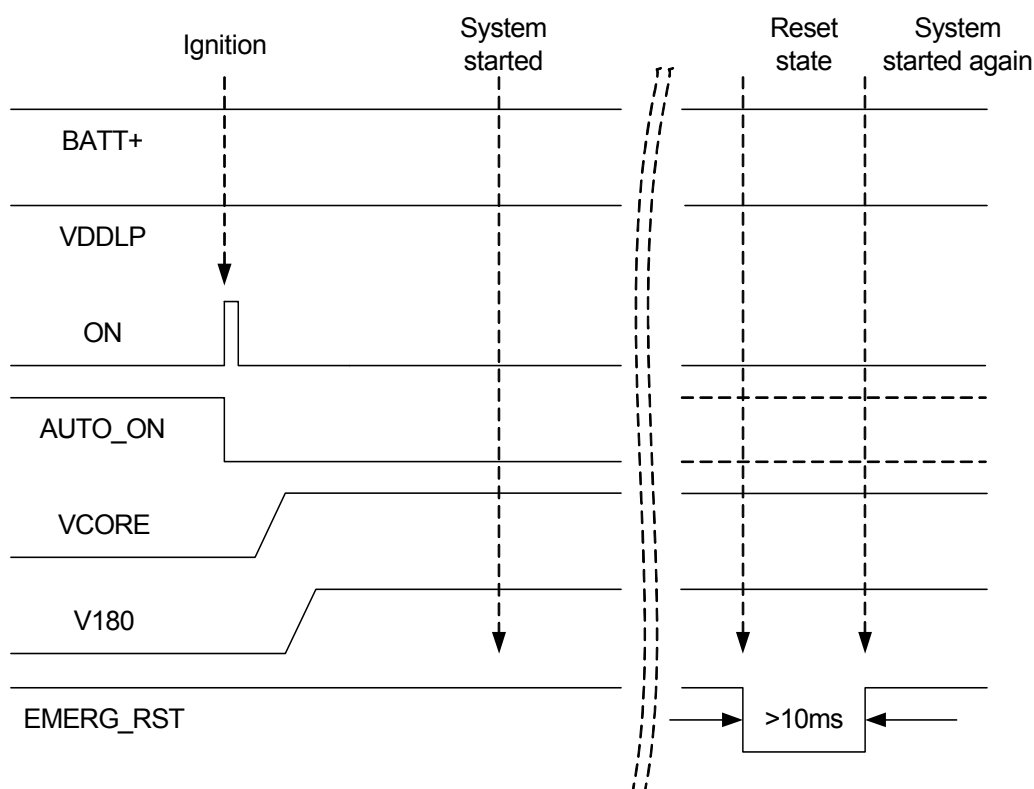


Figure 43: Emergency restart timing

It is recommended to control this EMERG\_RST line with an open collector transistor or an open drain field-effect transistor.

*Caution: Use the EMERG\_RST line only when, due to serious problems, the software is not responding for more than 5 seconds. Pulling the EMERG\_RST line causes the loss of all information stored in the volatile memory. Therefore, this procedure is intended only for use in case of emergency, e.g. if EHS5-E/EHS5-US does not respond, if restart or shutdown via AT command fails.*

### 3.2.3 Signal States after First Startup

Table 12 lists the states each interface signal passes through during reset and first firmware initialization. For further firmware startup initializations the values may differ because of different GPIO line configurations.

The reset state is reached with the rising edge of an internal reset line - either with a normal module startup after about 26 milliseconds (see Section 3.2.1) or after a restart (see Section 3.2.2). After the reset state has been reached the firmware initialization state begins. The firmware and command interface initialization is completed as soon as the ASC0 interface line CTS0 has turned low (see Section 2.1.4). Now, the module is ready to receive and transmit data.

Table 12: Signal states

Signal name	Reset state	First start up configuration
CCIO	L	O / L
CCRST	L	O / L
CCCLK	L	O / L
CCIN	T / 100k PD	I / 100k PD
RXD0	T / PU	O / H
TXD0	T / PD	I
CTS0	T / PU	O / H
RTS0	T / PU	I / PD <sup>1</sup>
GPIO1	T / PD	T / PD
GPIO2	T / PD	T / PD
GPIO3	T / PD	T / PD
GPIO4	T / PD	T / PD
GPIO5	T / PD	T / PD
GPIO6	T / PD	T / PD
GPIO7	T / PD	T / PD
GPIO8	T / PD	T / PD
GPIO16	T / PD	T / PD
GPIO17	T / PD	T / PD
GPIO18	T / PD	T / PD
GPIO19	T / PD	T / PD
GPIO20	T / PD	T / PD
GPIO21	T / PD	T / PD
GPIO22	T / PD	T / PD
GPIO23	T / PD	T / PD
GPIO24	T / PD	T / PD
I2CCLK	T	T / OD
I2CDAT	T	T / OD

1. First start up configuration for RTS0 can be configured via AT^SGPINCA command (see [1]).

Abbreviations used in above Table 12:

L = Low level H = High level T = Tristate I = Input	O = Output OD = Open Drain PD = Pull down, 200µA at 1.9V PU = Pull up, -240µA at 0V
--	--

### 3.2.4 Turn off EHS5-E/EHS5-US

To switch the module off the following procedures may be used:

- *Software controlled shutdown procedure:* Software controlled by sending an AT command over the serial application interface. See [Section 3.2.4.1](#).
- *Automatic shutdown (software controlled):* See [Section 3.2.5](#)
  - Takes effect if EHS5-E/EHS5-US board temperature exceeds a critical limit.

#### 3.2.4.1 Switch off EHS5-E/EHS5-US Using AT Command

The best and safest approach to powering down EHS5-E/EHS5-US is to issue the appropriate AT command. This procedure lets EHS5-E/EHS5-US log off from the network and allows the software to enter into a secure state and save data before disconnecting the power supply. The mode is referred to as Power Down mode. In this mode, only the RTC stays active. Before issuing the switch off AT command, the ON signal should be set to low (see [Figure 44](#)). Otherwise there might be back powering at the ON line in Power Down mode.

Be sure not to disconnect the operating voltage  $V_{BATT+}$  before V180 pad has gone low. Otherwise you run the risk of losing data.

While EHS5-E/EHS5-US is in Power Down mode the application interface is switched off and must not be fed from any other voltage source. Therefore, your application must be designed to avoid any current flow into any digital pads of the application interface.

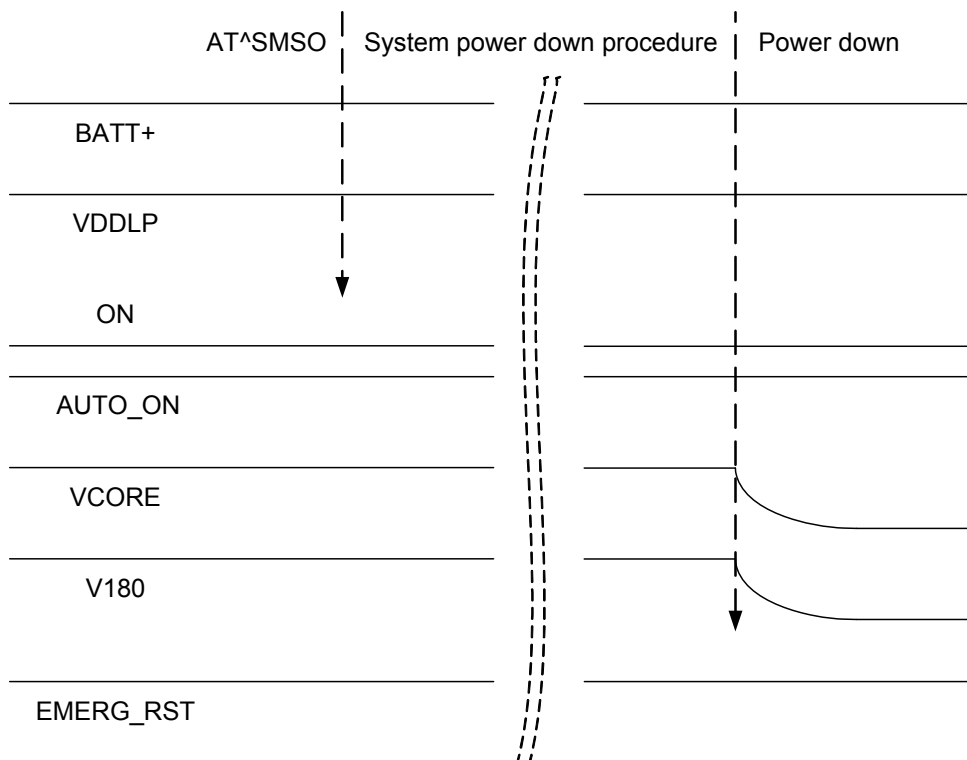


Figure 44: Switch off behavior

### 3.2.5 Automatic Shutdown

Automatic shutdown takes effect if the following event occurs:

- The EHS5-E/EHS5-US board is exceeding the critical limits of overtemperature or undertemperature (see [Section 3.2.5.1](#))
- Undervoltage or overvoltage is detected (see [Section 3.2.5.2](#) and [Section 3.2.5.3](#))

The automatic shutdown procedure is equivalent to the power-down initiated with an AT command, i.e. EHS5-E/EHS5-US logs off from the network and the software enters a secure state avoiding loss of data.

#### 3.2.5.1 Thermal Shutdown

The board temperature is constantly monitored by an internal NTC resistor located on the PCB. The values detected by the NTC resistor are measured directly on the board and therefore, are not fully identical with the ambient temperature.

Each time the board temperature goes out of range or back to normal, EHS5-E/EHS5-US instantly displays an alert (if enabled).

- URCs indicating the level "1" or "-1" allow the user to take appropriate precautions, such as protecting the module from exposure to extreme conditions. The presentation of the URCs depends on the settings selected with the AT<sup>^</sup>SCTM write command (for details see [\[1\]](#)):  
AT<sup>^</sup>SCTM=1: Presentation of URCs is always enabled.  
AT<sup>^</sup>SCTM=0 (default): Presentation of URCs is enabled during the 2 minute guard period after start-up of EHS5-E/EHS5-US. After expiry of the 2 minute guard period, the presentation of URCs will be disabled, i.e. no URCs with alert levels "1" or "-1" will be generated.
- URCs indicating the level "2" or "-2" are instantly followed by an orderly shutdown. The presentation of these URCs is always enabled, i.e. they will be output even though the factory setting AT<sup>^</sup>SCTM=0 was never changed.

The maximum temperature ratings are stated in [Section 5.2](#). Refer to [Table 13](#) for the associated URCs.

**Table 13:** Temperature dependent behavior

Sending temperature alert (2min after module start-up, otherwise only if URC presentation enabled)	
<sup>^</sup> SCTM_B: 1	Board close to overtemperature limit.
<sup>^</sup> SCTM_B: -1	Board close to undertemperature limit.
<sup>^</sup> SCTM_B: 0	Board back to non-critical temperature range.
Automatic shutdown (URC appears no matter whether or not presentation was enabled)	
<sup>^</sup> SCTM_B: 2	Alert: Board equal or beyond overtemperature limit. EHS5-E/EHS5-US switches off.
<sup>^</sup> SCTM_B: -2	Alert: Board equal or below undertemperature limit. EHS5-E/EHS5-US switches off.



### 3.2.5.2 Undervoltage Shutdown

The undervoltage shutdown threshold is the specified minimum supply voltage  $V_{BATT+}$  given in [Table 2](#). When the average supply voltage measured by EHS5-E/EHS5-US approaches the undervoltage shutdown threshold (i.e., 0.05V offset) the module will send the following URC:

^SBC: Undervoltage Warning

The undervoltage warning is sent only once - until the next time the module is close to the undervoltage shutdown threshold.

If the voltage continues to drop below the specified undervoltage shutdown threshold, the module will send the following URC:

^SBC: Undervoltage Shutdown

This alert is sent only once before the module shuts down cleanly without sending any further messages.

This type of URC does not need to be activated by the user. It will be output automatically when fault conditions occur.

Note: For battery powered applications it is strongly recommended to implement a BATT+ connecting circuit as described in [Section 3.2.1.1](#) in order to not only be able save power, but also to restart the module after an undervoltage shutdown where the battery is deeply discharged. Also note that the undervoltage threshold is calculated for max. 400mV voltage drops during transmit burst. Power supply sources for external applications should be designed to tolerate 400mV voltage drops without crossing the lower limit of 3.3 V. For external applications operating at the limit of the allowed tolerance the default undervoltage threshold may be adapted by subtracting an offset. For details see [\[1\]](#): AT^SCFG= "MEShutdown/sVsup/threshold".

### 3.2.5.3 Overvoltage Shutdown

The overvoltage shutdown threshold is the specified maximum supply voltage  $V_{BATT+}$  given in [Table 2](#). When the average supply voltage measured by EHS5-E/EHS5-US approaches the overvoltage shutdown threshold (i.e., 0.05V offset) the module will send the following URC:

^SBC: Overvoltage Warning

The overvoltage warning is sent only once - until the next time the module is close to the overvoltage shutdown threshold.

If the voltage continues to rise above the specified overvoltage shutdown threshold, the module will send the following URC:

^SBC: Overvoltage Shutdown

This alert is sent only once before the module shuts down cleanly without sending any further messages.

This type of URC does not need to be activated by the user. It will be output automatically when fault conditions occur.

Note that several EHS5-E/EHS5-US components are directly linked to BATT+ and, therefore, the supply voltage remains applied at major parts of EHS5-E/EHS5-US. Especially the power amplifier linked to BATT+<sub>RF</sub> is very sensitive to high voltage and might even be destroyed.

### 3.3 Automatic GPRS Multislot Class Change

Temperature control is also effective for operation in GPRS Multislot Class 10 or 12. If the board temperature increases to 75°C while data is transmitted over GPRS, the module automatically reverts from GPRS Multislot Class 12 (4Tx) or Class 10 (2Tx) to Class 8 (1Tx). This reduces the power consumption and, consequently, causes the board's temperature to decrease. Once the temperature drops to a 70°C, EHS5-E/EHS5-US returns to the higher Multislot Class. If the temperature stays at the critical level or even continues to rise, EHS5-E/EHS5-US will not switch back to the higher class.

After a transition from Multislot Class 12 or 10 to Multislot 8 a possible switchback to Multislot Class 12 or 10 is blocked for one minute.

Please note that there is not one single cause of switching over to a lower GPRS Multislot Class. Rather it is the result of an interaction of several factors, such as the board temperature that depends largely on the ambient temperature, the operating mode and the transmit power. Furthermore, take into account that there is a delay until the network proceeds to a lower or, accordingly, higher Multislot Class. The delay time is network dependent. In extreme cases, if it takes too much time for the network and the temperature cannot drop due to this delay, the module may even switch off as described in [Section 3.2.5.1](#).

## 3.4 Power Saving

EHS5-E/EHS5-US can be configured in two ways to control power consumption:

- Using the AT command `AT^SPOW` it is possible to specify a so-called power saving mode for the module (`<mode> = 2`; for details on the command see [1]). The module's UART interfaces (ASC0 and ASC1) are then deactivated and will only periodically be activated to be able to listen to network paging messages as described in Section 3.4.1 and Section 3.4.2. See Section 3.4.3 for a description on how to immediately wake up EHS5-E/EHS5-US again using RTS0.

Please note that the `AT^SPOW` setting has no effect on the USB interface. As long as the USB connection is active, the module will not change into its SLEEP state to reduce its functionality to a minimum and thus minimizing its current consumption. To enable switching into SLEEP mode, the USB connection must therefore either not be present at all or the USB host must bring its USB interface into Suspend state. Also, `VUSB_IN` should always be kept enabled for this functionality. See "Universal Serial Bus Specification Revision 2.0"<sup>1</sup> for a description of the Suspend state.

- Using the AT command `AT^SCFG="Radio/OutputPowerReduction"` it is possible for the module in GPRS and EGPRS multislot scenarios to reduce its output power according to 3GPP 45.005 section. By default a maximum power reduction is enabled. For details on the command see [1].

### 3.4.1 Power Saving while Attached to GSM Networks

The power saving possibilities while attached to a GSM network depend on the paging timing cycle of the base station. The duration of a power saving interval can be calculated using the following formula:

$$t = 4.615 \text{ ms (TDMA frame duration)} * 51 \text{ (number of frames)} * \text{DRX value.}$$

DRX (Discontinuous Reception) is a value from 2 to 9, resulting in paging intervals between 0.47 and 2.12 seconds. The DRX value of the base station is assigned by the GSM network operator.

In the pauses between listening to paging messages, the module resumes power saving, as shown in Figure 45.

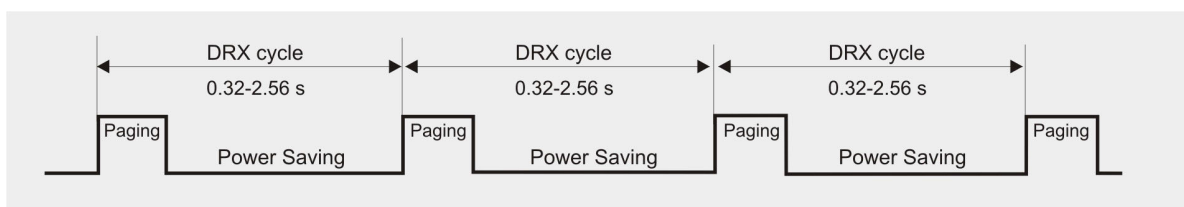


Figure 45: Power saving and paging in GSM networks

1. The specification is ready for download on <http://www.usb.org/developers/docs/>

## 3.4 Power Saving

The varying pauses explain the different potential for power saving. The longer the pause the less power is consumed.

Generally, power saving depends on the module's application scenario and may differ from the above mentioned normal operation. The power saving interval may be shorter than 0.47 seconds or longer than 2.12 seconds.

### 3.4.2 Power Saving while Attached to WCDMA Networks


The power saving possibilities while attached to a WCDMA network depend on the paging timing cycle of the base station.

During normal WCDMA operation, i.e., the module is connected to a WCDMA network, the duration of a power saving period varies. It may be calculated using the following formula:

$$t = 2^{\text{DRX value}} * 10 \text{ ms (WCDMA frame duration)}.$$

DRX (Discontinuous Reception) in WCDMA networks is a value between 6 and 9, thus resulting in power saving intervals between 0.64 and 5.12 seconds. The DRX value of the base station is assigned by the WCDMA network operator.

In the pauses between listening to paging messages, the module resumes power saving, as shown in [Figure 46](#).

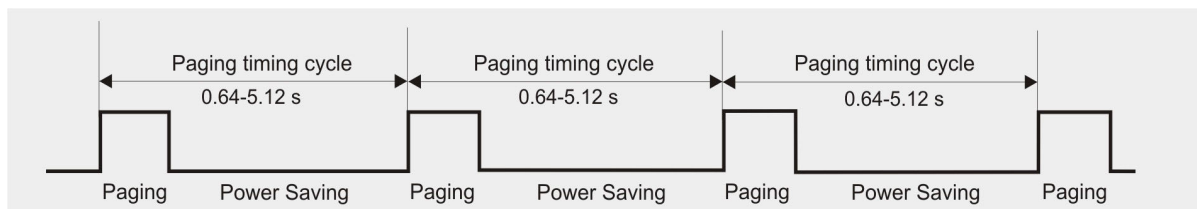

**Figure 46:** Power saving and paging in WCDMA networks

The varying pauses explain the different potential for power saving. The longer the pause the less power is consumed.

Generally, power saving depends on the module's application scenario and may differ from the above mentioned normal operation. The power saving interval may be shorter than 0.64 seconds or longer than 5.12 seconds.

### 3.4.3 Wake-up via RTS0

RTS0 can be used to wake up EHS5-E/EHS5-US from SLEEP mode configured with AT^SPOW. Assertion of RTS0 (i.e., toggle from inactive high to active low) serves as wake up event, thus allowing an external application to almost immediately terminate power saving. After RTS0 assertion, the CTS0 line signals module wake up, i.e., readiness of the AT command interface. It is therefore recommended to enable RTS/CTS flow control (default setting).

Figure 47 shows the described RTS0 wake up mechanism.

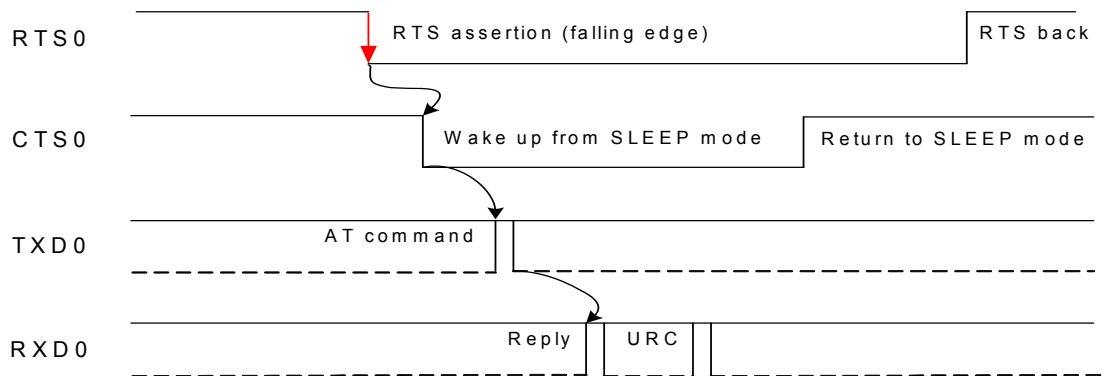


Figure 47: Wake-up via RTS0

### 3.5 Power Supply

EHS5-E/EHS5-US needs to be connected to a power supply at the SMT application interface - 2 lines BATT+, and GND. There are two separate voltage domains for BATT+:

- BATT+<sub>BB</sub> with a line mainly for the baseband power supply.
- BATT+<sub>RF</sub> with a line for the GSM power amplifier supply.

Please note that throughout the document BATT+ refers to both voltage domains and power supply lines - BATT+<sub>BB</sub> and BATT+<sub>RF</sub>.

The power supply of EHS5-E/EHS5-US has to be a single voltage source at BATT+<sub>BB</sub> and BATT+<sub>RF</sub>. It must be able to provide the peak current during the uplink transmission.

All the key functions for supplying power to the device are handled by the power management section of the analog controller. This IC provides the following features:

- Stabilizes the supply voltages for the baseband using low drop linear voltage regulators and a DC-DC step down switching regulator.
- Switches the module's power voltages for the power-up and -down procedures.
- SIM switch to provide SIM power supply.

## 3.5 Power Supply

## 3.5.1 Power Supply Ratings

Table 14 and Table 15 assemble various voltage supply and current consumption ratings of the module.

Table 14: Voltage supply ratings

	Description	Conditions	Min	Typ	Max	Unit
BATT+	Supply voltage	Directly measured at Module. Voltage must stay within the min/max values, including voltage drop, ripple, spikes	3.3		4.5	V
	Maximum allowed voltage drop during transmit burst	Normal condition, power control level for Pout max			400	mV
	Voltage ripple	Normal condition, power control level for Pout max @ f ≤ 250 kHz @ f > 250 kHz			80 20	mV <sub>pp</sub> mV <sub>pp</sub>

Table 15: Current consumption ratings<sup>1</sup>

	Description	Conditions	Typical rating	Unit	
I <sub>VDDL</sub> @ 1.8V	OFF State supply current	RTC backup @ BATT+ = 0V	1.7	μA	
I <sub>BATT+</sub> <sup>2</sup>  (i.e., sum of BATT+ <sub>BB</sub> and BATT+ <sub>RF</sub> )	OFF State supply current	Power Down	65	μA	
	Average GSM supply current	SLEEP <sup>3</sup> @ DRX=9 (UART deactivated)	USB disconnected	1.6	mA
			USB suspended	1.6	mA
		SLEEP <sup>3</sup> @ DRX=5 (UART deactivated)	USB disconnected	1.8	mA
			USB suspended	1.8	mA
		SLEEP <sup>3</sup> @ DRX=2 (UART deactivated)	USB disconnected	2.2	mA
			USB suspended	2.2	mA
		IDLE @ DRX=2 (UART activated, but no communication)	USB disconnected	17	mA
			USB active	38	mA
		Voice Call GSM850/900; PCL=5		210/220	mA
		GPRS Data transfer GSM850/900; PCL=5; 1Tx/4Rx	ROPR=4 (max. reduction)	220/215	mA
	ROPR=0 (no reduction)		215/215	mA	
GPRS Data transfer GSM850/900; PCL=5; 2Tx/3Rx	ROPR=4 (max. reduction)	300/300	mA		
	ROPR=0 (no reduction)	395/390	mA		

## 3.5 Power Supply

**Table 15:** Current consumption ratings<sup>1</sup>

	Description	Conditions	Typical rating	Unit	
I <sub>BATT+</sub> <sup>2</sup>  (i.e., sum of BATT <sub>BB</sub> and BATT <sub>RF</sub> )	Average GSM supply current	GPRS Data transfer GSM850/900; PCL=5; 4Tx/1Rx	ROPR=4 (max. reduction)	415/420	mA
			ROPR=0 (no reduction)	735/725	mA
		EDGE Data transfer GSM850/900; PCL=5; 1Tx/4Rx	ROPR=4 (max. reduction)	150/150	mA
			ROPR=0 (no reduction)	150/150	mA
		EDGE Data transfer GSM850/900; PCL=5; 2Tx/3Rx	ROPR=4 (max. reduction)	215/220	mA
			ROPR=0 (no reduction)	265/270	mA
		EDGE Data transfer GSM850/900; PCL=5; 4Tx/1Rx	ROPR=4 (max. reduction)	330/345	mA
			ROPR=0 (no reduction)	480/485	mA
		Voice Call GSM1800/1900; PCL=0		150/160	mA
		GPRS Data transfer GSM1800/1900; PCL=0; 1Tx/4Rx	ROPR=4 (max. reduction)	155/160	mA
			ROPR=0 (no reduction)	155/160	mA
		GPRS Data transfer GSM1800/1900; PCL=0; 2Tx/3Rx	ROPR=4 (max. reduction)	215/220	mA
			ROPR=0 (no reduction)	265/275	mA
		GPRS Data transfer GSM1800/1900; PCL=0; 4Tx/1Rx	ROPR=4 (max. reduction)	300/310	mA
			ROPR=0 (no reduction)	485/500	mA
		EDGE Data transfer GSM1800/1900; PCL=0; 1Tx/4Rx	ROPR=4 (max. reduction)	125/130	mA
			ROPR=0 (no reduction)	130/130	mA
		EDGE Data transfer GSM1800/1900; PCL=0; 2Tx/3Rx	ROPR=4 (max. reduction)	195/195	mA
			ROPR=0 (no reduction)	215/220	mA
		EDGE Data transfer GSM1800/1900; PCL=0; 4Tx/1Rx	ROPR=4 (max. reduction)	300/310	mA
			ROPR=0 (no reduction)	385/390	mA
		Peak current during GSM transmit burst	GPRS Data transfer GSM850/900; PCL=5 4Tx/1Rx	1.4/1.8	A
			GPRS Data transfer GSM1800/1900; PCL=0 4Tx/1Rx	1.1/1.1	A



## 3.5 Power Supply

**Table 15:** Current consumption ratings<sup>1</sup>

	Description	Conditions	Typical rating	Unit		
I <sub>BATT+</sub> <sup>2</sup> (i.e., sum of BATT <sub>BB</sub> and BATT <sub>RF</sub> )	Average WCDMA supply current	SLEEP <sup>3</sup> @ DRX=9 (UART deactivated)	USB disconnected	1.8	mA	
			USB suspended	1.7	mA	
		SLEEP <sup>3</sup> @ DRX=8 (UART deactivated)	USB disconnected	1.8	mA	
			USB suspended	1.8	mA	
		SLEEP <sup>3</sup> @ DRX=6 (UART deactivated)	USB disconnected	2.5	mA	
			USB suspended	2.5	mA	
		IDLE @ DRX=6 (UART activated, but no communication)	USB disconnected	15	mA	
			USB active	38	mA	
		Voice Call Band I; 24dBm			695	mA
		Voice Call Band II; 24dBm			795	mA
		Voice Call Band V; 24dBm			620	mA
		Voice Call Band VIII; 24dBm			600	mA
		UMTS Data transfer Band I @+23dBm			660	mA
		UMTS Data transfer Band II @+23dBm			760	mA
		UMTS Data transfer Band V @+23dBm			600	mA
		UMTS Data transfer Band VIII @+23dBm			585	mA
		HSDPA Data transfer Band I @+23dBm			655	mA
		HSDPA Data transfer Band II @+23dBm			755	mA
		HSDPA Data transfer Band V @+23dBm			600	mA
		HSDPA Data transfer Band VIII @+23dBm			585	mA

1. Please note that the listed frequency bands apply as follows:

- EHS5-E: GSM/GPRS 900/1800MHz; UMTS/HSPA+: 900/2100MHz (Band I / VIII)
- EHS5-US: GSM/GPRS: 850/1900MHz; UMTS/HSPA+: 850/1900MHz (Band II / V)

2. With an impedance of  $Z_{LOAD}=50\Omega$  at the antenna pad.

All measurements have been done with BATT+ = 3V8.

3. Measurements start 6 minutes after switching on the module,

Averaging times: SLEEP mode – 3 minutes, transfer modes – 1.5 minutes

Communication tester settings: no neighbour cells, no cell reselection, etc, RMC (Reference Measurement Channel)

SLEEP mode is enabled via AT command AT^SPOW=2,1000,3

### 3.5.2 Minimizing Power Losses

When designing the power supply for your application please pay specific attention to power losses. Ensure that the input voltage  $V_{BATT+}$  never drops below 3.3V on the EHS5-E/EHS5-US board, not even in a GSM transmit burst where current consumption can rise (for peaks values see the power supply ratings listed in [Section 3.5.1](#)).

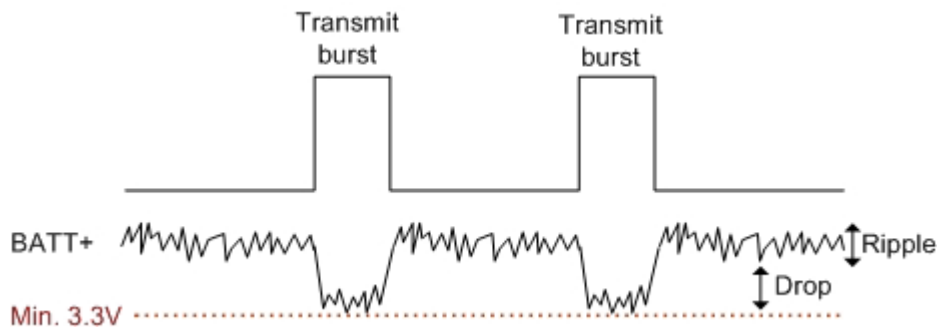


Figure 48: Power supply limits during transmit burst

### 3.5.3 Measuring the Supply Voltage ( $V_{BATT+}$ )

To measure the supply voltage  $V_{BATT+}$  it is possible to define two reference points GND and BATT+. GND should be the module's shielding, while BATT+ should be a test pad on the external application the module is mounted on. The external BATT+ reference point has to be connected to and positioned close to the SMT application interface's BATT+ pads 5 (BATT+<sub>BB</sub>) or 53 (BATT+<sub>RF</sub>) as shown in [Figure 49](#).

Reference point BATT+:  
External test pad connected to and positioned closely to BATT+ pad 5 or 53.

Reference point GND:  
Module shielding

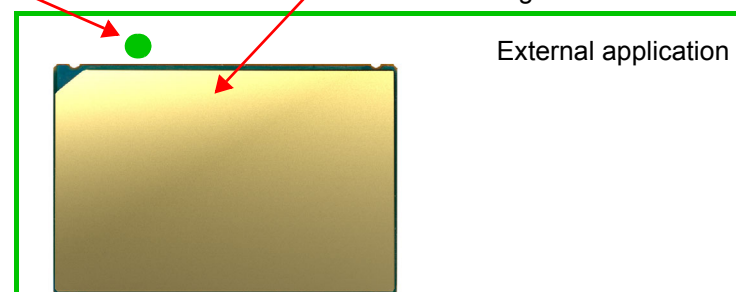


Figure 49: Position of reference points BATT+ and GND

### 3.5.4 Monitoring Power Supply by AT Command

To monitor the supply voltage you can also use the AT<sup>^</sup>SBV command which returns the value related to the reference points BATT+ and GND.

The module continuously measures the voltage at intervals depending on the operating mode of the RF interface. The duration of measuring ranges from 0.5 seconds in TALK/DATA mode to 50 seconds when EHS5-E/EHS5-US is in IDLE mode or Limited Service (deregistered). The displayed voltage (in mV) is averaged over the last measuring period before the AT<sup>^</sup>SBV command was executed.

If the measured voltage drops below or rises above the voltage shutdown thresholds, the module will send an <sup>^</sup>SBC URC and shut down (for details see [Section 3.2.5](#)).

## 3.6 Operating Temperatures

Please note that the module's lifetime, i.e., the MTTF (mean time to failure) may be reduced, if operated outside the extended temperature range.

**Table 16:** Board temperature

Parameter	Min	Typ	Max	Unit
Normal operation	-30	+25	+85	°C
Extended operation <sup>1</sup>	-40		+90	°C
Automatic shutdown <sup>2</sup> Temperature measured on EHS5-E/EHS5-US board	<-40	---	>+90	°C

1. Extended operation allows normal mode speech calls or data transmission for limited time until automatic thermal shutdown takes effect. Within the extended temperature range (outside the normal operating temperature range) the specified electrical characteristics may be in- or decreased.

2. Due to temperature measurement uncertainty, a tolerance of  $\pm 3^{\circ}\text{C}$  on the thresholds may occur.

See also [Section 3.2.5](#) for information about the NTC for on-board temperature measurement, automatic thermal shutdown and alert messages.

Note: Within the specified operating temperature ranges the board temperature may vary to a great extent depending on operating mode, used frequency band, radio output power and current supply voltage.

For more information regarding the module's thermal behavior please refer to [\[3\]](#).

### 3.7 Electrostatic Discharge

The GSM module is not protected against Electrostatic Discharge (ESD) in general. Consequently, it is subject to ESD handling precautions that typically apply to ESD sensitive components. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates a EHS5-E/EHS5-US module.

An example for an enhanced ESD protection for the SIM interface is given in [Section 2.1.6.1](#).

EHS5-E/EHS5-US has been tested according to group standard ETSI EN 301 489-1 (see [Table 24](#)) and test standard EN 61000-4-2. Electrostatic values can be gathered from the following table.


**Table 17:** Electrostatic values

Specification/Requirements	Contact discharge	Air discharge
<b>EN 61000-4-2</b>		
Antenna interface	$\pm 1\text{kV}$	n.a.
Antenna interface with ESD protection (see <a href="#">Section 3.7.1</a> )	$\pm 4\text{kV}$	$\pm 8\text{kV}$
<b>JEDEC JESD22-A114D</b> (Human Body Model, Test conditions: 1.5 k $\Omega$ , 100 pF)		
All other interfaces	$\pm 1\text{kV}$	n.a.

Note: The values may vary with the individual application design. For example, it matters whether or not the application platform is grounded over external devices like a computer or other equipment, such as the Thales reference application described in [Chapter 5](#).

#### 3.7.1 ESD Protection for Antenna Interface

The following [Figure 50](#) shows how to implement an external ESD protection for the RF antenna interface with either a T pad or PI pad attenuator circuit (for RF line routing design see also [Section 2.2.3](#)).

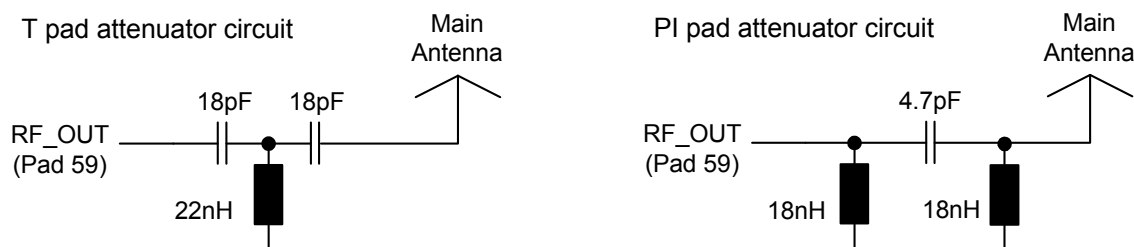

**Figure 50:** ESD protection for RF antenna interface

Recommended inductor types for the above sample circuits: Size 0402 SMD from Panasonic ELJRF series (22nH and 18nH inductors) or Murata LQW15AN18NJ00 (18nH inductors only).


### 3.8 Blocking against RF on Interface Lines

To reduce EMI issues there are serial resistors, or capacitors to GND, implemented on the module for the ignition, emergency restart, and SIM interface lines (cp. [Section 2.3](#)). However, all other signal lines have no EMI measures on the module and there are no blocking measures at the module's interface to an external application.

Dependent on the specific application design, it might be useful to implement further EMI measures on some signal lines at the interface between module and application. These measures are described below.

There are five possible variants of EMI measures (A-E) that may be implemented between module and external application depending on the signal line (see [Figure 51](#) and [Table 18](#)). Pay attention not to exceed the maximum input voltages and prevent voltage overshots if using inductive EMC measures.

The maximum value of the serial resistor should be lower than  $1\text{k}\Omega$  on the signal line. The maximum value of the capacitor should be lower than  $50\text{pF}$  on the signal line. Please observe the electrical specification of the module's SMT application interface and the external application's interface.

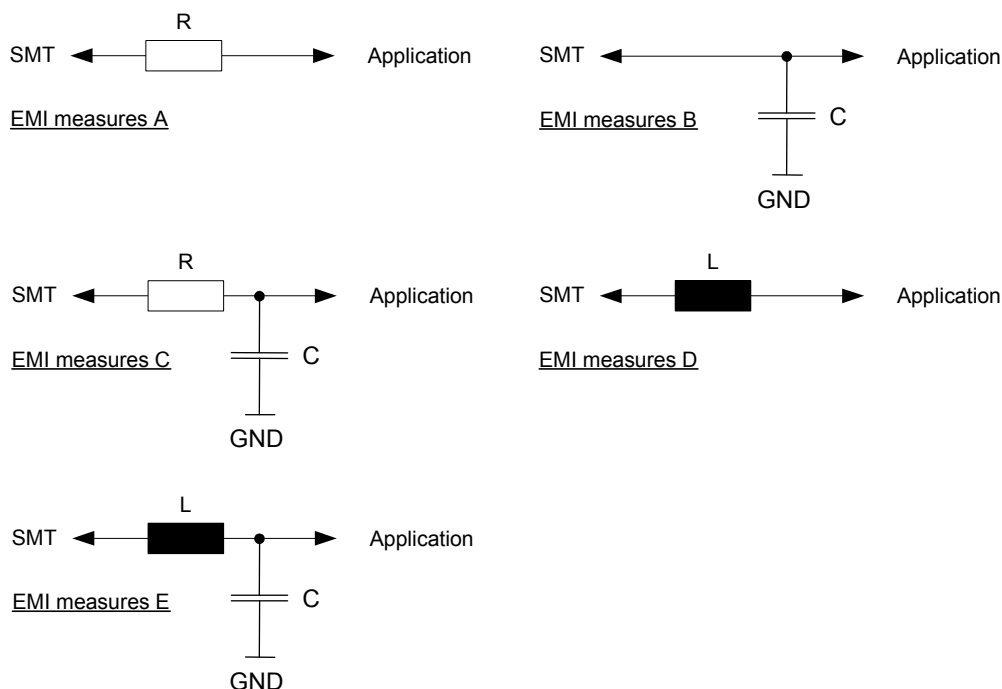

**Figure 51:** EMI circuits

Note: In case the application uses an internal GSM antenna that is implemented close to the EHS5-E/EHS5-US module, Thales strongly recommends sufficient EMI measures, e.g. of type B or C, for each digital input or output.

## 3.8 Blocking against RF on Interface Lines

The following table lists for each signal line at the module's SMT application interface the EMI measures that may be implemented.

**Table 18:** EMI measures on the application interface

Signal name	EMI measures					Remark
	A	B	C	D	E	
CCIN	x			x		
CCRST		x				The external capacitor should be not higher than 10pF. The value of the capacitor depends on the external application.
CCIO		x				
CCCLK		x				
RXD0	x	x	x	x	x	
TXD0	x	x	x	x	x	
CTS0	x	x	x	x	x	
RTS0	x	x	x	x	x	
GPIO1/DTR0	x	x	x	x	x	
GPIO2/DCD0	x	x	x	x	x	
GPIO3/DSR0/SPI_CLK	x	x	x	x	x	
GPIO4/FST_SHDN	x	x	x	x	x	
GPIO5/LED	x	x	x	x	x	
GPIO6/PWM2	x	x	x	x	x	
GPIO7/PWM1	x	x	x	x	x	
GPIO8/COUNTER	x	x	x	x	x	
GPIO16/RXD1/MOSI	x	x	x	x	x	
GPIO17/TXD1/MISO	x	x	x	x	x	
GPIO18/RTS1	x	x	x	x	x	
GPIO19/CTS1/SPI_CS	x	x	x	x	x	
GPIO20/TXDDAI	x	x	x	x	x	
GPIO21/RXDDAI	x	x	x	x	x	
GPIO22/TFSDAI	x	x	x	x	x	
GPIO23/SCLK	x	x	x	x	x	
GPIO24/RING0	x	x	x	x	x	
I2CDAT		x		x		The rising signal edge is reduced with an additional capacitor.
I2CCLK		x		x		
V180		x		x	x	
VCORE		x		x	x	
BATT <sup>+</sup> <sub>RF</sub> (pad 53)		x	x			Measures required if BATT <sup>+</sup> <sub>RF</sub> is close to internal GSM antenna - e.g., 39pF blocking capacitor to ground
BATT <sup>+</sup> <sub>BB</sub> (pad 5)		x	x			

### 3.9 Reliability Characteristics

The test conditions stated below are an extract of the complete test specifications.

**Table 19:** Summary of reliability test conditions

Type of test	Conditions	Standard
Vibration	Frequency range: 10-20Hz; acceleration: 5g Frequency range: 20-500Hz; acceleration: 20g Duration: 20h per axis; 3 axes	DIN IEC 60068-2-6 <sup>1</sup>
Shock half-sinus	Acceleration: 500g Shock duration: 1ms 1 shock per axis 6 positions ( $\pm$ x, y and z)	DIN IEC 60068-2-27
Dry heat	Temperature: $+70 \pm 2^{\circ}\text{C}$ Test duration: 16h Humidity in the test chamber: < 50%	EN 60068-2-2 Bb ETS 300 019-2-7
Temperature change (shock)	Low temperature: $-40^{\circ}\text{C} \pm 2^{\circ}\text{C}$ High temperature: $+85^{\circ}\text{C} \pm 2^{\circ}\text{C}$ Changeover time: < 30s (dual chamber system) Test duration: 1h Number of repetitions: 100	DIN IEC 60068-2-14 Na ETS 300 019-2-7
Damp heat cyclic	High temperature: $+55^{\circ}\text{C} \pm 2^{\circ}\text{C}$ Low temperature: $+25^{\circ}\text{C} \pm 2^{\circ}\text{C}$ Humidity: 93% $\pm$ 3% Number of repetitions: 6 Test duration: 12h + 12h	DIN IEC 60068-2-30 Db ETS 300 019-2-5
Cold (constant exposure)	Temperature: $-40 \pm 2^{\circ}\text{C}$ Test duration: 16h	DIN IEC 60068-2-1

1. For reliability tests in the frequency range 20-500Hz the Standard's acceleration reference value was increased to 20g.

## 4 Mechanical Dimensions, Mounting and Packaging

The following sections describe the mechanical dimensions of EHS5-E/EHS5-US and give recommendations for integrating EHS5-E/EHS5-US into the host application.

Additional information can be found in a number of files containing Gerber data for the external application footprint and product model data in STEP format. These data are zipped in an extra file package supplied along with the EHS5-E/EHS5-US documentation package. To open these files commonly used Gerber and STEP viewers may be employed. The file package is named ehs5\_gerber\_stp\_v01.7z.

### 4.1 Mechanical Dimensions of EHS5-E/EHS5-US

Figure 52 shows the top and bottom view of EHS5-E/EHS5-US and provides an overview of the board's mechanical dimensions. For further details see Figure 53.

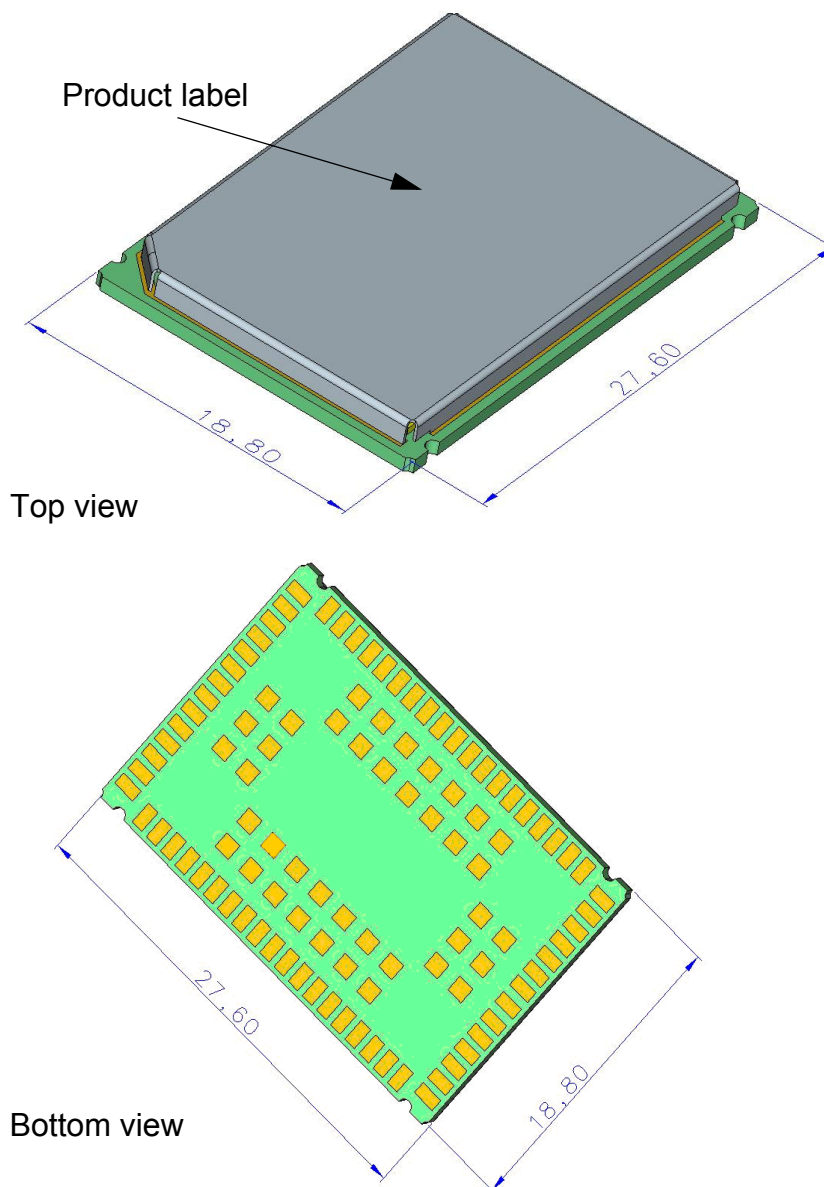


Figure 52: EHS5-E/EHS5-US– top and bottom view





## 4.2 Mounting EHS5-E/EHS5-US onto the Application Platform

This section describes how to mount EHS5-E/EHS5-US onto the PCBs (=printed circuit boards), including land pattern and stencil design, board-level characterization, soldering conditions, durability and mechanical handling. For more information on issues related to SMT module integration see also [4].


Note: To avoid short circuits between signal tracks on an external application's PCB and various markings at the bottom side of the module, it is recommended not to route the signal tracks on the top layer of an external PCB directly under the module, or at least to ensure that signal track routes are sufficiently covered with solder resist.

### 4.2.1 SMT PCB Assembly

#### 4.2.1.1 Land Pattern and Stencil

The land pattern and stencil design as shown below is based on Thales characterizations for lead-free solder paste on a four-layer test PCB and a 110 respectively 150 micron thick stencil.

The land pattern given in [Figure 54](#) reflects the module's pad layout, including signal pads and ground pads (for pad assignment see [Section 2.1.1](#)).

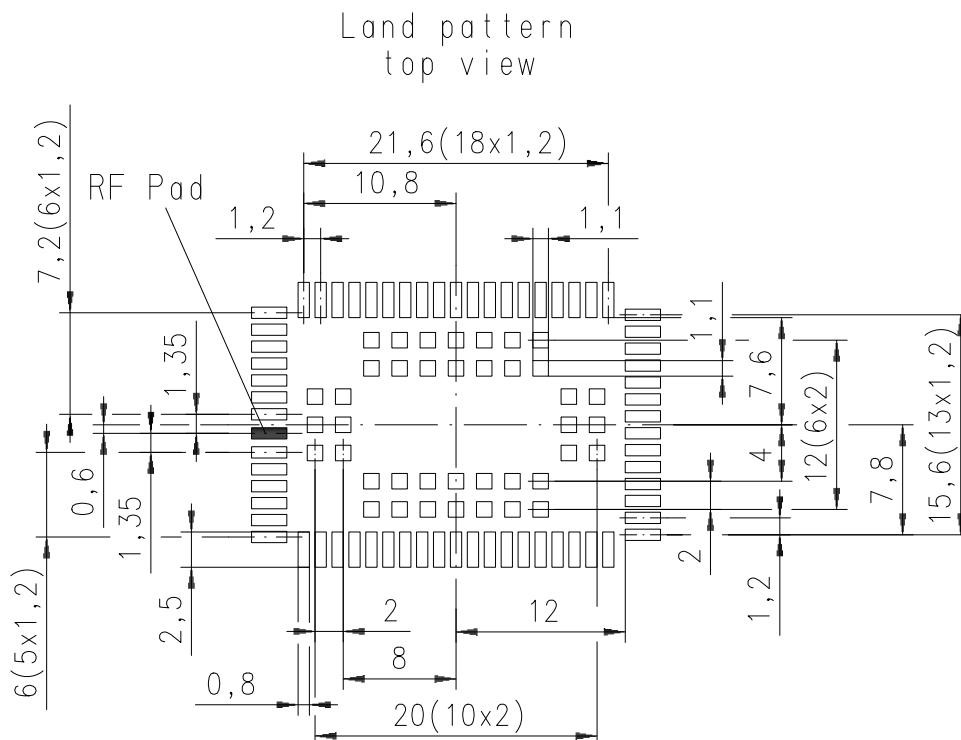

**Figure 54:** Land pattern (top view)

The stencil design illustrated in [Figure 55](#) and [Figure 56](#) is recommended by Thales as a result of extensive tests with Thales Daisy Chain modules.

The central ground pads are primarily intended for stabilizing purposes, and may show some more voids than the application interface pads at the module's rim. This is acceptable, since they are electrically irrelevant.

4.2 Mounting EHS5-E/EHS5-US onto the Application Platform

Note that depending on coplanarity or other properties of the external PCB, it could be that all of the central ground pads may have to be soldered. For this reason the land pattern design shown in Figure 54 provides for both of these alternatives and only a modification of the stencil may be needed.

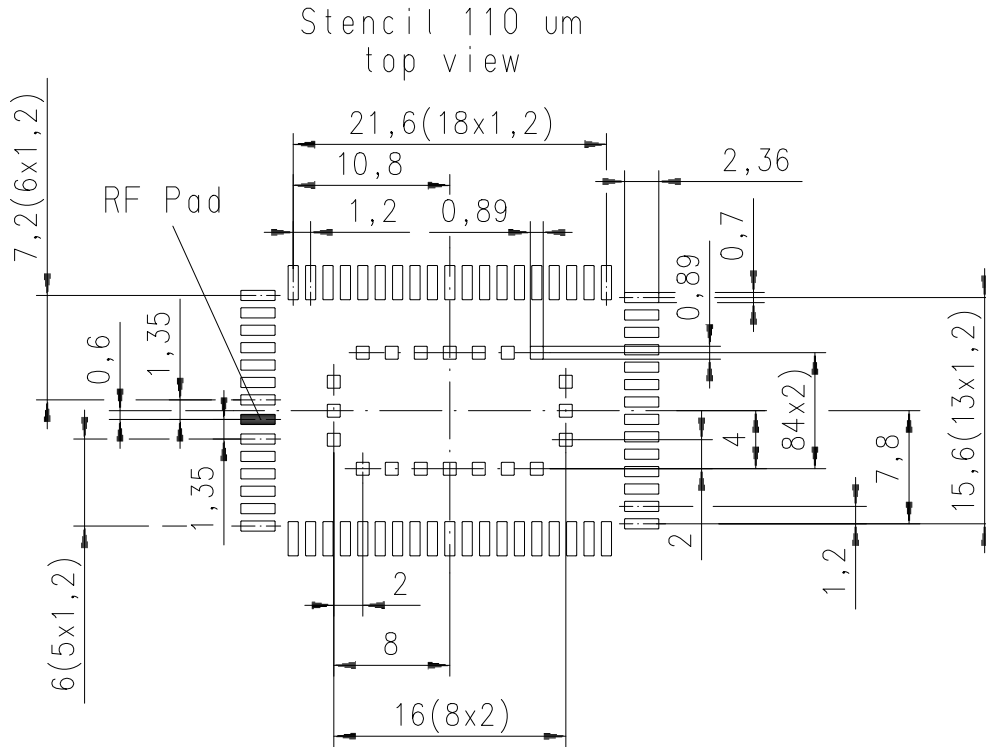


Figure 55: Recommended design for 110 micron thick stencil (top view)

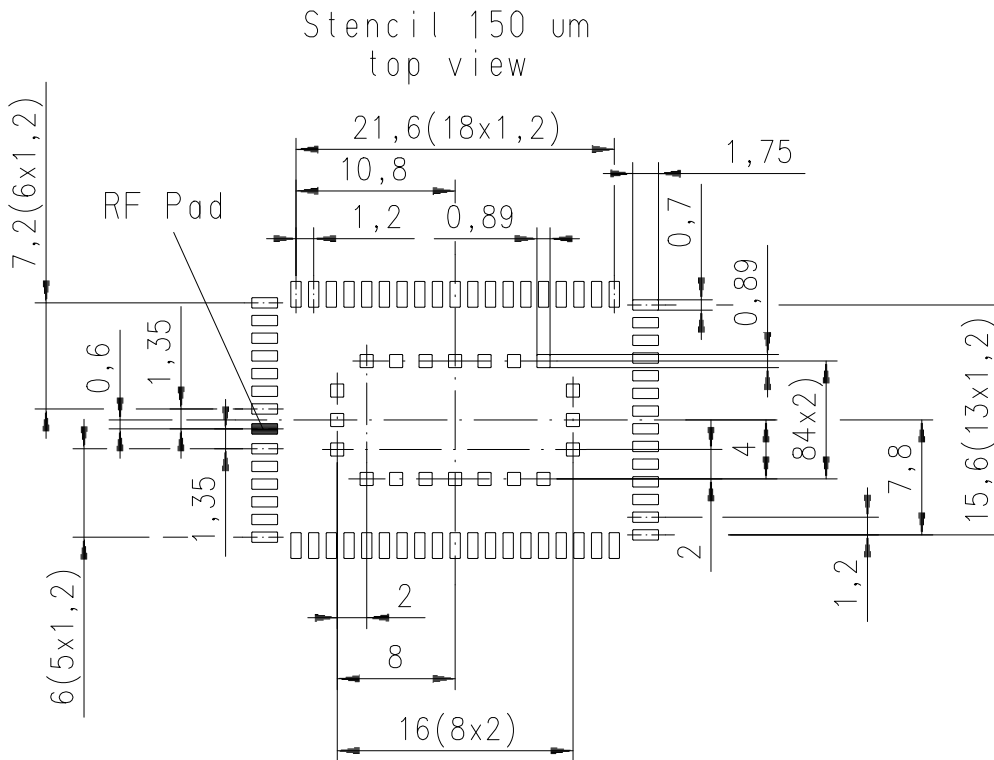


Figure 56: Recommended design for 150 micron thick stencil (top view)

### 4.2.1.2 Board Level Characterization

Board level characterization issues should also be taken into account if devising an SMT process.

Characterization tests should attempt to optimize the SMT process with regard to board level reliability. This can be done by performing the following physical tests on sample boards: Peel test, bend test, tensile pull test, drop shock test and temperature cycling. Sample surface mount checks are described in [\[4\]](#).

It is recommended to characterize land patterns before an actual PCB production, taking individual processes, materials, equipment, stencil design, and reflow profile into account. For land and stencil pattern design recommendations see also [Section 4.2.1.1](#). Optimizing the solder stencil pattern design and print process is necessary to ensure print uniformity, to decrease solder voids, and to increase board level reliability.

Daisy chain modules for SMT characterization are available on request. For details refer to [\[4\]](#).

Generally, solder paste manufacturer recommendations for screen printing process parameters and reflow profile conditions should be followed. Maximum ratings are described in [Section 4.2.3](#).

## 4.2.2 Moisture Sensitivity Level

EHS5-E/EHS5-US comprises components that are susceptible to damage induced by absorbed moisture.

Thales's EHS5-E/EHS5-US module complies with the latest revision of the IPC/JEDEC J-STD-020 Standard for moisture sensitive surface mount devices and is classified as MSL 4.

For additional MSL (=moisture sensitivity level) related information see [Section 4.2.4](#) and [Section 4.3.2](#).

## 4.2.3 Soldering Conditions and Temperature

### 4.2.3.1 Reflow Profile

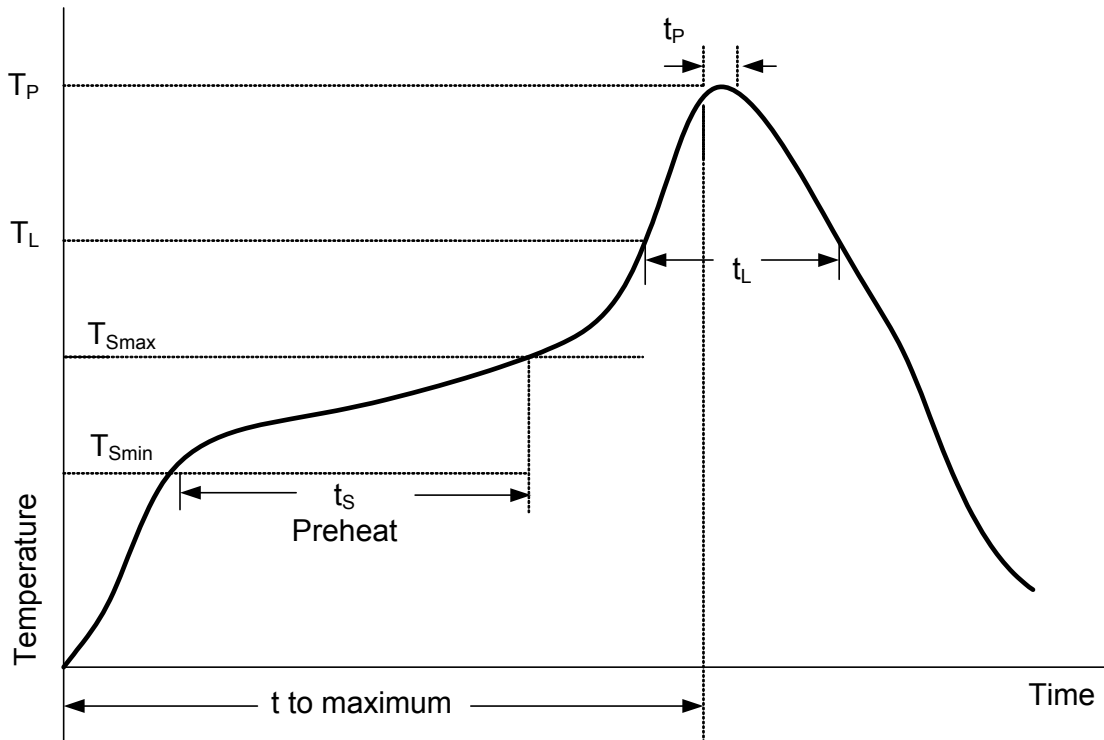


Figure 57: Reflow Profile

Table 20: Reflow temperature ratings<sup>1</sup>

Profile Feature	Pb-Free Assembly
Preheat & Soak Temperature Minimum ( $T_{Smin}$ ) Temperature Maximum ( $T_{Smax}$ ) Time ( $t_{Smin}$ to $t_{Smax}$ ) ( $t_S$ )	150°C 200°C 60-120 seconds
Average ramp up rate ( $T_{Smax}$ to $T_P$ )	3K/second max.
Liquidous temperature ( $T_L$ ) Time at liquidous ( $t_L$ )	217°C 60-90 seconds
Peak package body temperature ( $T_P$ )	245°C +0/-5°C
Time ( $t_P$ ) within 5 °C of the peak package body temperature ( $T_P$ )	30 seconds max.
Average ramp-down rate ( $T_P$ to $T_{Smax}$ )	3 K/second max.
Time 25°C to maximum temperature	8 minutes max.

1. Please note that the reflow profile features and ratings listed above are based on the joint industry standard IPC/JEDEC J-STD-020D.1, and are as such meant as a general guideline. For more information on reflow profiles and their optimization please refer to [4].

### 4.2.3.2 Maximum Temperature and Duration

The following limits are recommended for the SMT board-level soldering process to attach the module:

- A maximum module temperature of 240°C. This specifies the temperature as measured at the module's top side.
- A maximum duration of 15 seconds at this temperature.

Please note that while the solder paste manufacturers' recommendations for best temperature and duration for solder reflow should generally be followed, the limits listed above must not be exceeded.

EHS5-E/EHS5-US is specified for one soldering cycle only. Once EHS5-E/EHS5-US is removed from the application, the module will very likely be destroyed and cannot be soldered onto another application.

## 4.2.4 Durability and Mechanical Handling

### 4.2.4.1 Storage Conditions

EHS5-E/EHS5-US modules, as delivered in tape and reel carriers, must be stored in sealed, moisture barrier anti-static bags. The conditions stated below are only valid for modules in their original packed state in weather protected, non-temperature-controlled storage locations. Normal storage time under these conditions is 12 months maximum.

**Table 21:** Storage conditions

Type	Condition	Unit	Reference
Air temperature: Low High	-25 +40	°C	IPC/JEDEC J-STD-033A
Humidity relative: Low High	10 90 at 40°C	%	IPC/JEDEC J-STD-033A
Air pressure: Low High	70 106	kPa	IEC TR 60271-3-1: 1K4 IEC TR 60271-3-1: 1K4
Movement of surrounding air	1.0	m/s	IEC TR 60271-3-1: 1K4
Water: rain, dripping, icing and frosting	Not allowed	---	---
Radiation: Solar Heat	1120 600	W/m <sup>2</sup>	ETS 300 019-2-1: T1.2, IEC 60068-2-2 Bb ETS 300 019-2-1: T1.2, IEC 60068-2-2 Bb
Chemically active substances	Not recommended		IEC TR 60271-3-1: 1C1L
Mechanically active substances	Not recommended		IEC TR 60271-3-1: 1S1
Vibration sinusoidal: Displacement Acceleration Frequency range	1.5 5 2-9 9-200	mm m/s <sup>2</sup> Hz	IEC TR 60271-3-1: 1M2
Shocks: Shock spectrum Duration Acceleration	Semi-sinusoidal 1 50	ms m/s <sup>2</sup>	IEC 60068-2-27 Ea

#### 4.2.4.2 Processing Life

EHS5-E/EHS5-US must be soldered to an application within 72 hours after opening the MBB (=moisture barrier bag) it was stored in.

As specified in the IPC/JEDEC J-STD-033 Standard, the manufacturing site processing the modules should have ambient temperatures below 30°C and a relative humidity below 60%.

#### 4.2.4.3 Baking

Baking conditions are specified on the moisture sensitivity label attached to each MBB (see [Figure 62](#) for details):

- It is *not necessary* to bake EHS5-E/EHS5-US, if the conditions specified in [Section 4.2.4.1](#) and [Section 4.2.4.2](#) were not exceeded.
- It is *necessary* to bake EHS5-E/EHS5-US, if any condition specified in [Section 4.2.4.1](#) and [Section 4.2.4.2](#) was exceeded.

If baking is necessary, the modules must be put into trays that can be baked to at least 125°C. Devices should not be baked in tape and reel carriers at any temperature.

#### 4.2.4.4 Electrostatic Discharge

ESD (=electrostatic discharge) may lead to irreversable damage for the module. It is therefore advisable to develop measures and methods to counter ESD and to use these to control the electrostatic environment at manufacturing sites.

Please refer to [Section 3.7](#) for further information on electrostatic discharge.



4.3 Packaging

4.3 Packaging

4.3.1 Tape and Reel

The single-feed tape carrier for EHS5-E/EHS5-US is illustrated in Figure 58. The figure also shows the proper part orientation. The tape width is 44 mm and the EHS5-US modules are placed on the tape with a 28-mm pitch. The reels are 330 mm in diameter with a core diameter of 100 mm. Each reel contains 500 modules.

4.3.1.1 Orientation

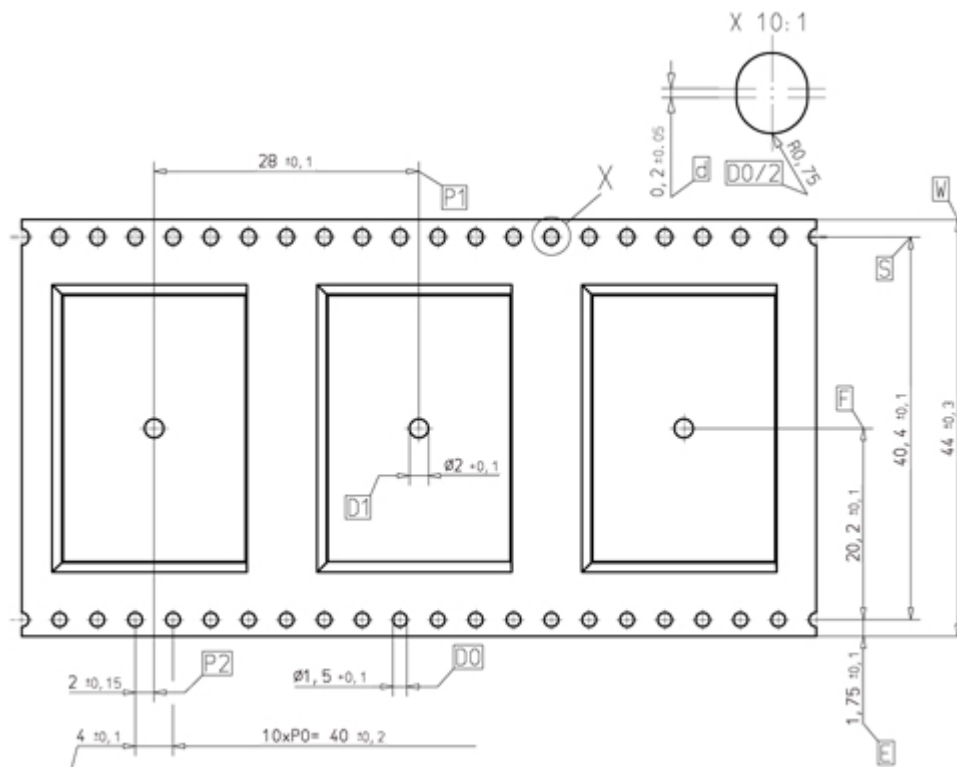


Figure 58: Carrier tape


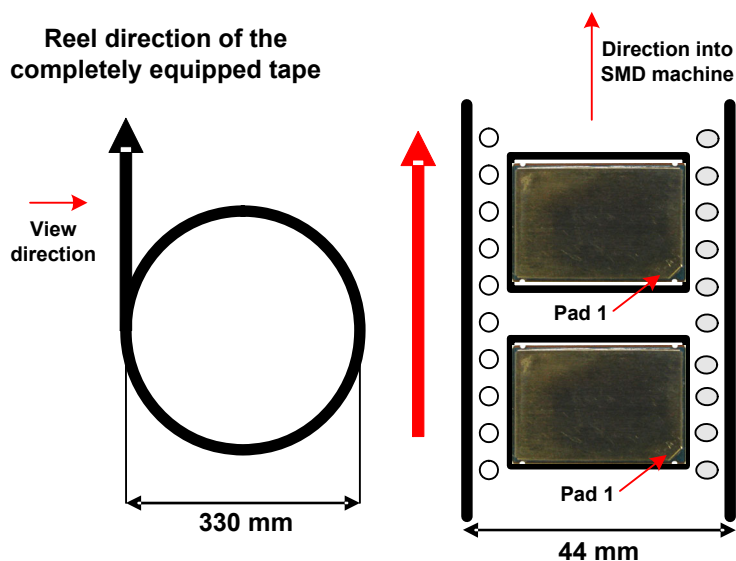


Figure 59: Reel direction

### 4.3.1.2 Barcode Label

A barcode label provides detailed information on the tape and its contents. It is attached to the reel.

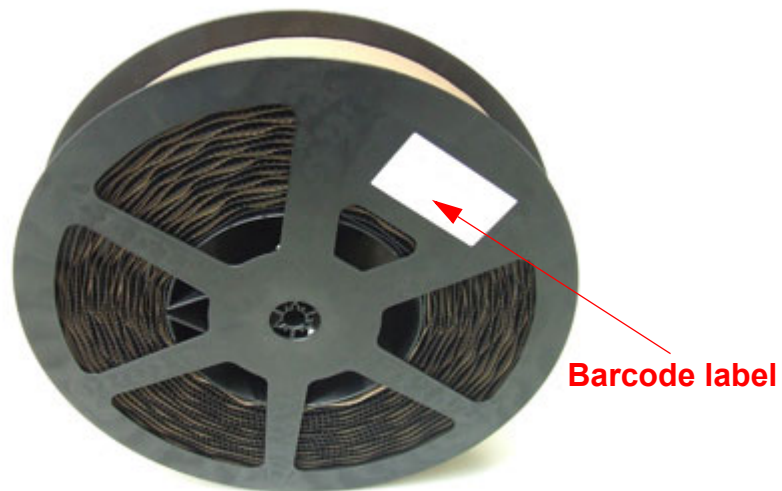

**Figure 60:** Barcode label on tape reel


## 4.3.2 Shipping Materials

EHS5-E/EHS5-US is distributed in tape and reel carriers. The tape and reel carriers used to distribute EHS5-E/EHS5-US are packed as described below, including the following required shipping materials:

- Moisture barrier bag, including desiccant and humidity indicator card
- Transportation box


### 4.3.2.1 Moisture Barrier Bag

The tape reels are stored inside an MBB (=moisture barrier bag), together with a humidity indicator card and desiccant pouches - see [Figure 61](#). The bag is ESD protected and delimits moisture transmission. It is vacuum-sealed and should be handled carefully to avoid puncturing or tearing. The bag protects the EHS5-E/EHS5-US modules from moisture exposure. It should not be opened until the devices are ready to be soldered onto the application.

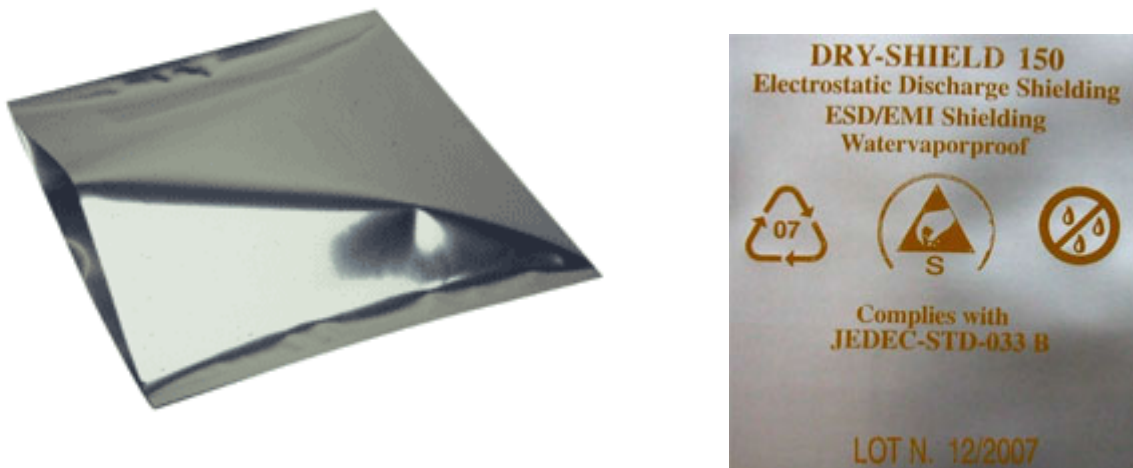

**Figure 61:** Moisture barrier bag (MBB) with imprint

The label shown in [Figure 62](#) summarizes requirements regarding moisture sensitivity, including shelf life and baking requirements. It is attached to the outside of the moisture barrier bag.



**CAUTION**

This bag contains

**MOISTURE-SENSITIVE DEVICES**

LEVEL

4

1. Calculated shelf life in sealed bag:  
12 months at < 40 °C and < 90% relative humidity (RH)
2. Peak package body temperature: 245 °C
3. After bag is opened, devices that will be subject to reflow solder or other high temperature process must be
  - a) mounted within: 72 hours of factory conditions < 30 °C / 60% RH
  - b) stored at < 10% RH
4. Devices require bake, before mounting, if
  - a) Humidity Indicator Card is > 10% when read at 23 +/- 5 °C
  - b) 3a or 3b not met
5. If baking is required, refer to IPC/Jedec J-STD-033 for bake procedure  
 Note: The devices are shipped in a non heat-resistant carrier and may not be baked in the carriers
6. The maximum guaranteed soldering cycle of the module is limited to 1 cycle

Bag Seal Date:           DD.MM.YYYY          

Note: MSL level and body temperature defined by IPC/JEDEC J-STD-020


# CINTERION

INFO-2

DELIVERYPARTNUMBER

Peak package body temperature: 245°C Qty. : 000

Bag Seal Date (DDMMYYYY) : DDMMYYYY



Package ID: WM8000123412




Figure 62: Moisture Sensitivity Label

## 4.3 Packaging

MBBs contain one or more desiccant pouches to absorb moisture that may be in the bag. The humidity indicator card described below should be used to determine whether the enclosed components have absorbed an excessive amount of moisture.

The desiccant pouches should not be baked or reused once removed from the MBB.

The humidity indicator card is a moisture indicator and is included in the MBB to show the approximate relative humidity level within the bag. Sample humidity cards are shown in [Figure 63](#). If the components have been exposed to moisture above the recommended limits, the units will have to be rebaked.

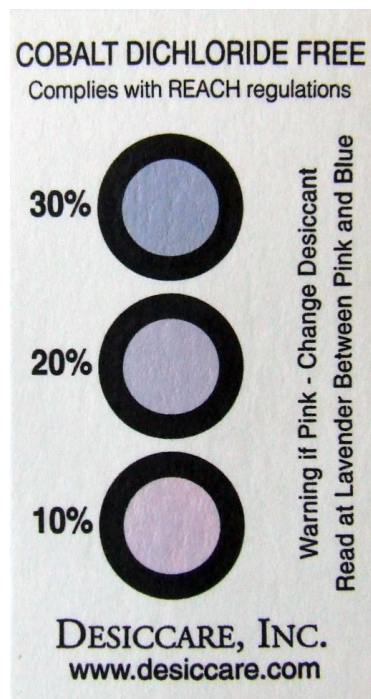


Figure 63: Humidity Indicator Card - HIC

A baking is required if the humidity indicator inside the bag indicates 10% RH or more.

#### 4.3.2.2 Transportation Box

Tape and reel carriers are distributed in a box, marked with a barcode label for identification purposes. A box contains two reels with 500 modules each.

## 4.3 Packaging

### 4.3.3 Trays

If small module quantities are required, e.g., for test and evaluation purposes, EHS5-E/EHS5-US may be distributed in trays (for dimensions see [Figure 67](#)). The small quantity trays are an alternative to the single-feed tape carriers normally used. However, the trays are not designed for machine processing. They contain modules to be (hand) soldered onto an external application (for information on hand soldering see [\[4\]](#)).

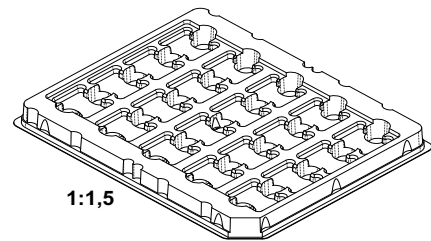


Figure 64: Small quantity tray

Trays are packed and shipped in the same way as tape carriers, including a moisture barrier bag with desiccant and humidity indicator card as well as a transportation box (see also [Section 4.3.2](#)).



Figure 65: Tray to ship odd module amounts



Figure 66: Trays with packaging materials



4.3 Packaging

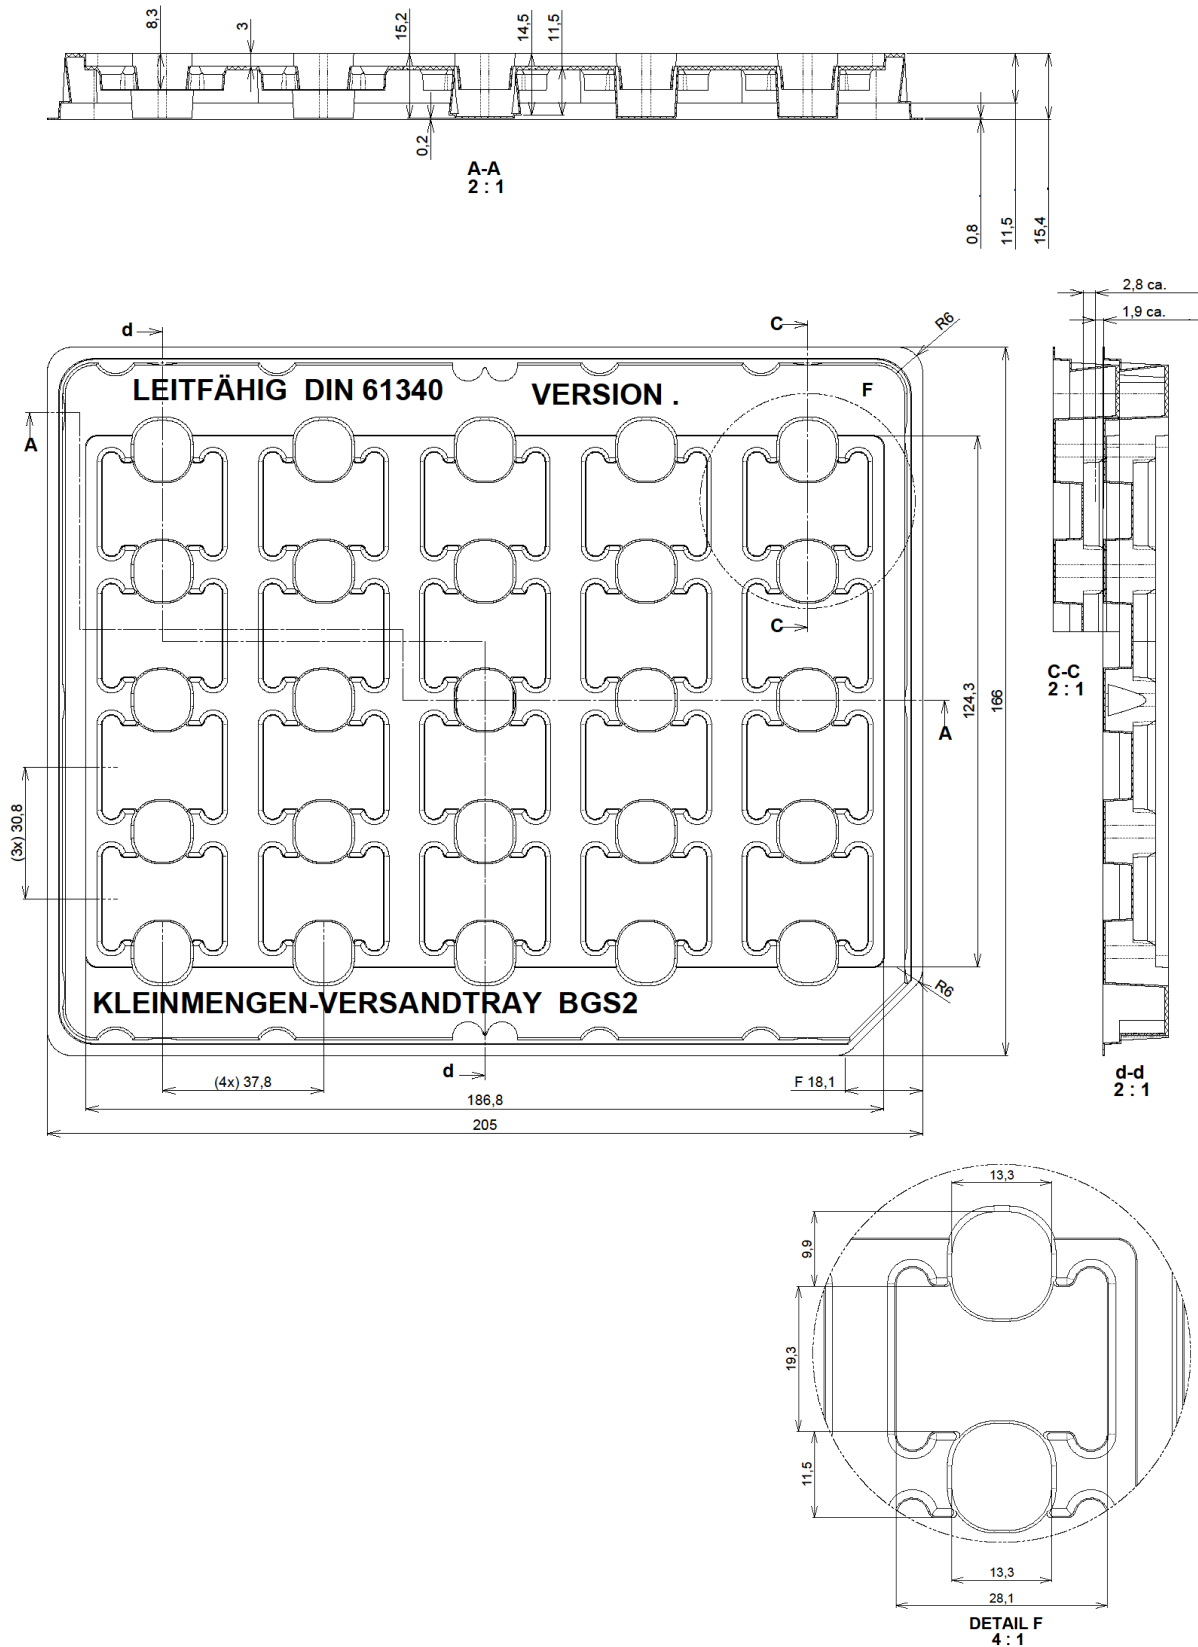


Figure 67: Tray dimensions



## 5 Regulatory and Type Approval Information

### 5.1 Directives and Standards


EHS5-E/EHS5-US is designed to comply with the directives and standards listed below.

It is the responsibility of the application manufacturer to ensure compliance of the final product with all provisions of the applicable directives and standards as well as with the technical specifications provided in the "EHS5-E/EHS5-US Hardware Interface Description".<sup>1</sup>

**Table 22:** Directives

2014/53/EU	Directive of the European Parliament and of the Council of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC. The product is labeled with the CE conformity mark 
2002/95/EC (RoHS 1) 2011/65/EC (RoHS 2)	Directive of the European Parliament and of the Council of 27 January 2003 (and revised on 8 June 2011) on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) 

**Table 23:** Standards of North American type approval<sup>1</sup>

CFR Title 47	Code of Federal Regulations, Part 22 and Part 24 (Telecommunications, PCS); US Equipment Authorization FCC
OET Bulletin 65 (Edition 97-01)	Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields
UL 60 950-1	Product Safety Certification (Safety requirements) 
NAPRD.03 V5.35	Overview of PCS Type certification review board Mobile Equipment Type Certification and IMEI control PCS Type Certification Review board (PTCRB)
RSS132 (Issue2) RSS133 (Issue5)	Canadian Standard

1. Applies to the module variant EHS5-US only.

**Table 24:** Standards of European type approval<sup>1</sup>

3GPP TS 51.010-1	Digital cellular telecommunications system (Release 7); Mobile Station (MS) conformance specification;
GCF-CC V3.71	Global Certification Forum - Certification Criteria
ETSI EN 301 511 V12.5.1	Global System for Mobile communications (GSM); Mobile Stations (MS) equipment; Harmonized Standard covering the essential requirements of article 3.2 of Directive 2014/53/EU

1. Manufacturers of applications which can be used in the US shall ensure that their applications have a PTCRB approval. For this purpose they can refer to the PTCRB approval of the respective module.



## 5.1 Directives and Standards

**Table 24:** Standards of European type approval<sup>1</sup>

ETSI EN 301 908-1 V11.1.1	IMT cellular networks; Harmonised Standard covering the essential requirements of article 3.2 of the Directive 2014/53/EU; Part 1: Introduction and common requirements
ETSI EN 301 908-2 V11.1.2	IMT cellular networks; Harmonised Standard covering the essential requirements of article 3.2 of the Directive 2014/53/EU; Part 2: CDMA Direct Spread (UTRA FDD) User Equipment (UE)
Draft ETSI EN 301 489-52 V1.1.0	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 52: Specific conditions for Cellular Communication Mobile and portable (UE) radio and ancillary equipment; Harmonized Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU
Draft ETSI EN 301 489-01 V2.2.0	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements; Harmonized Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU and the essential requirements of article 6 of Directive 2014/30/EU
EN 60950-1: 2006 +A11:2009+A1:2010+A12:2011+A2:2013	Safety of information technology equipment

1. Applies to the module variant EHS5-E only.

**Table 25:** Requirements of quality

IEC 60068	Environmental testing
DIN EN 60529	IP codes
EN 62311:2008	Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz - 300 GHz)

5.1 Directives and Standards

**Table 26:** Standards of the Ministry of Information Industry of the People’s Republic of China

SJ/T 11363-2006	“Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products” (2006-06).
SJ/T 11364-2006	<p>“Marking for Control of Pollution Caused by Electronic Information Products” (2006-06).</p> <p>According to the “Chinese Administration on the Control of Pollution caused by Electronic Information Products” (ACPEIP) the EPUP, i.e., Environmental Protection Use Period, of this product is 20 years as per the symbol shown here, unless otherwise marked. The EPUP is valid only as long as the product is operated within the operating limits described in the Thales Hardware Interface Description.</p> <p>Please see <a href="#">Table 27</a> for an overview of toxic or hazardous substances or elements that might be contained in product parts in concentrations above the limits defined by SJ/T 11363-2006.</p>



**Table 27:** Toxic or hazardous substances or elements with defined concentration limits

部件名称 Name of the part	有毒有害物质或元素 Hazardous substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 (Metal Parts)	○	○	○	○	○	○
电路模块 (Circuit Modules)	X	○	○	○	○	○
电缆及电缆组件 (Cables and Cable Assemblies)	○	○	○	○	○	○
塑料和聚合物部件 (Plastic and Polymeric parts)	○	○	○	○	○	○

O:  
表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006 标准规定的限量要求以下。  
Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

X:  
表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。  
Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part *might exceed* the limit requirement in SJ/T11363-2006.

## 5.2 SAR requirements specific to portable mobiles

Mobile phones, PDAs or other portable transmitters and receivers incorporating a GSM module must be in accordance with the guidelines for human exposure to radio frequency energy. This requires the Specific Absorption Rate (SAR) of portable EHS5-E/EHS5-US based applications to be evaluated and approved for compliance with national and/or international regulations.

Since the SAR value varies significantly with the individual product design manufacturers are advised to submit their product for approval if designed for portable use. For European and US markets the relevant directives are mentioned below. It is the responsibility of the manufacturer of the final product to verify whether or not further standards, recommendations or directives are in force outside these areas.

### *Products intended for sale on US markets<sup>1</sup>*

ES 59005/ANSI C95.1 Considerations for evaluation of human exposure to Electromagnetic Fields (EMFs) from Mobile Telecommunication Equipment (MTE) in the frequency range 30MHz - 6GHz

### *Products intended for sale on European markets*

EN 50360	Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300MHz - 3GHz)
EN 62311:2008	Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz - 300 GHz)

Please note that SAR requirements are specific only for portable devices and not for mobile devices as defined below:

- **Portable device:**  
A portable device is defined as a transmitting device designed to be used so that the radiating structure(s) of the device is/are within 20 centimeters of the body of the user.
- **Mobile device:**  
A mobile device is defined as a transmitting device designed to be used in other than fixed locations and to generally be used in such a way that a separation distance of at least 20 centimeters is normally maintained between the transmitter's radiating structure(s) and the body of the user or nearby persons. In this context, the term "fixed location" means that the device is physically secured at one location and is not able to be easily moved to another location.


---

1. Applies for the quad band module variant EHS5-US only.

## 5.3 Reference Equipment for Type Approval

## 5.3 Reference Equipment for Type Approval

The Thales reference setup submitted to type approve EHS5-E/EHS5-US (including a special approval adapter for the DSB75) is shown in the following figure<sup>1</sup>:

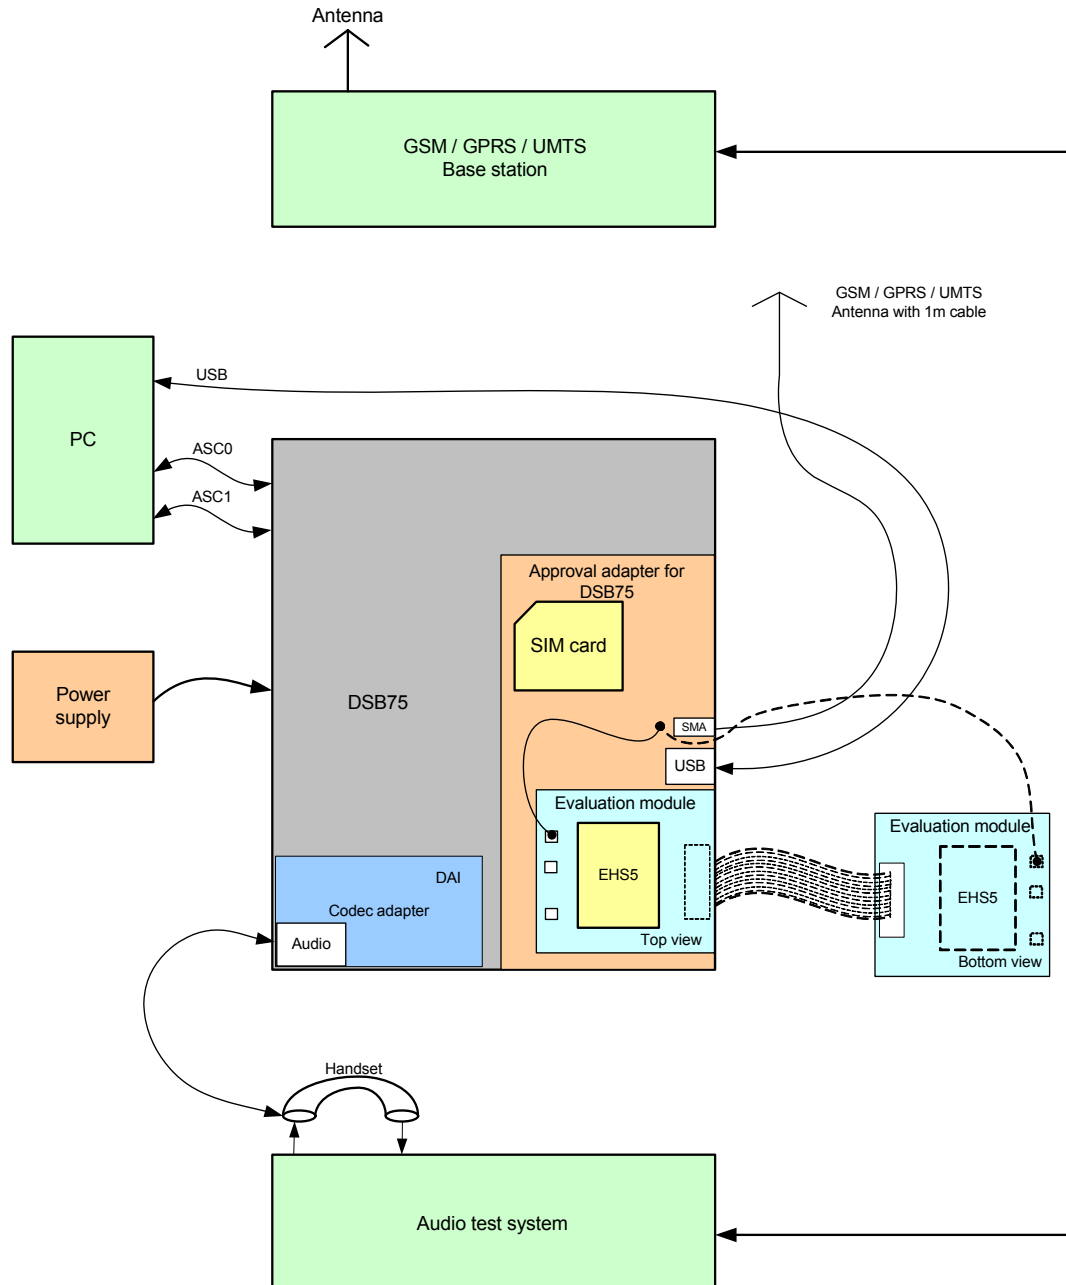

**Figure 68:** Reference equipment for Type Approval

1. For RF performance tests a mini-SMT/U.FL to SMA adapter with attached 6dB coaxial attenuator is chosen to connect the evaluation module directly to the GSM/UMTS test equipment instead of employing the SMA antenna connectors on the EHS5-E/EHS5-US-DSB75 adapter as shown in Figure 68. The following products are recommended:  
 Hirose SMA-Jack/U.FL-Plug conversion adapter HRMJ-U.FLP(40)  
 (for details see see <http://www.hirose-connectors.com/> or <http://www.farnell.com/>)  
 Aeroflex Weinschel Fixed Coaxial Attenuator Model 3T/4T  
 (for details see <http://www.aeroflex.com/ams/weinschel/pdfs/wmod3&4T.pdf>)

## 5.4 Compliance with FCC and ISED Rules and Regulations

The Equipment Authorization Certification for the Thales reference application described in [Section 5.3](#) will be registered under the following identifiers<sup>1</sup>:

*FCC Identifier: QIPEHS5-US*

*ISED Certification Number: 7830A-EHS5US*

*Granted to THALES DIS AIS Deutschland GmbH*

Manufacturers of mobile or fixed devices incorporating EHS5-US modules are authorized to use the FCC Grants and ISED Certificates of the EHS5-US modules for their own final products according to the conditions referenced in these documents. In this case, an FCC/ IC label of the module shall be visible from the outside, or the host device shall bear a second label stating "Contains FCC ID: QIPEHS5-US", and accordingly "Contains IC: 7830A-EHS5US". The integration is limited to fixed or mobile categorized host devices, where a separation distance between the antenna and any person of min. 20cm can be assured during normal operating conditions. For mobile and fixed operation configurations the antenna gain, including cable loss, must not exceed the limits 2.15dBi for GSM900 / GSM1800, 2.15dBi for WCDMA Band I/VIII.

### IMPORTANT:

Manufacturers of portable applications incorporating EHS5-US modules are required to have their final product certified and apply for their own FCC Grant and ISED Certificate related to the specific portable mobile. This is mandatory to meet the SAR requirements for portable mobiles (see [Section 5.2](#) for detail).

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and with ISED license-exempt RSS standard(s). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

If Canadian approval is requested for devices incorporating EHS5-US modules the below notes will have to be provided in the English and French language in the final user documentation. Manufacturers/OEM Integrators must ensure that the final user documentation does not contain any information on how to install or remove the module from the final product.

---

1. Applies only for the quad band module variant EHS5-US.

**Notes (ISED):**

(EN) This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

(FR) Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

**(EN) Radio frequency (RF) Exposure Information**

The radiated output power of the Wireless Device is below the Innovation, Science and Economic Development Canada (ISED) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the ISED RF Exposure limits under mobile exposure conditions. (antennas are greater than 20cm from a person's body).

**(FR) Informations concernant l'exposition aux fréquences radio (RF)**

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Innovation, Sciences et Développement économique Canada (ISDE). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a également été évalué et démontré conforme aux limites d'exposition aux RF d'ISDE dans des conditions d'exposition à des appareils mobiles (les antennes se situent à moins de 20cm du corps d'une personne).

## 6 Document Information

### 6.1 Revision History

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.003

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version **04.003a**

Chapter	What is new
--	New document layout

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.000a

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.003

Chapter	What is new
--	Updated DocId.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.000

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.000a

Chapter	What is new
<a href="#">2.1.2</a>	Revised I during Tx burst (GSM) for BATT+ (approx. 1.8A).
<a href="#">3.2.1.2</a> , <a href="#">3.2.1.4</a>	Added note on time required until USB interface is enumerated after module switch on.
<a href="#">3.2.3</a>	Added footnote for RTS0 signal's first start up configuration.
<a href="#">3.5.1</a>	Revised some current consumption ratings in <a href="#">Table 15</a> .
<a href="#">5.4</a>	Revised section and added antenna gain limits.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.512

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 04.000

Chapter	What is new
<a href="#">3.5.1</a>	Update <a href="#">Table 15</a> regarding power consumptions.
<a href="#">7.1</a>	Add a table footnote for the module label number.

## 6.1 Revision History

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.510

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.512

Chapter	What is new
5.1	Updated <a href="#">Table 24</a> regarding versions of standards
3.5.1	Update <a href="#">Table 15</a> regarding power consumptions
2.1.7	Add new sections <a href="#">Section 2.1.7.1</a> (based on the revised previous <a href="#">Section 2.1.7.1</a> ) and <a href="#">Section 2.1.7.2</a>

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.001a

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.510

Chapter	What is new
1.1	Update physical dimension (height)
1.3	Update <a href="#">Figure 2</a> and <a href="#">Figure 3</a> , and removed <a href="#">Figure 4</a>
2.1.4, 2.1.5, 2.1.9, 2.1.10	Update start-up behavior of the interfaces in <a href="#">Figure 7</a> , <a href="#">Figure 9</a> , <a href="#">Figure 19</a> and <a href="#">Figure 21</a>
2.1.10	Update <a href="#">Figure 20</a> regarding pull-up resistors
3.5.1	Update <a href="#">Table 15</a> regarding power consumptions
4.1	Update <a href="#">Figure 53</a> regarding module physical dimension (height)
5.1	Update <a href="#">Table 23</a> and <a href="#">Table 24</a>
7	Update <a href="#">Table 28</a> regarding ordering numbers for the modules
1.1, 2.1.4, 2.1.5	Update the bit rate range for ASC0 and ASC1

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.001

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.001a

Chapter	What is new
2.1.9	Update <a href="#">Figure 19</a> by adding new GPIO behavior for GPIO2 and GPIO3.
5.1	Replaced 1999/5/EC with 2014/53/EU in <a href="#">Table 24</a> . Added 2014/53/EU related requirements in <a href="#">Table 26</a> .
5.2	Added one more SAR requirement for Products intended for sale on European markets.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.782

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 03.001

Chapter	What is new
Throughout document	Revised GPIO startup behavior: All GPIO lines will initially start up as GPIOs, and may then be configured for an alternative functionality (see <a href="#">Section 2.1.9</a> ).
1.1	Revised memory space available for Java programs.



## 6.1 Revision History

Chapter	What is new
2.1.2	Revised requirement for ESR capacitor on BATT+ lines.
3.2.2.2	Added remark on SIM PIN not being required after EMERG_RST restart.
3.2.5.2	Added note on configurable undervoltage threshold.
3.4.3	New section <a href="#">Wake-up via RTS0</a> .
4.2.3.1	Added note regarding reflow profile features and ratings listed in <a href="#">Table 20</a> . Revised average ramp-down rate listed in <a href="#">Table 20</a> .
7.1	Added DSB Mini and Start Kit B80 to <a href="#">Table 28</a> .

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000c

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.782

Chapter	What is new
Throughout document	Renamed RF_OUT to ANT_GSM to be consistent with other products. Introduced BATT <sub>BB</sub> and BATT <sub>RF</sub> as distinct names for the BATT+ power supply lines for general power management (BB) and the GSM power amplifier (RF).
2.1.2	Revised CLmax value for V180. Added comment for ON line in <a href="#">Table 2</a> . Revised V <sub>IL</sub> max values for GPIOs.
2.1.10	Added internal pull-up resistor to <a href="#">Figure 20</a> .
3.2.1	Revised section.
3.2.1.1	New section <a href="#">Connecting EHS5-E/EHS5-US BATT+ Lines</a> (i.e., the revised previous section 3.2.4.2).
3.2.5.2	New section <a href="#">Undervoltage Shutdown</a> .
3.2.5.3	New section <a href="#">Overvoltage Shutdown</a> .
3.3	New section <a href="#">Automatic GPRS Multislot Class Change</a> .
3.5.4	New section <a href="#">Monitoring Power Supply by AT Command</a> .
4.2.3.2	Revised maximum temperature and duration during SMT board-level soldering process.
7.1	Revised ordering number for evaluation module.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000b

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000c

Chapter	What is new
2.1.4	Added note that an external pull down to ground on the DCD0 line during the startup phase will activate a special mode for the module.
2.1.7.3	New section <a href="#">Solutions for the Digital Audio Interface (DAI/PCM)</a> .
3.8	Added note on recommended EMI measures.
7.1	Revised ordering number for evaluation module.

## 6.1 Revision History

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000a  
 New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000b

Chapter	What is new
<a href="#">4.3.2.1</a>	Replaced humidity indicator card shown in <a href="#">Figure 63</a> .

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000  
 New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000a

Chapter	What is new
Throughout document	Revised EMERG_RST signal state while module is switched off (Low --> High), including clarification of reset state description.
<a href="#">2.1.1</a>	Revised table showing pad assignments.
<a href="#">2.1.2</a>	Added resolution and tolerance to ADC signal properties.
<a href="#">2.1.3</a>	Introduced new subsection to emphasize information on <a href="#">Reducing Power Consumption</a> .
<a href="#">2.1.9</a>	Removed note on GPIO high-impedance state after module startup.
<a href="#">2.1.11</a>	Revised maximum transmission rate for SPI interface.
<a href="#">2.3.1</a>	New section <a href="#">Sample Level Conversion Circuit</a> .
<a href="#">3.5.1</a>	Updated table listing power supply ratings.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.441  
 New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 02.000

Chapter	What is new
<a href="#">2.1.7</a>	Updated name of sample external codec that may be used with PCM functionality.
<a href="#">2.1.10</a>	Revised section to include AT configuration command.
<a href="#">2.1.11</a>	Revised section to include AT configuration command and figure showing SPI modes.
<a href="#">2.3</a>	Revised sample circuit for SIM interface in <a href="#">Figure 33</a> .
<a href="#">3.2.1.2</a> , <a href="#">3.2.1.3</a>	Removed note that AUTO_ON only works once after the BATT+ has been applied.
<a href="#">3.2.4.2</a>	New section Disconnect EHS5-E/EHS5-US BATT+ Lines.
<a href="#">4.2</a>	Added note regarding routing of signal tracks.

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.304a  
 New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.441

Chapter	What is new
<a href="#">3.2.1</a>	Revised sections describing hardware driven module switch on.

## 6.2 Related Documents

Preceding document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.304  
 New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.304a

Chapter	What is new
Throughout document	Replaced "impulse counter" with "pulse counter".
3.2.1.1	Revised recommended options for possible switch-on circuits.
<a href="#">3.2.5.1</a>	Added remark on 2 minute guard period for temperature URCs of level 1/-1.

New document: "EHS5-E/EHS5-US Hardware Interface Description" Version 01.304

Chapter	What is new
--	Initial document setup.

## 6.2 Related Documents

- [1] EHS5-E/EHS5-US AT Command Set
- [2] EHS5-E/EHS5-US Release Note
- [3] Application Note 40: Thermal Solutions
- [4] Application Note 48: SMT Module Integration
- [5] Universal Serial Bus Specification Revision 2.0, April 27, 2000

## 6.3 Terms and Abbreviations

Abbreviation	Description
ADC	Analog-to-digital converter
AGC	Automatic Gain Control
ANSI	American National Standards Institute
ARFCN	Absolute Radio Frequency Channel Number
ARP	Antenna Reference Point
ASC0/ASC1	Asynchronous Controller. Abbreviations used for first and second serial interface of EHS5-E/EHS5-US
B	Thermistor Constant
BER	Bit Error Rate
BTS	Base Transceiver Station
CB or CBM	Cell Broadcast Message
CE	Conformité Européene (European Conformity)
CHAP	Challenge Handshake Authentication Protocol
CPU	Central Processing Unit

## 6.3 Terms and Abbreviations

Abbreviation	Description
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear to Send
DAC	Digital-to-Analog Converter
DAI	Digital Audio Interface
dBm0	Digital level, 3.14dBm0 corresponds to full scale, see ITU G.711, A-law
DCE	Data Communication Equipment (typically modems, e.g. Thales module)
DCS 1800	Digital Cellular System, also referred to as PCN
DRX	Discontinuous Reception
DSB	Development Support Box
DSP	Digital Signal Processor
DSR	Data Set Ready
DTE	Data Terminal Equipment (typically computer, terminal, printer or, for example, GSM application)
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
EGSM	Enhanced GSM
EIRP	Equivalent Isotropic Radiated Power
EMC	Electromagnetic Compatibility
ERP	Effective Radiated Power
ESD	Electrostatic Discharge
ETS	European Telecommunication Standard
FCC	Federal Communications Commission (U.S.)
FDMA	Frequency Division Multiple Access
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GPIO	General Purpose Input/Output
GPRS	General Packet Radio Service
GSM	Global Standard for Mobile Communications
HiZ	High Impedance
HR	Half Rate
I/O	Input/Output
IC	Integrated Circuit
IMEI	International Mobile Equipment Identity
ISED	Innovation, Science and Economic Development Canada
ISO	International Standards Organization
ITU	International Telecommunications Union

## 6.3 Terms and Abbreviations

Abbreviation	Description
kbps	kbits per second
LED	Light Emitting Diode
Li-Ion/Li+	Lithium-Ion
Li battery	Rechargeable Lithium Ion or Lithium Polymer battery
Mbps	Mbits per second
MMI	Man Machine Interface
MO	Mobile Originated
MS	Mobile Station (GSM module), also referred to as TE
MSISDN	Mobile Station International ISDN number
MT	Mobile Terminated
NTC	Negative Temperature Coefficient
OEM	Original Equipment Manufacturer
PA	Power Amplifier
PAP	Password Authentication Protocol
PBCCH	Packet Switched Broadcast Control Channel
PCB	Printed Circuit Board
PCL	Power Control Level
PCM	Pulse Code Modulation
PCN	Personal Communications Network, also referred to as DCS 1800
PCS	Personal Communication System, also referred to as GSM 1900
PDU	Protocol Data Unit
PLL	Phase Locked Loop
PPP	Point-to-point protocol
PSK	Phase Shift Keying
PSU	Power Supply Unit
PWM	Pulse Width Modulation
R&TTE	Radio and Telecommunication Terminal Equipment
RAM	Random Access Memory
RF	Radio Frequency
RLS	Radio Link Stability
RMS	Root Mean Square (value)
RoHS	Restriction of the use of certain hazardous substances in electrical and electronic equipment.
ROM	Read-only Memory
RTC	Real Time Clock
RTS	Request to Send
Rx	Receive Direction
SAR	Specific Absorption Rate







## 6.3 Terms and Abbreviations

---

Abbreviation	Description
SAW	Surface Accoustic Wave
SELV	Safety Extra Low Voltage
SIM	Subscriber Identification Module
SMD	Surface Mount Device
SMS	Short Message Service
SMT	Surface Mount Technology
SRAM	Static Random Access Memory
TA	Terminal adapter (e.g. GSM module)
TDMA	Time Division Multiple Access
TE	Terminal Equipment, also referred to as DTE
TLS	Transport Layer Security
Tx	Transmit Direction
UART	Universal asynchronous receiver-transmitter
URC	Unsolicited Result Code
USSD	Unstructured Supplementary Service Data
VSWR	Voltage Standing Wave Ratio

## 6.4 Safety Precaution Notes

The following safety precautions must be observed during all phases of the operation, usage, service or repair of any cellular terminal or mobile incorporating EHS5-E/EHS5-US. Manufacturers of the cellular terminal are advised to convey the following safety information to users and operating personnel and to incorporate these guidelines into all manuals supplied with the product. Failure to comply with these precautions violates safety standards of design, manufacture and intended use of the product. Thales assumes no liability for customer's failure to comply with these precautions.

	<p>When in a hospital or other health care facility, observe the restrictions on the use of mobiles. Switch the cellular terminal or mobile off, if instructed to do so by the guidelines posted in sensitive areas. Medical equipment may be sensitive to RF energy. The operation of cardiac pacemakers, other implanted medical equipment and hearing aids can be affected by interference from cellular terminals or mobiles placed close to the device. If in doubt about potential danger, contact the physician or the manufacturer of the device to verify that the equipment is properly shielded. Pacemaker patients are advised to keep their hand-held mobile away from the pacemaker, while it is on.</p>
	<p>Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it cannot be switched on inadvertently. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communications systems. Failure to observe these instructions may lead to the suspension or denial of cellular services to the offender, legal action, or both.</p>
	<p>Do not operate the cellular terminal or mobile in the presence of flammable gases or fumes. Switch off the cellular terminal when you are near petrol stations, fuel depots, chemical plants or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmospheres can constitute a safety hazard.</p>
	<p>Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. Remember that interference can occur if it is used close to TV sets, radios, computers or inadequately shielded equipment. Follow any special regulations and always switch off the cellular terminal or mobile wherever forbidden, or when you suspect that it may cause interference or danger.</p>
	<p>Road safety comes first! Do not use a hand-held cellular terminal or mobile when driving a vehicle, unless it is securely mounted in a holder for speakerphone operation. Before making a call with a hand-held terminal or mobile, park the vehicle. Speakerphones must be installed by qualified personnel. Faulty installation or operation can constitute a safety hazard.</p>
	<p><b>IMPORTANT!</b> Cellular terminals or mobiles operate using radio signals and cellular networks. Because of this, connection cannot be guaranteed at all times under all conditions. Therefore, you should never rely solely upon any wireless device for essential communications, for example emergency calls. Remember, in order to make or receive calls, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength. Some networks do not allow for emergency calls if certain network services or phone features are in use (e.g. lock functions, fixed dialing etc.). You may need to deactivate those features before you can make an emergency call. Some networks require that a valid SIM card be properly inserted in the cellular terminal or mobile.</p>

## 7 Appendix

### 7.1 List of Parts and Accessories

**Table 28:** List of parts and accessories

Description	Supplier	Ordering information
EHS5-E/EHS5-US	Thales	Standard module Thales IMEI: Packaging unit (ordering) number: L30960-N2800-A400 (EHS5-E) L30960-N2810-A400 (EHS5-US) Module label number: S30960-S2800-A400-1 (EHS5-E) <sup>1</sup> S30960-S2810-A400-1 (EHS5-US) <sup>1</sup>
DSB75 Evaluation Kit	Thales	Ordering number: L36880-N8811-A100
DSB Mini Compact Evaluation Board	Thales	Ordering number: L30960-N0030-A100
Starter Kit B80	Thales	Ordering Number L30960-N0040-A100
Multi-Adapter R1 for mounting EHS5-E/EHS5-US evaluation modules onto DSB75	Thales	Ordering number: L30960-N0010-A100
Approval adapter for mounting EHS5-E/EHS5-US evaluation modules onto DSB75	Thales	Ordering number: L30960-N2301-A100
Evaluation Module	Thales	Ordering number: L30960-N2801-A400 (EHS5-E) Ordering number: L30960-N2811-A400 (EHS5-US)
Votronic Handset	VOTRONIC / Thales	Votronic ordering number: HH-SI-30.3/V1.1/0 VOTRONIC Entwicklungs- und Produktionsgesellschaft für elektronische Geräte mbH Saarbrücker Str. 8 66386 St. Ingbert Germany Phone: +49-(0)6 89 4 / 92 55-0 Fax: +49-(0)6 89 4 / 92 55-88 Email: <a href="mailto:contact@votronic.com">contact@votronic.com</a>
SIM card holder incl. push button ejector and slide-in tray	Molex	Ordering numbers: 91228 91236 Sales contacts are listed in <a href="#">Table 29</a> .

1. Note: At the discretion of Thales, module label information can either be laser engraved on the module's shielding or be printed on a label adhered to the module's shielding.



## 7.1 List of Parts and Accessories

**Table 29:** Molex sales contacts (subject to change)

<p>Molex For further information please click: <a href="http://www.molex.com">http://www.molex.com</a></p>	<p>Molex Deutschland GmbH Otto-Hahn-Str. 1b 69190 Walldorf Germany Phone: +49-6227-3091-0 Fax: +49-6227-3091-8100 Email: <a href="mailto:mxgermany@molex.com">mxgermany@molex.com</a></p>	<p>American Headquarters Lisle, Illinois 60532 U.S.A. Phone: +1-800-78MOLEX Fax: +1-630-969-1352</p>
<p>Molex China Distributors Beijing, Room 1311, Tower B, COFCO Plaza No. 8, Jian Guo Men Nei Street, 100005 Beijing P.R. China Phone: +86-10-6526-9628 Fax: +86-10-6526-9730</p>	<p>Molex Singapore Pte. Ltd. 110, International Road Jurong Town, Singapore 629174  Phone: +65-6-268-6868 Fax: +65-6-265-6044</p>	<p>Molex Japan Co. Ltd. 1-5-4 Fukami-Higashi, Yamato-City, Kanagawa, 242-8585 Japan  Phone: +81-46-265-2325 Fax: +81-46-265-2365</p>



**THALES DIS AIS Deutschland GmbH**  
Werinherstrasse 81  
81541 Munich  
Germany

**THALES**