



WIRE CONNECTING ORDER: Connect to FM11XX, GROUND, +12V, SET THE PROGRAM NUMBER FOR THE GIVEN VEHICLE, CONNECT CAN-L AND CAN-H.

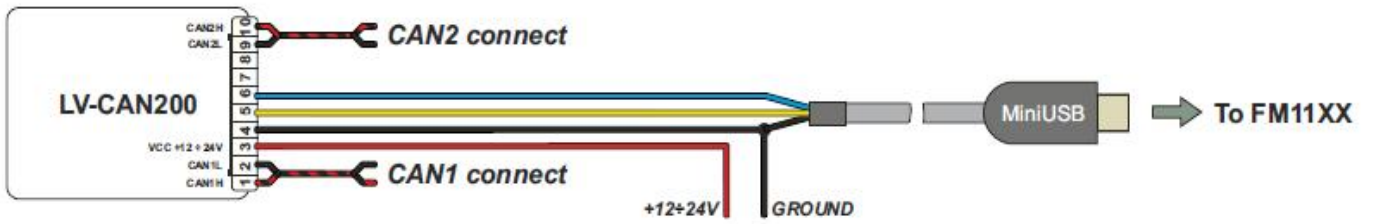

CAN1
 green connector 12PIN
 yellow pin2 CANH
 green pin1 CANL
 green connector 12PIN

CAN2
 green connector 12PIN
 green pin3 CANL
 orange pin4 CANH
 green connector 12PIN

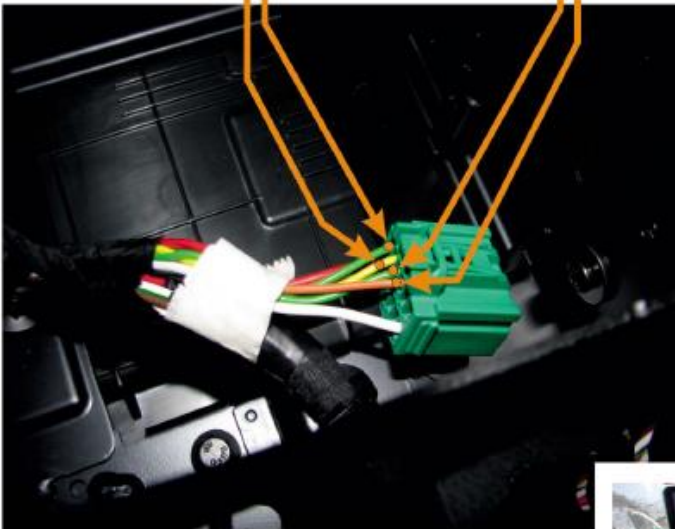

UNDER THE FUSE BOX

