GIGABIT SWITCH

Quick Installation Guide


Introduction

INDUSTRIAL

The IGS-9084GP series is a managed Ethernet switch with 8x10/100/1000Base-T(X) ports and 4x100/1000Base-X SFP ports. With complete support of Ethernet redundancy protocols, O-Ring (recovery time < 30ms for over 250 connected devices) and MSTP (RSTP/STP compatible) can protect your mission-critical applications from network interruptions or temporary malfunctions. With a wide operating temperature from -40~70°C, the device can be managed centrally via ORing's proprietary Open-Vision platform as well as via Web-based interfaces, Telnet and console (CLI).

Package Contents

The device is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance

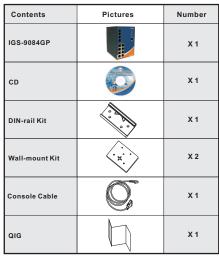

Preparation

Before you begin installing the switch, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.

Safety & Warnings

Elevated Operating Ambient: If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.

Reduced Air Flow: Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

Mechanical Loading: Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.


Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.


IGS-9084GP

Dimension


Panel Layouts

Front View

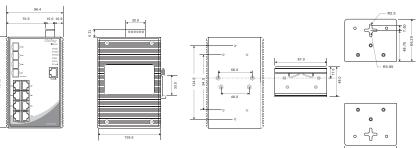

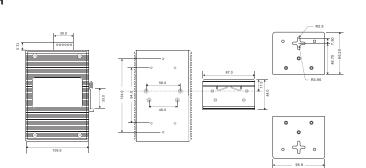

8. Link/action LED for Gigabit Ethernet ports 9. Duplex LED for Gigabit Ethernet ports

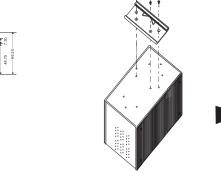

Installation

DIN-rail Installation

the middle of the back panel

clicks into the rail firmly.

Wall-mounting

Step 1: Screw the two pieces of wall-mount kits onto both ends of the rear panel of the switch. A total of six screws are required, as shown below. Step 2: Use the switch, with wall mount plates attached, as a guide to mark the correct locations of the four screws.


Industrial Managed Gigabit Switch

Step 1: Slant the switch and screw the Din-rail kit onto the back of the switch, right in

Step 2: Slide the switch onto a DIN-rail from the Din-rail kit and make sure the switch

Step 3: Insert a screw head through the large parts of the keyhole-shaped apertures,

and then slide the switch downwards. Tighten the screws for added stability

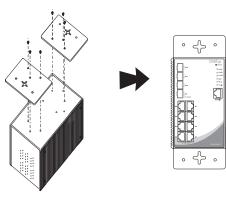


Network Connection

.....


The switch provides standard Ethernet ports. According to the link type, the switch uses CAT 3,4,5,5e UTP cables to connect to any other network devices (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications

Cable Types and Specifications:

Cable	Туре	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45
1000BASE-T	Cat. 5 / Cat. 5e 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

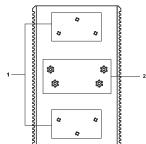

Rear View

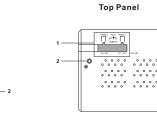

1. Power LED

2. PWR1 LED

3. PWR2 LED

11. SFP port

4. R.M. status LED 5. Ring status LED 6. Faulty relay indicator 7. Console port

10. Gigabit Ethernet ports

12. Link/action LED for SFP port

1. Wall-mount screw holes

1. Terminal blocks: PWR1. PWR2 (12-48V DC), Relay

2. Ground wire.

2. Din-rail screw holes

QIG IGS-9084GP

1907-2-29-IGS9084GP-1.0

.....

PRINTED ON RECYCLED PAPER

Quick Installation Guide

IGS-9084GP

Industrial Managed Gigabit Switch

Switch latency: 7 us Switch bandwidth: 24Gbps Max. Number of Available VLANs: 256

Device Binding security featu

Up to 9.6K Bytes

1odbus TCP

11 watts max.

Present

IP-30

1190 g

40 to 85°C (-40 to 185°F)

-40 to 70°C (-40 to 158°F)

FCC Part 15, CISPR (EN55022) class A

5% to 95% Non-conder

IEC60068-2-27

IEC60068-2-32

IEC60068-2-6 EN60950-1

IGMP multicast groups: 128 for each VLAN Port rate limiting: User Define

Device Binding security feature Enable/disable ports, MAC based port security Port based network access control (802.1x) VLAN (802.1q) to segregate and secure network traffic Radius centralized password management SMMPV3 encrypted authentication and access security Https / SSH enhance network security

Quality of Service (802.1p) for real-time traffic VLAN (802.1Q) with VLAN tagging and GVRP supp IGMP Snooping for multicast filtering IP-based bandwidt management

O-Ring, Open-Ring, O-chain, STP, RSTP, MSTP Syslog server / client to record and view events Include SMTP for event warning notification via email Event selection support

Dual DC inputs. 12-48VDC on 6-pin terminal block

96.4 (W) x 105.5(D) x 154(H) mm (3.8 x 4.15 x 6.06 inch

IP-Dased Danumuch management Application-based QoS management DOS/DDOS auto prevention Port configuration, status, statistics, monitoring, security DHCP Server / Client support SMTP Client

STP/RSTP/MSTP (IEEE 802.1D/w/s) Redundant Ring (O-Ring) with recovery time less than 10ms over 250 units

RS-232 in RJ45 connector with console cable. Baud rate setting: 115200bps, 8, N,

EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge),EN61000-4-6 (CS), EN61000-4-8, EN61000-4

tch Propertie

umbo frame

ecurity Features

oftware Features

twork Redundancy

arning / Monitoring Syster

-232 Serial Console Port

er consumption(Typ.)

on (W x D x H

rating Tempera

ating Humidit

hock

atory Appro

erload current protection

For pin assignments for different types of cables, please refer to the following

tal	010	es	ί.

GIGABIT

SWITCH

INDUSTRIAL

1000Base-T RJ-45 Port		
Pin Number	Assignment	
1	BI_DA+	
2	BI_DA-	
3	BI_DB+	
4	BI_DC+	
5	BI_DC-	
6	BI_DB-	
7	BI_DD+	
8	BI_DD-	

10/100 Base-T(X) MDI/MDI-X			1000Base-T MDI/MDI-X		
Pin Number	MDI port	MDI-X port	Pin Number	MDI port	MDI-X po
1	TD+(transmit)	RD+(receive)	1	BI_DA+	BI_DB+
2	TD-(transmit)	RD-(receive)	2	BI_DA-	BI_DB-
3	RD+(receive)	TD+(transmit)	3	BI_DB+	BI_DA+
4	Not used	Not used	4	BI_DC+	BI_DD+
5	Not used	Not used	5	BI_DC-	BI_DD-
6	RD-(receive)	TD-(transmit)	6	BI_DB-	BI_DA-
7	Not used	Not used	7	BI_DD+	BI_DC+
8	Not used	Not used	8	BI_DD-	BI_DC-

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

Console Port Pin Definition

To connect the console port to an external management device, you need an RJ-45 to DB-9 cable, which is also supplied in the package. Below is the console port pin assignment information

PC (male) pin assignment	RS-232 with DB9 (female) pin assignment (RJ45-DB9 cable)	RJ45 pin assignment
PIN#2 RxD	PIN#2 RxD	PIN#2 RxD
PIN#3 TxD	PIN#3 TxD	PIN#3 TxD
PIN#5 GND	PIN#5 GND	PIN#5 GND

Wiring

Power inputs

The switch supports dual redundant power supplies, Power Supply1 (PWR1) and Power Supply 2 (PWR2). The connections for PWR1, PWR2 and the RELAY are located on the terminal block. STEP 1: Insert the negative/positive wires into the V-/V+ terminals, respectively.

└ ♪ 1A@24V

STEP 2: To keep the DC wires from pulling loose, use a small flatblade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector

Relay contact

The two sets of relay contacts of the 6-pin terminal block connector are used to detect userconfigured events. The two wires attached to the fault contacts form an open circuit when a user-configured when an event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

Grounding

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screws to the grounding surface prior to connecting devices.

Configurations

After installing the switch, the green power LED should turn on. Please refer to the following tablet for LED indication.

LED	Color	Status	Description	
PWR	Green	On	DC power on	
PWR1	Green	On	DC power module 1 activated	
PWR2	Green	On	DC power module 2 activated	
R.M	Green	On	Ring Master	
		On	Ring enabled	
Ring	g Green	Blinking	Ring structure is broken (i.e. part of the ring is disconnected)	
Fault	Amber	On	Faulty relay (power failure or port disconnected)	
10/100/1000	Base-T(X) Gigabit Etl	nemet ports		
INW/ACT	Green	On	Port link at 1000Mbps	
LNK/ACT with speed	Amber	On	Port link at 10/100Mbps	
with speed	Green/Amber	Blinking	Data transmitted	
SFP				
LNK/ACT	Green	On	Port link up	
LINK/ACT	Gleen	Blinking	Data transmitted	

Follow the steps to set up the switch:

1. Launch the Internet Explorer and type in IP address of the switch. The default static IP address is 192.168.10.1



2. Log in with default user name and password (both are admin). After logging in, you should see the following screen. For more information on configurations, please refer to the user manual. For information on operating the switch using ORing's Open-Vision management utility, please go to ORing website.

	work Password issword to connect to: PC-SWRD19
	admin
	Domain: ORING
	Remember my credentials
🔞 Lo	gon failure: unknown user name or bad password.

Resetting

To reboot the switch, press the Reset button for 2-3 seconds. To restore the switch configurations back to the factory defaults, press the Reset button for 5 seconds.

Specifications

